


PUSH BUTTON URINAL FLUSH VALVES

Installation & Adjustment Information

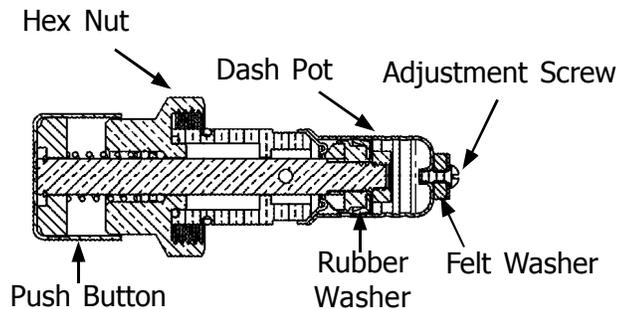

To Install: Remove old flush valve assembly and make sure the valve is free from debris or defects. Install flush valve into the assembly and tighten. Tighten to 90 in/lbs pressure.

To Adjust: Loosen Hex Nut below push button to remove unit from body. If Dash Pot does not come out with rest of the assembly, remove with finger.

To increase water flow, tighten the screw at the bottom of the dashpot.


To reduce flow, loosen screw. If the valve shuts off too slowly, remove unit and dash pot, clean and use plumbers grease on rubber washer under dashpot to prevent sticking. If problem persists, replace felt washer and reset for proper flow. Depending upon individual conditions, the screw can be set loose enough to allow felt washer to move freely.



www.PRIER.com
800-362-1466

PUSH BUTTON URINAL FLUSH VALVES

Installation & Adjustment Information

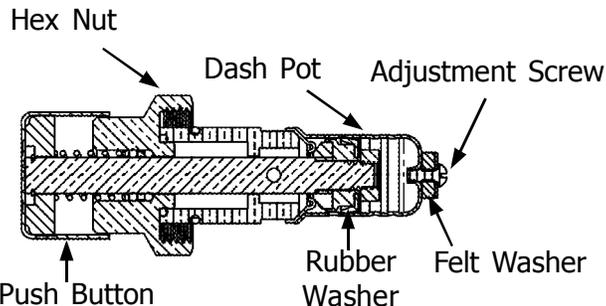

To Install: Remove old flush valve assembly and make sure the valve is free from debris or defects. Install flush valve into the assembly and tighten. Tighten to 90 in/lbs pressure.

To Adjust: Loosen Hex Nut below push button to remove unit from body. If Dash Pot does not come out with rest of the assembly, remove with finger.

To increase water flow, tighten the screw at the bottom of the dashpot.


To reduce flow, loosen screw. If the valve shuts off too slowly, remove unit and dash pot, clean and use plumbers grease on rubber washer under dashpot to prevent sticking. If problem persists, replace felt washer and reset for proper flow. Depending upon individual conditions, the screw can be set loose enough to allow felt washer to move freely.



www.PRIER.com
800-362-1466

PUSH BUTTON URINAL FLUSH VALVES

Installation & Adjustment Information

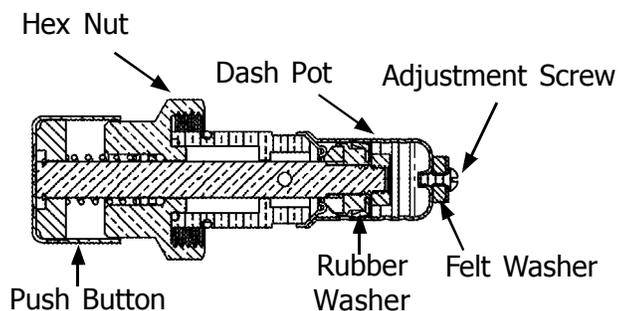

To Install: Remove old flush valve assembly and make sure the valve is free from debris or defects. Install flush valve into the assembly and tighten. Tighten to 90 in/lbs pressure.

To Adjust: Loosen Hex Nut below push button to remove unit from body. If Dash Pot does not come out with rest of the assembly, remove with finger.

To increase water flow, tighten the screw at the bottom of the dashpot.


To reduce flow, loosen screw. If the valve shuts off too slowly, remove unit and dash pot, clean and use plumbers grease on rubber washer under dashpot to prevent sticking. If problem persists, replace felt washer and reset for proper flow. Depending upon individual conditions, the screw can be set loose enough to allow felt washer to move freely.



www.PRIER.com
800-362-1466

PUSH BUTTON URINAL FLUSH VALVES

Installation & Adjustment Information

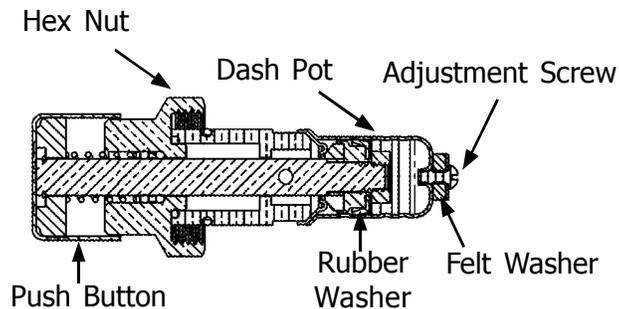

To Install: Remove old flush valve assembly and make sure the valve is free from debris or defects. Install flush valve into the assembly and tighten. Tighten to 90 in/lbs pressure.

To Adjust: Loosen Hex Nut below push button to remove unit from body. If Dash Pot does not come out with rest of the assembly, remove with finger.

To increase water flow, tighten the screw at the bottom of the dashpot.

To reduce flow, loosen screw. If the valve shuts off too slowly, remove unit and dash pot, clean and use plumbers grease on rubber washer under dashpot to prevent sticking. If problem persists, replace felt washer and reset for proper flow. Depending upon individual conditions, the screw can be set loose enough to allow felt washer to move freely.



www.PRIER.com
800-362-1466