



Parts List for DCR015 Type 1

Item Number	Part Number	Description	Qty Required
1	5140127-25	LEFT FRAME	1
2	5140127-26	RIGHT FRAME	1
3	5140127-27	FRONT CABINET ASSEM.	1
4	5140127-28	BUTTON COVER	1
5	5140127-29	VOLUME KNOB	1
6	5140127-30	SPEAKER GRILLE	1
7	5140127-31	SPEAKER GRILLE	1
8	5140127-32	PCB ASSEMBLY	1
9	5140127-33	PCB ASSEMBLY	1
10	5140127-34	SPEAKER	2
11	5140127-35	HANDLE	1
12	5140127-36	ROLL CAGE-LEFT	1
13	5140127-37	ROLL CAGE-RIGHT	1
14	5140127-38	CORD WRAP	1
15	5140127-39	SHOCK MOUNT	1
16	5140127-40	SHOCK MOUNT	1
17	5140127-41	POWER PCB ASSY	1
18	5140127-42	PCB ASSEMBLY	1
19	5140127-43	PCB ASSEMBLY	1
20	5140127-44	PCB ASSEMBLY	1
21	5140127-45	TRANSFORMER	1
22	5140127-46	ANTENNA	1
23	5140127-47	PCB ASSEMBLY	1
24	5140127-48	PCB ASSEMBLY	1
25	5140127-49	REAR CABINET	1
26	5140127-50	BATTERY DOOR KIT	1
27	5140127-51	BATTERY HOLDER	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.

Parts List for DCR015 Type 1

Item Number	Part Number	Description	Qty Required
28	5140127-52	DOOR ASSEMBLY	1
29	5140127-53	DOOR ASSEMBLY	1
30	5140127-54	CORD KIT	1
31	5140127-94	COVER	1
32	5140127-95	BRACKET KIT	1
33	5140127-96	BRACKET KIT	1
34	5140127-97	ACCESSORY TRAY	1
35	5140127-98	OUTLET (120V)	1
36	5140127-99	SPEAKER	2
856	5140127-14	CABLE ASSEMBLY	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.