

MONTERREY

CENTERSET LAVATORY FAUCETS WITH GOOSENECK SPOUT

Thank you for selecting American-Standard... the benchmark of fine quality for over 100 years.

To ensure that your installation proceeds smoothly—please read these instructions carefully before you begin.

Installation Instructions

BODY

7500 Series 7501 Series 7502 Series 7545 Series



Certified to comply with ANSI A112.18.1M 60185 Rev. 1.6

9

8

10

12

/2" O.D. SLIP

HH

CAUTION

Turn off water at main supply.


- Asesemble GASKET (1) to SHANKS (2) and insert FAUCET SHANKS through holes of SINK.
- Assemble RUBBER (3) and BRASS WASHERS (4), and LOCKNUTS (5) from underside of SINK. Drop UPPER LIFT ROD (6) through hole in BODY (models 7501 only), align BODY as far forward as possible and secure position by tightening LOCKNUTS (5).
- Connect the HOT water supply to the left SHANK and the COLD water supply to the right SHANK using sealant, appropriate connectors, and COUPLING NUTS (7).


To change spout to a swivel spout: (7500, 7501 & 7502)

- Unscrew SPOUT NUT (8) and remove SPOUT (9).
- Take SPOUT CLIP (10) off SPOUT (9) and remove RUBBER RING (11).
- Replace RUBBER RING (11) with seperate PLASTIC RING (12) packed with faucet.
- Put SPOUT CLIP (10) on SPOUT.
- Reassemble SPOUT (9) to BODY.

GRID DRAIN ASSEMBLY (Model 7502 only)


- Apply a bead of PUTTY around underside of DRAIN PLUG FLANGE (1). Insert DRAIN PLUG (2) into SINK drain hole.
- Hold DRAIN PLUG (2) to prevent turning and assemble GASKET (3), WASHER (4) and LOCKNUT (5) from underneath sink.
- Insert threaded end of TAILPIECE (6) into lower end of DRAIN PLUG (2). Connect other end to trap.

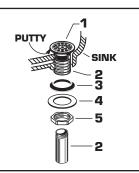

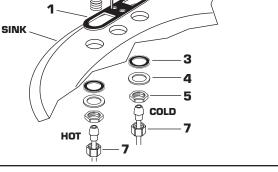


3 INSTALL POP-UP DRAIN (Model 7501 only)

- Push TAILPIECE (1) down into TRAP (threaded end up).
- Thread LOCKNUT (2), WASHER (3) and GASKET (4) onto DRAIN BODY (5).
- Apply a bead of PUTTY to underside of FLANGE (6).
- Feed DRAIN BODY (5) up through SINK and thread FLANGE (6) fully onto BODY (5).
- Tighten LOCKNUT (2) firmly, keeping the PIVOT ROD (7) pointed towards the back of the SINK.
- Drop STOPPER (8) into DRAIN BODY (5).
- Pull TAILPIECE (1) up and thread tightly into DRAIN BODY (5).
- Position EXTENSION ROD (9) onto POP-UP ROD (10) and tighten THUMBSCREW (11).

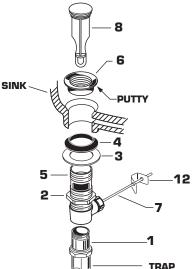


- Remove one end of CLIP (12) from PIVOT ROD (7) by squeezing ends together while sliding.
- Insert PIVOT ROD (7) into second or third hole in EXTENSION (9) and reassemble CLIP (12). (EXTENSION may need to be bent.)
- Adjust STOPPER (8) height by repositioning EXTENSION and tightening THUMBSCREW (12).

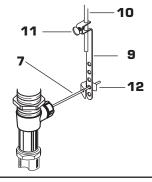


4. TEST INSTALLED FAUCET

- Remove AERATOR.
- With handle in OFF position, turn on water supplies and check all connections for leaks.
- Operate both handles to flush water lines thoroughly. Check spout mounting and hose connections for leaks.
- Operate LIFT ROD and check DRAIN for leaks.
- Turn handles into OFF position and replace AERATOR.

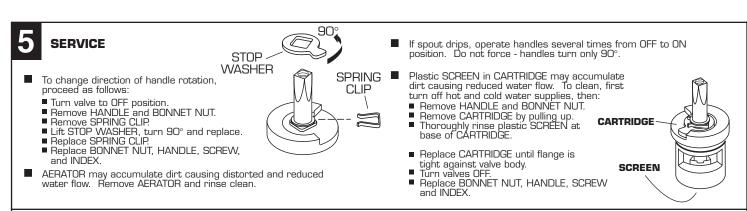

4merican Standard

7500 Series 7502 Series 7501 Series 7545 Series

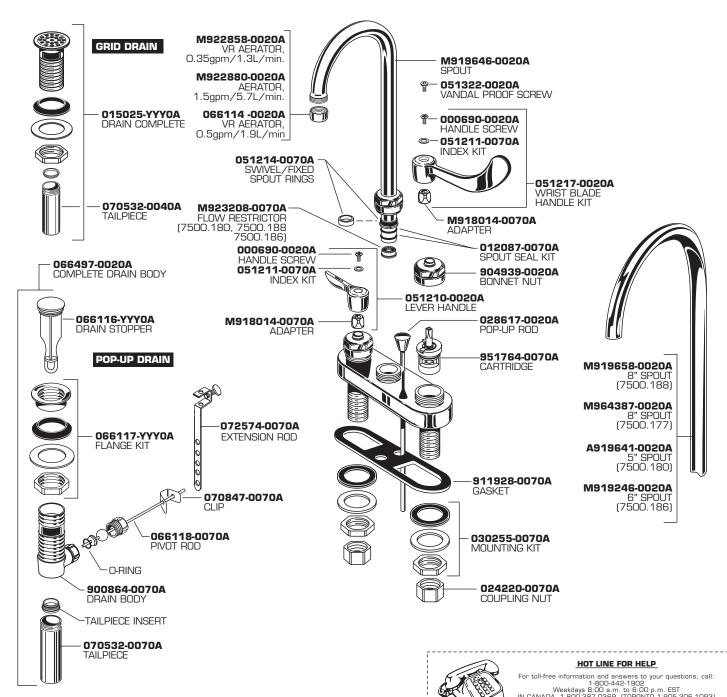

For toll-free information and answers to your questions, call: 1-800-442-1902
Weekdays 8:00 a.m. to 6:00 p.m. EST
IN CANADA 1-800-387-0369 [TORONTO 1-905-306-1093]
Weekdays 8:00 m. to 7:00 p.m. EST
IN MEXICO 01-800-893-1200

Product names listed herein are trademarks of American Standard Inc. © AS America, Inc. 2008