




SERVICE PARTS LIST


BULLETIN NO.
54-49-0300

SPECIFY CATALOG NO. AND SERIAL NO. WHEN ORDERING PARTS		REVISED BULLETIN	DATE
M18™ Radio Charger			Dec. 2013
CATALOG NO.	2792-20	SERIAL NUMBER	F69A
			WIRING INSTRUCTION SEE PAGE 4

Screws behind Left & Right Handles (8x)

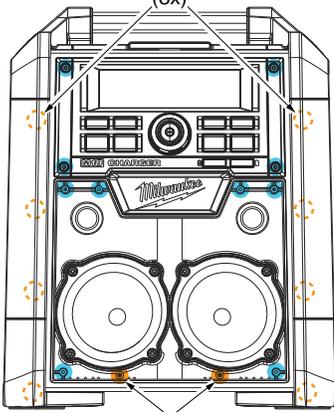


Speaker Grill removed to show these screws

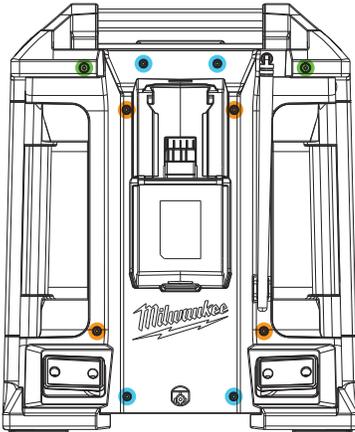


FRONT VIEW


BACK VIEW

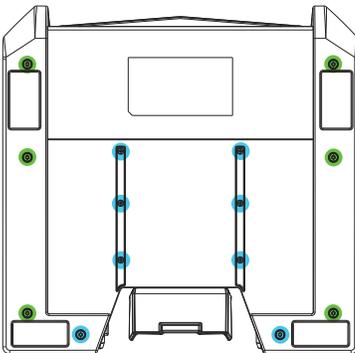

BOTTOM VIEW

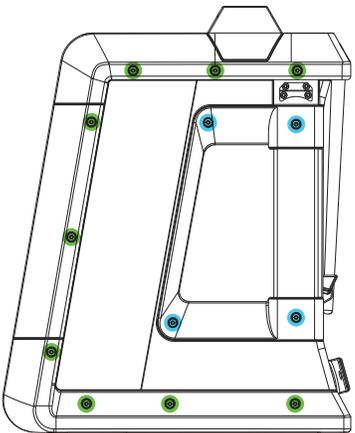


SIDE VIEW

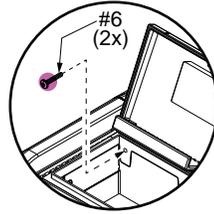

Right Handle

#1 (6x)

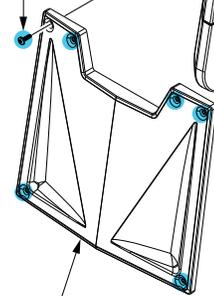


Speaker Grill

NOTE:
All fasteners indicated must be removed to gain access to the interior of the unit and servicing of the Charger and PCBA

NOTE:

The same series of screws that are used for the Left Handle are used on the Right Handle

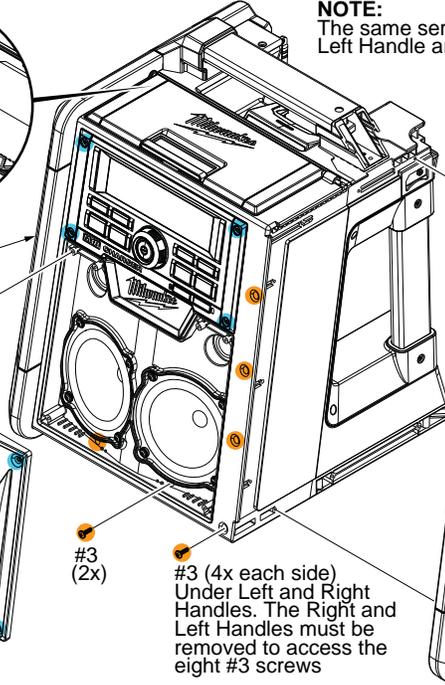

#2 (1x each side) on back of Left and Right Handles

#2 (9x each side) on side of Left and Right Handles

Left Handle

#3 (2x)


#3 (4x each side) Under Left and Right Handles. The Right and Left Handles must be removed to access the eight #3 screws

#1 (1x each side) on bottom of Left and Right Handles

#2 (3x each side) on bottom of Left and Right Handles

Rear Cabinet

Front Cabinet

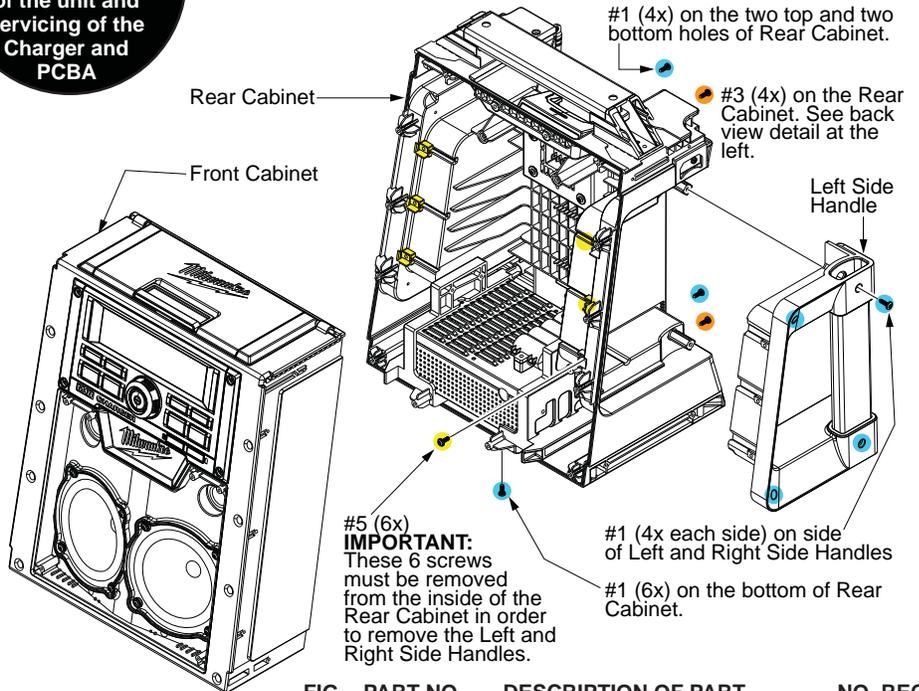

#1 (4x) on the two top and two bottom holes of Rear Cabinet.

#3 (4x) on the Rear Cabinet. See back view detail at the left.

Left Side Handle

#5 (6x) **IMPORTANT:** These 6 screws must be removed from the inside of the Rear Cabinet in order to remove the Left and Right Side Handles.

#1 (4x each side) on side of Left and Right Side Handles
#1 (6x) on the bottom of Rear Cabinet.

FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
1	05-88-1735	M3 x 12mm Pan Hd. Hex	(30)
2	05-88-1750	M3 x 16mm Pan Hd. Hex	(20)
3	05-88-1741	M3 x 12mm Pan Hd. Phillips	(14)
5	05-88-1745	M3 x 10mm Pan Hd. Washer Phillips	(6)
6	05-88-1760	M3 x 25mm Pan Hd. Hex	(2)