



ADJUSTMENT INSTRUCTIONS

1. The default setting for the Universal Adjustable flapper is preset at (9) for larger tanks. Start with the dial in the default setting and flush your toilet.
2. If your toilet is able to flush, adjust the dial down to the next setting, number (8) and flush again.
3. Continue to adjust dial down one setting until your toilet is unable to flush properly. When the flapper dial is on a setting that does not allow for a proper flush, adjust the dial up one setting.

HINT: The higher the number set in front of the chain connection – the longer the flapper will stay open. Turn clockwise for greater flush volume. Turn counterclockwise for lower flush volume.

WARNING

DO NOT USE IN-TANK DROP-IN TOILET BOWL CLEANERS CONTAINING BLEACH OR CHLORINE. Use of such products will: (1) RESULT IN DAMAGE to tank components and MAY CAUSE FLOODING and PROPERTY DAMAGE and (2) VOID FLUIDMASTER WARRANTY. Fluidmaster Flush 'n Sparkle® Toilet Bowl Cleaning System is recommended for those choosing to use in-tank bowl cleaners and WILL NOT VOID the FLUIDMASTER WARRANTY because it will not damage the components. DO NOT overtighten nuts or tank/bowl may crack. Always use quality Fluidmaster parts when installing or repairing. Fluidmaster will not be responsible or liable for use of non-Fluidmaster parts during installation or repair.

