

Battery Replacement:

Disconnect the solenoid wire connector while upgrading batteries. (Black & Red)

Soft RESET for Electronics:

1. Remove the battery cover from the battery box.
2. Wait for two (2) minutes.
3. Reassemble.
4. Hold target in front of sensor eye (light should blink once followed by a double blink over a 5 second period).
5. Solenoid will activate when target leaves view.

* If soft RESET does not work, a Hard RESET may be required. (over)



Hard RESET for Electronics:

1. Remove battery cover from battery box. Ensure batteries are fresh.
2. Place magnet on top surface of cover for 60 seconds then remove.
3. Reassemble battery case.
4. Place cover on valve.
5. Hold magnet on top of cover for 10 seconds (light will flash 10 times).
When light turns solid, remove magnet.
6. Stand in front of sensor eye about 20 inches away while sensor auto-calibrates to proper setting.
7. Lights in sensor eye will stop. Reassemble valve and secure cover with two screws provided.



1-800-997-3876

Magnet

FV427