

American Standard

# Installation Instructions

4771.732  
4771.732F15

## HAMPTON®

### TOP MOUNT KITCHEN FAUCETS

Thank you for selecting American-Standard...  
the benchmark of fine quality for over 100 years.

To ensure that your installation proceeds smoothly—  
please read these instructions carefully before you begin.



Certified to comply with ANSI A112.18.1M  
U.S. Patent No. 5,819,789  
M968145 REV. 1.4

#### Required Tools



Channel Locks



 
Adjustable Wrench



Plumbers' Putty or Caulking



Flat Blade Screwdriver



Phillips Screwdriver

# 1


#### INSTALL FAUCET

**CAUTION** Turn off hot and cold water  
supplies before beginning.

- Screw SPOUT (1) onto BODY (2).
- Place faucet in position on sink.
- Assemble and tighten LOCKNUTS (3) from underside of SINK.
- Connect the HOT water supply to the left SHANK and the COLD water supply to the right SHANK using sealant, appropriate connectors, and COUPLING NUTS (4).

#### TO INSTALL SPRAY:

- Unscrew SPRAY CAP (5).
- Place the HOLDER (6) into the appropriate mounting hole. Assemble the SPRAY HOLDER WING NUT (7) onto the shank of SPRAY HOLDER (6) from below and tighten.
- Feed SPRAY HOSE (8) through HOLDER (6) so SPRAY sits in HOLDER (6).
- From underneath sink, attach COUPLING NUT (9) of SPRAY HOSE (8) to HOSE SHANK (10). Tighten COUPLING NUT (9) firmly.

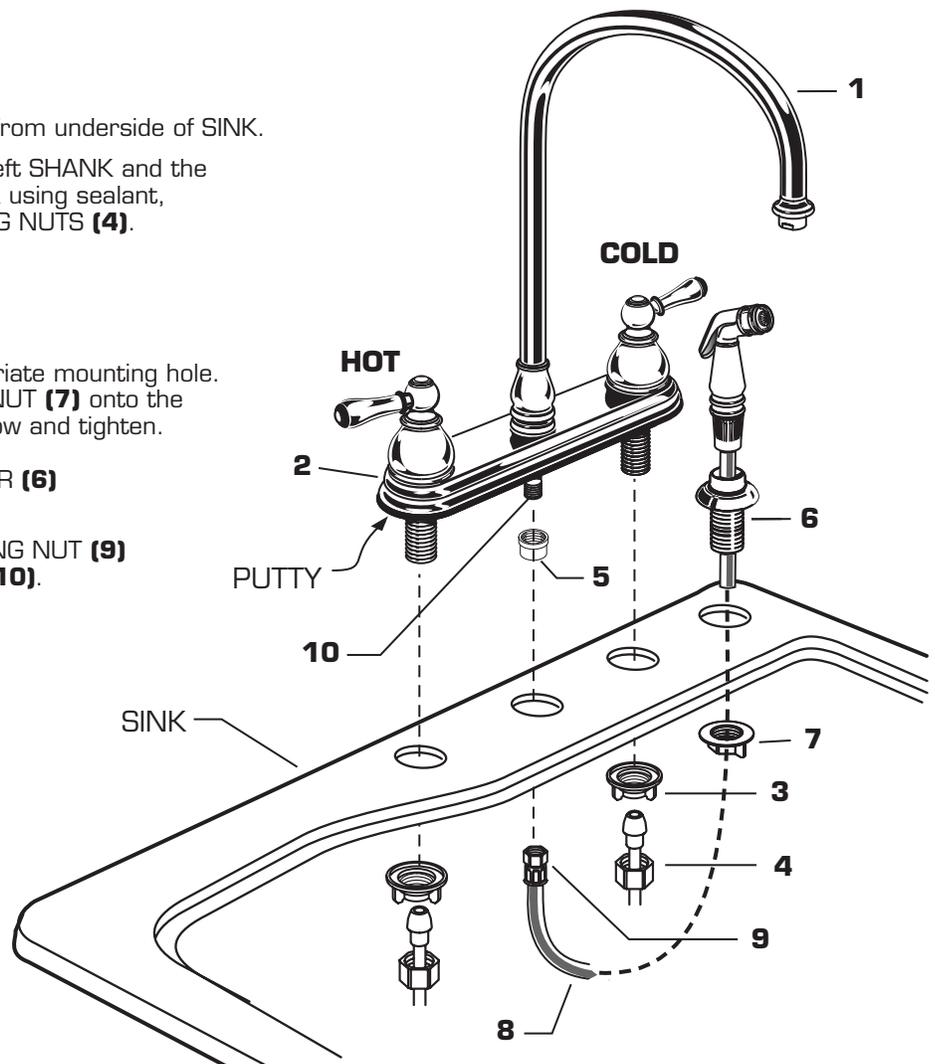

## 2


### TEST INSTALLED FAUCET

- Remove AERATOR.
- With handle in OFF position, turn on water supplies and check all connections for leaks.
- Operate both handles to flush water lines thoroughly.
- Operate SPRAY (if present).
- Turn handles into OFF position and replace AERATOR.


## 3

### SERVICE

- To change direction of handle rotation, proceed as follows:
  - Turn valve to OFF position.
  - Pull out INDEX CAP and remove HANDLE SCREW.
  - Pull off HANDLE BASE and remove ADAPTER.
  - Remove SPRING CLIP **(1)**.
  - Lift STOP WASHER **(2)**, turn 90° and replace.
  - Replace SPRING CLIP **(1)**.
  - Reinstall HANDLE.
- AERATOR may accumulate dirt causing distorted and reduced water flow. Remove AERATOR and rinse clean.
- If spout drips, operate handles several times from OFF to ON position. Do not force - handles turn only 90°.

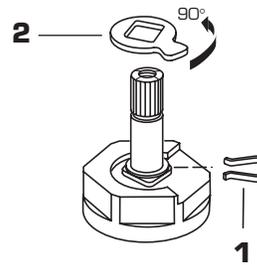

- Handle alignment.
- Check alignment, if not satisfactory aligned;
  - Push out ADAPTER carefully.
  - Turn ADAPTER either 45° or 90° so that male square on ADAPTER catches different female square in HANDLE BASE.
  - Assemble and tighten MOUNTING SCREW.
- Push INDEX CAP in top of HANDLE.

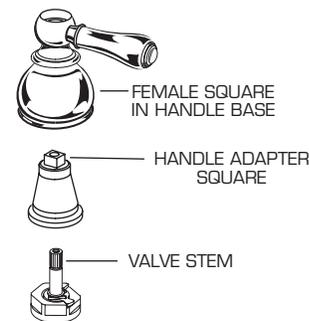

## 4

### CARE INSTRUCTIONS:

**DO: SIMPLY RINSE THE PRODUCT CLEAN WITH CLEAR WATER. DRY WITH A SOFT COTTON FLANNEL CLOTH.**  
**DO NOT: DO NOT CLEAN THE PRODUCT WITH SOAPS, ACID, POLISH, ABRASIVES, HARSH CLEANERS, OR A CLOTH WITH A COARSE SURFACE.**


**4771.732**  
**4771.732F15**

**060469-YYY220A (2.2 GPM)**  
SPOUT KITw/O-RING

**060469-YYY150A (1.5 GPM)**  
SPOUT KITw/O-RING

**066070-YYY0A**  
(2.2 GPM) AERATOR

**M922881-YYY0A**  
(1.5 GPM) AERATOR

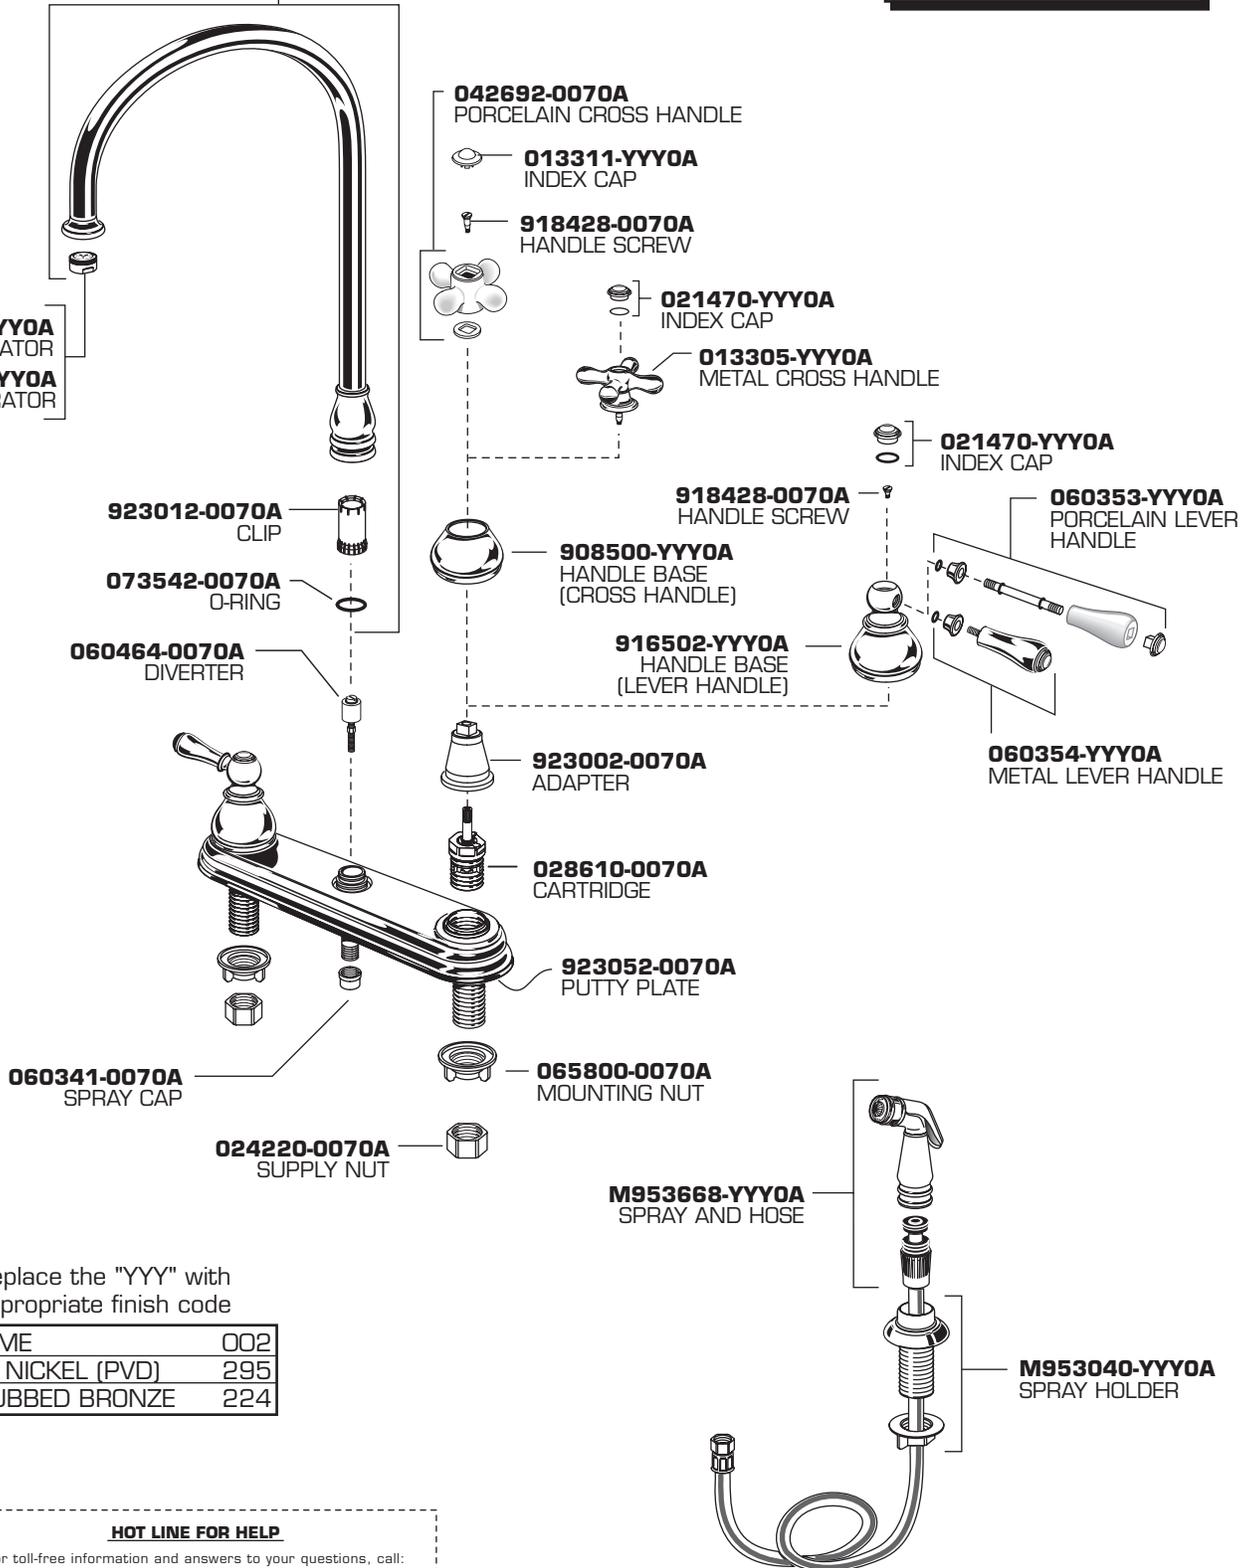

Replace the "YYY" with appropriate finish code

CHROME	002
SATIN NICKEL (PVD)	295
OIL RUBBED BRONZE	224

**HOT LINE FOR HELP**

For toll-free information and answers to your questions, call:  
1-800-442-1902  
Weekdays 9:00 a.m. to 6:00 p.m. EST  
IN CANADA 1-800-387-0389 (TORONTO 1-905-306-1093)  
Weekdays 8:00 a.m. to 7:00 p.m. EST  
IN MEXICO 01-800-839-12-00

