

SLUDGEPRO™ AND SLUDGEPRO™ XL SAMPLERS

Always wear Personal Protective Equipment like Safety Glasses, Gloves, and Work Boots.

SLUDGEPRO™ AND SLUDGEPRO™ XL OVERVIEW

Pollardwater SludgePro™ and SludgePro™ XL samplers are designed to handle tough, everyday measurement of settled solids in slurry. Accurate measurements allow plant operators to adjust the sludge return flow rate and sludge wasting rate in clarifiers for optimal plant operations.

All body components are constructed of polycarbonate (*similar to Lexan®*) providing maximum strength and rigidity even when full. Fittings are attached with solvent based adhesive to provide leak-proof joints which are far superior to riveted joints.

Both samplers come as three 5 foot sections that thread together to form a 15 foot sampler. Two additional middle sections can be added to extend the samplers up to 25 feet. The bottom sections are marked with waterproof tape in 1 foot increments.

Select the larger diameter, SludgePro XL sampler with removeable check valve for tougher jobs. Order samplers alone or as a kit which contains the sampler, case, cleaning brush and tape kit.



FEATURES AND BENEFITS FOR SLUDGEPRO™

- Economical and durable
- **Diameter:** 3/4"

SLUDGEPRO™ PRODUCTS

- **POLSP15** - SludgePro™ Sampler
- **PSP15KIT** - Sampler, Brush and Case

SLUDGEPRO™ REPLACEMENT ITEMS AND ACCESSORIES

- **PSP15TOP** - Replacement Top Section; 5'
- **PSP15MIDDLE** - Replacement Middle Section; 5'
- **PSP15BOTTOM** - Replacement Bottom Section; 5'
- **EB01291WA** - Cleaning Brush
- **PSP15CASE** - Carrying Case
- **PSPTAPE** - Tape Strip Package; 1-14'



SEE NEXT PAGE FOR SLUDGEPRO™ XL INFO

SLUDGEPRO™ XL SAMPLER

Always wear Personal Protective Equipment like Safety Glasses, Gloves, and Work Boots.

SLUDGEPRO™ XL OVERVIEW

Advanced check valve design provides the highest internal flow area of any core sampler on the market. This unique, high-flow check valve minimizes clogging in sludge with high solids content, and the threaded, 2-piece design disassembles for easy cleaning.

- **Diameter:** 1-1/4"

SLUDGEPRO™ XL PRODUCTS

- **PSPXL** - SludgePro™ XL Sampler
- **PSPXLKIT** - Sampler, Brush and Case

SLUDGEPRO™ XL REPLACEMENT ITEMS AND ACCESSORIES

- **PSPXL15TOP** - Replacement Top Section; 5'
- **PSPXL15MIDDLE** - Replacement Middle Section; 5'
- **PSPXL15BOTTOM** - Replacement Bottom Section; 5'
- **EB01361WA** - Cleaning Brush
- **PSPXLCASE** - Carrying Case
- **PSPTAPE** - Tape Strip Package; 1-14'
- **PSPXLBALLKIT** - Ball with Stem and O-Ring Kit

1ft	1ft	1ft	1ft
2ft	2ft	2ft	2ft
3ft	3ft	3ft	3ft
4ft	4ft	4ft	4ft
6ft	6ft	6ft	6ft
7ft	7ft	7ft	7ft
8ft	8ft	8ft	8ft
9ft	9ft	9ft	9ft
11ft	11ft	11ft	11ft
12ft	12ft	12ft	12ft
13ft	13ft	13ft	13ft
14ft	14ft	14ft	14ft


TAPE STRIP PACKAGE
(order separately)

INSTRUCTIONS FOR BOTH SAMPLERS

Slowly lower the sampler to the bottom of the tank, allowing fluid to fill the sampler. Once filled, tug on the rope handle to seat the valve. Lift the sampler vertically.

Read sludge level from the tape strips to determine depth. Clean unit with soapy water and the cleaning brush.

SludgePro XL™

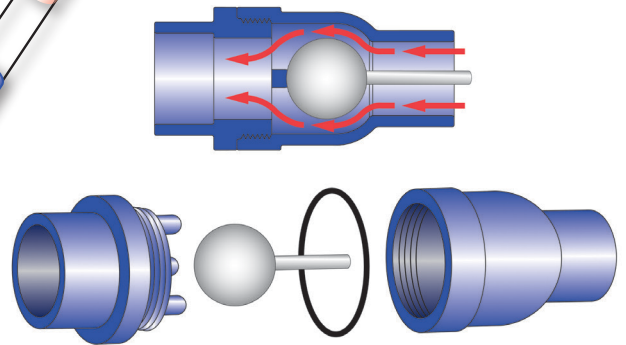

HIGH FLOW CHECK VALVE
DISASSEMBLES FOR EASY CLEANING

