


Fernco Flexible Coupling Installation


IN GROUND APPLICATION - For sewer, drain, waste and vent piping.




Loosen the stainless steel clamps. Do not remove clamps from coupling.

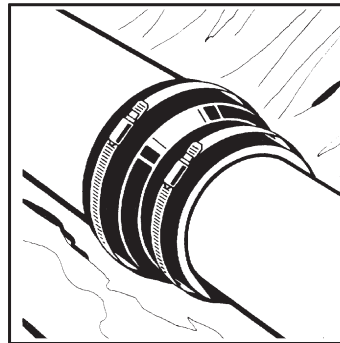


Slide coupling over one pipe end. Insert second pipe. Center pipe ends inside of coupling.

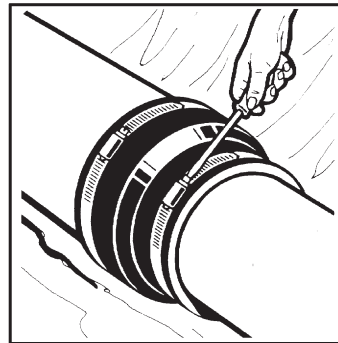


Tighten clamps to 60 inch-lbs. of torque.

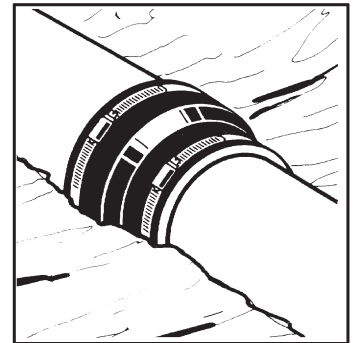


Pressure test* before backfilling or concealing joint. Bed and backfill properly.

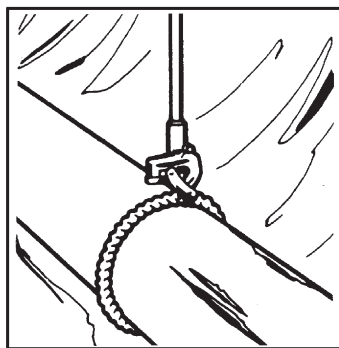


Fernco flexible couplings can be used to couple pipe at a break or lateral insertion.

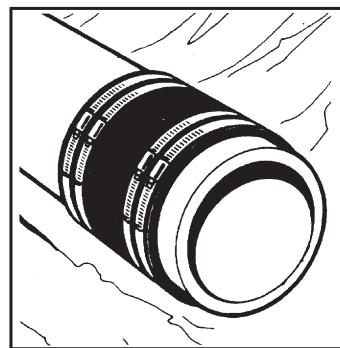

Cut and remove pipe section. Loosen clamps. Slide coupling assembly over one pipe exposing the pipe end.

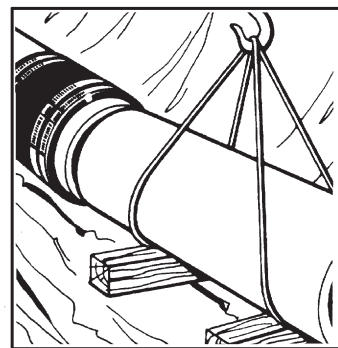

Insert new pipe or fitting then slide flexible coupling over new and old pipe ends.

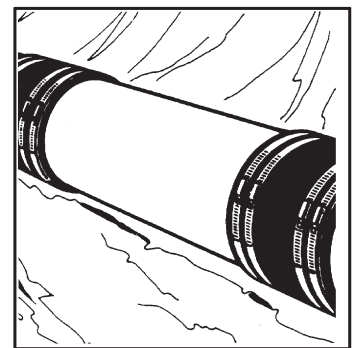

Tighten clamps to 60 inch-lbs. of torque. Pressure test* before backfilling or concealing joint. Bed and backfill properly.



*Maximum test pressure
4.3 PSI (29.6 KPA)


United States
PH: 810-653-9626
FX: 810-653-8714

www.fernco.com


Canada
PH: 519-332-6711
FX: 519-332-8610

Fernco Flexible Coupling Installation


IN HOUSE APPLICATION - For sewer, drain, waste and vent piping.

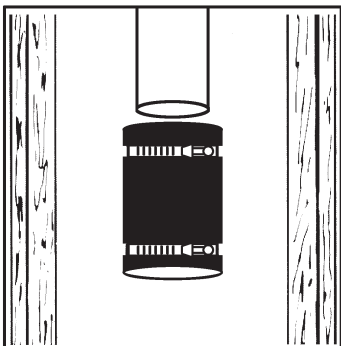


Loosen the stainless steel clamps. Do not remove clamps from coupling.

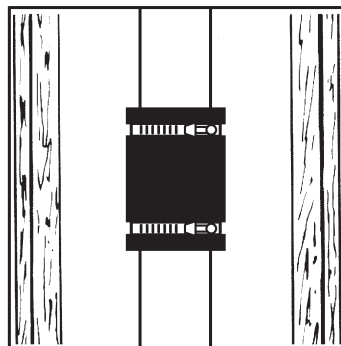

Slide coupling over one pipe end. Insert second pipe. Center pipe ends inside of coupling.

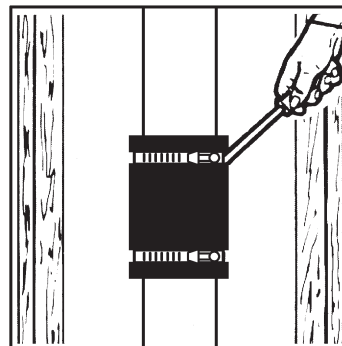

Tighten clamps to 60 inch-lbs. of torque.

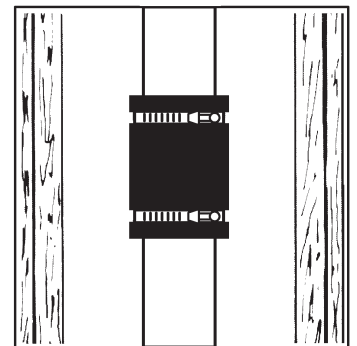

Support pipe and pressure test* for leaks before concealing joint.



*Maximum test pressure
4.3 PSI (29.6 KPA)

United States
PH: 810-653-9626
FX: 810-653-8714

www.fernco.com

Canada
PH: 519-332-6711
FX: 519-332-8610