



Dimensions (Inches)

Valve No.	Size (In.)	Order No.	Weight (lbs.)	
CSM-61T-M1	1	0856740	3/4	1.75
CSM-61S-M1	1	0856739	3/4	1.87

Note: (T) = Threaded, (S) = Solder

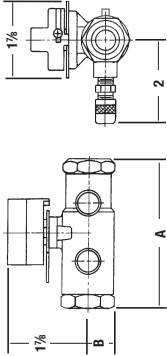

Valves conform to ANSI B16.18 and ANSI B16.22

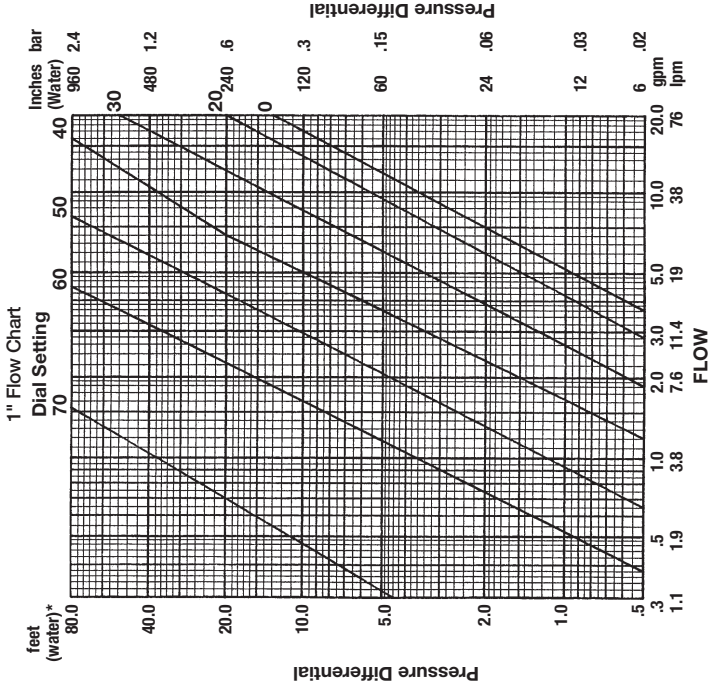

* To convert to kg/m² multiply feet of water by 304.8

*To convert to psi multiply feet of water by .4335

Limited Warranty: Watts Regulator Co. warrants each product to be free from defects in material and workmanship under normal usage for a period of one year from the date of original shipment. In the event of such defects within the warranty period, the Company will, at its option, replace or recondition the product without charge. THE WARRANTY SET FORTH HEREIN IS GIVEN EXPRESSLY AND IS THE ONLY WARRANTY GIVEN BY THE COMPANY WITH RESPECT TO THE PRODUCT. THE COMPANY MAKES NO OTHER WARRANTIES, EXPRESS OR IMPLIED. THE COMPANY HEREBY SPECIFICALLY DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO ONE YEAR FROM THE DATE OF ORIGINAL SHIPMENT. The remedy excluded in the first paragraph of this warranty shall constitute the sole and exclusive remedy for breach of warranty, and the Company shall not be responsible for any incidental, special or consequential damages, including without limitation, lost profits or the cost of repairing or replacing other property which is damaged if this product does not work properly, other costs resulting from labor charges, delays, vandalism, negligence, loading caused by foreign material, damage from adverse water conditions, chemical, or any other circumstances over which the Company has no control. Some States do not allow limitations on how long an implied warranty lasts, and some States do not allow the exclusion or limitation of incidental or consequential damages. Therefore the above limitations may not apply to you. This Limited Warranty gives you specific legal rights, and you may have other rights that vary from State to State. You should consult applicable state law to determine your rights. SO FAR AS IS CONSISTENT WITH APPLICABLE STATE LAW, ANY IMPLIED WARRANTIES THAT MAY NOT BE DISCLAIMED, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO ONE YEAR FROM THE DATE OF ORIGINAL SHIPMENT.

Series CSM-61M1 Flow Measurement/Balancing Valves

Sizes: 1/2", 3/4", 1" (15, 20, 25mm)

Installation Instructions

Watts Flow Measurement/Balancing Valves are available in the straightway pattern with threaded or solder end connections. All tapered pipe threads conform to FEDERAL SPECS H28. Values conform to ANSI B16.18 and ANSI B16.22. Maximum Pressure/Temperature Ratings: 300 psi (20.7 bar) - 250°F (121°C).

1. Install valve on return line of equipment to be balanced or as shown on the plans.
2. For maximum accuracy, the flow measurement valve should be located in an unrestricted straight pipe run so that no fittings (elbow, valve, tee, etc.) is closer to the measurement valve than 5 pipe diameters upstream and 2 pipe diameter downstream. If a balancing valve is located downstream from a circulation pump, allow a distance of ten (10) diameters between the pump and balancing valves.
3. Series CSM-61M1 flow measurement valves are bi-directional and should be installed to ensure ease of hooking up meter, adjusting setting, and enabling memory device. A 1/8" (3mm) NPT plugged port is installed on each measurement valve 1/2" - 1" (15-25mm) and can be used as a drain port if needed.
4. Solder end valves are designed to be soft soldered into lines without disassembly. Using a low temperature solder 400°F (204°C). Other solders such as 95/5 tin antimony (238°C) can be used, however, extreme caution must be used to prevent seat damage. Higher temperature solders will damage the seat material.
5. Remove indicator knob prior to soldering. Replace after soldering is completed.
6. Apply heat with flame directed **away** from the center of the valve body. Excessive heat can harm the seats.
7. Heat solder joints only to the point where solder will flow properly. Excessive heat may distort brass castings.

Pressure - Temperature Limits

Pattern	Type of Solder	Working Temp.		Maximum Pressure	
Solder-to-Solder	95.5 (Tin-Antimony)	°F	°C	psi	bar
		200	93	300	20.7
		225	107	250	17.2
		250	121	200	13.8
Thread-to-Thread	50-50 and 60-40 (Tin-Lead)	100	38	200	13.8
		150	66	150	10.3
		250	121	85	5.9
		250	121	300	20.7

Flow Measurement Instruction

1. Loosen memory screw.
2. Turn indicator knob to open position on indicator plate. **Do not force past this point.**
3. Connect vent and prepare the differential gauge. Refer to instructions furnished with the gauge.
4. After initial pressure differential reading is taken, refer to flow rate charts to obtain flow rate based on pressure differential and valve setting. If flow rate is in excess of that specified, turn indicator knob towards closed position, noting pressure drop and valve setting and determining new flow rates from flow rate chart. Once correct flow rate settings has been established, slide memory screw counter-clockwise towards closed side of indicator plate until memory stop ring hits indicator plate. **Do not force beyond this point.** Tighten memory screw. Refer to Figures 1 and 2. The unit or system has now been balanced and the memory set.
5. After memory is set, disconnect differential gauge.

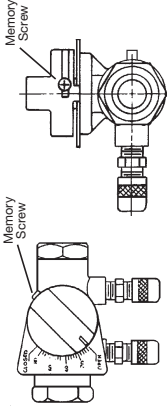


Figure 1

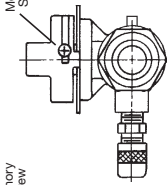


Figure 2

CALIFORNIA PROPOSITION 65 WARNING
WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. (California law requires this warning to be given to customers in the State of California.)
For more information: www.watts.com/prop65



USA: 815 Chesnut St., No. Andover, MA 01845-6098; www.watts.com

Canada: 5435 North Service Rd., Burlington, ONT. L7L 5H7; www.watscanada.ca



Water Safety & Flow Control Products



Dimensions (Inches)


Valve No.	Size (In.)	Order No.	A	B	Weight (lbs.)
CSM-61T-M1	1/2	0856736	2 3/8	1 1/2	1
CSM-61S-M1	1/2	0856735	2 3/8	1 1/2	1

Note: (T) = Threaded, (S) = Solder

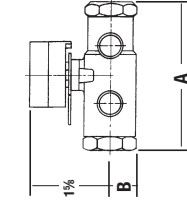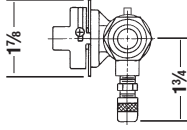

Valves conform to ANSI B16.18 and ANSI B16.22



1/2" Flow Chart

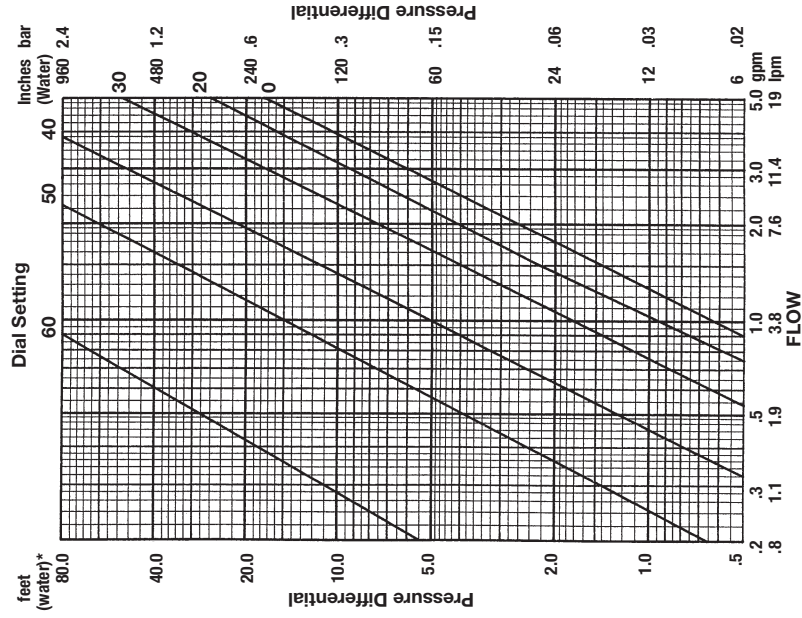

* To convert to kg/m² multiply feet of water by 304.8
*To convert to psi multiply feet of water by .4335


Dimensions (Inches)

Valve No.	Size (In.)	Order No.	A	B	Weight (lbs.)
CSM-61T-M1	3/4	0856738	2 3/8	5/8	1.25
CSM-61S-M1	3/4	0856737	3 1/8	5/8	1.25

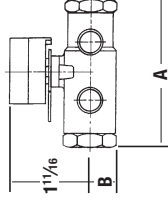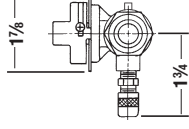

Valves conform to ANSI B16.18 and ANSI B16.22

3/4" Flow Chart

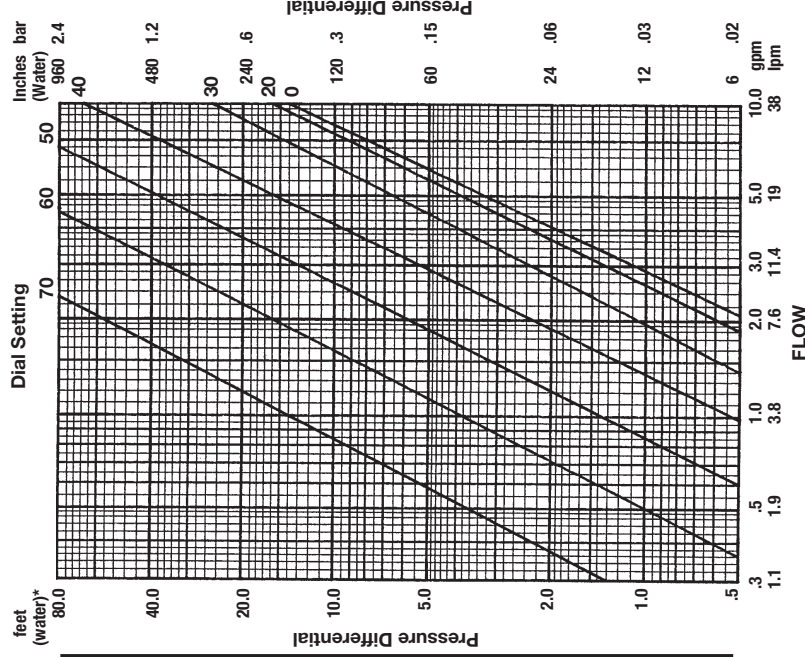

* To convert to kg/m² multiply feet of water by 304.8
*To convert to psi multiply feet of water by .4335