



KitchenAid®

**2.0 CUBIC FOOT MICROWAVE HOOD
(CleanRelease Non-Stick Interior)**

MODELS:

KMHS120EWH2 (White)
KMHS120EBL2 (Black)
KMHS120ESS2 (Stainless)


CONTROL PANEL PARTS

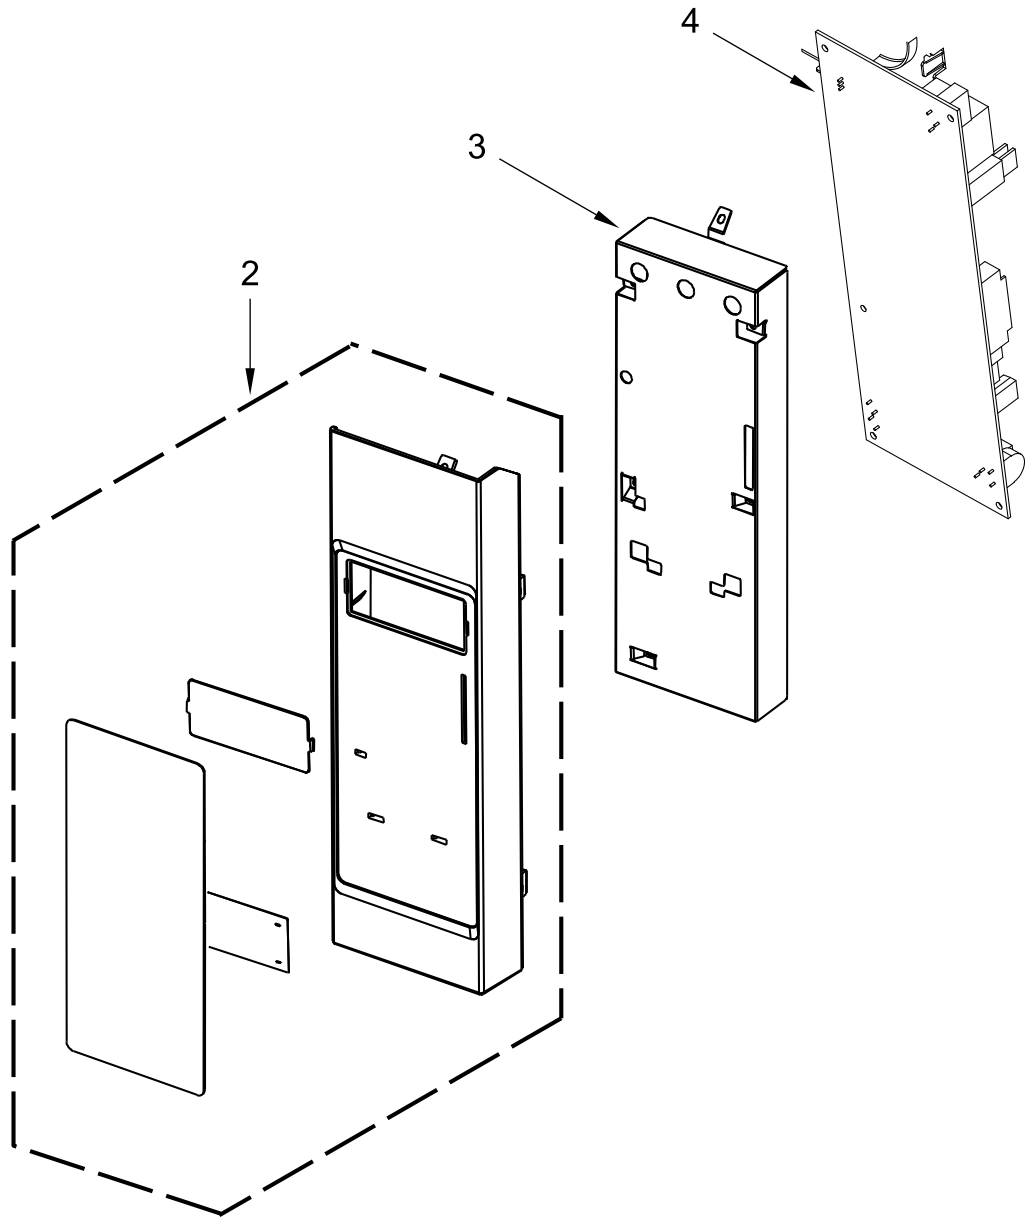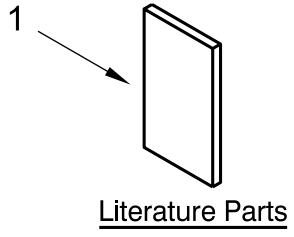

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	2		Assembly, Control Panel
	W10823835	Installation Instructions		W10727605	White
	W10644749	Use and Care Guide		W10727604	Black
	W10644752	Quick Reference Guide		W10719416	Stainless
	W10651169	Tech Sheet	3	W10639186	Backer, Control Panel
			4	W10678766	Microcomputer

DOOR PARTS

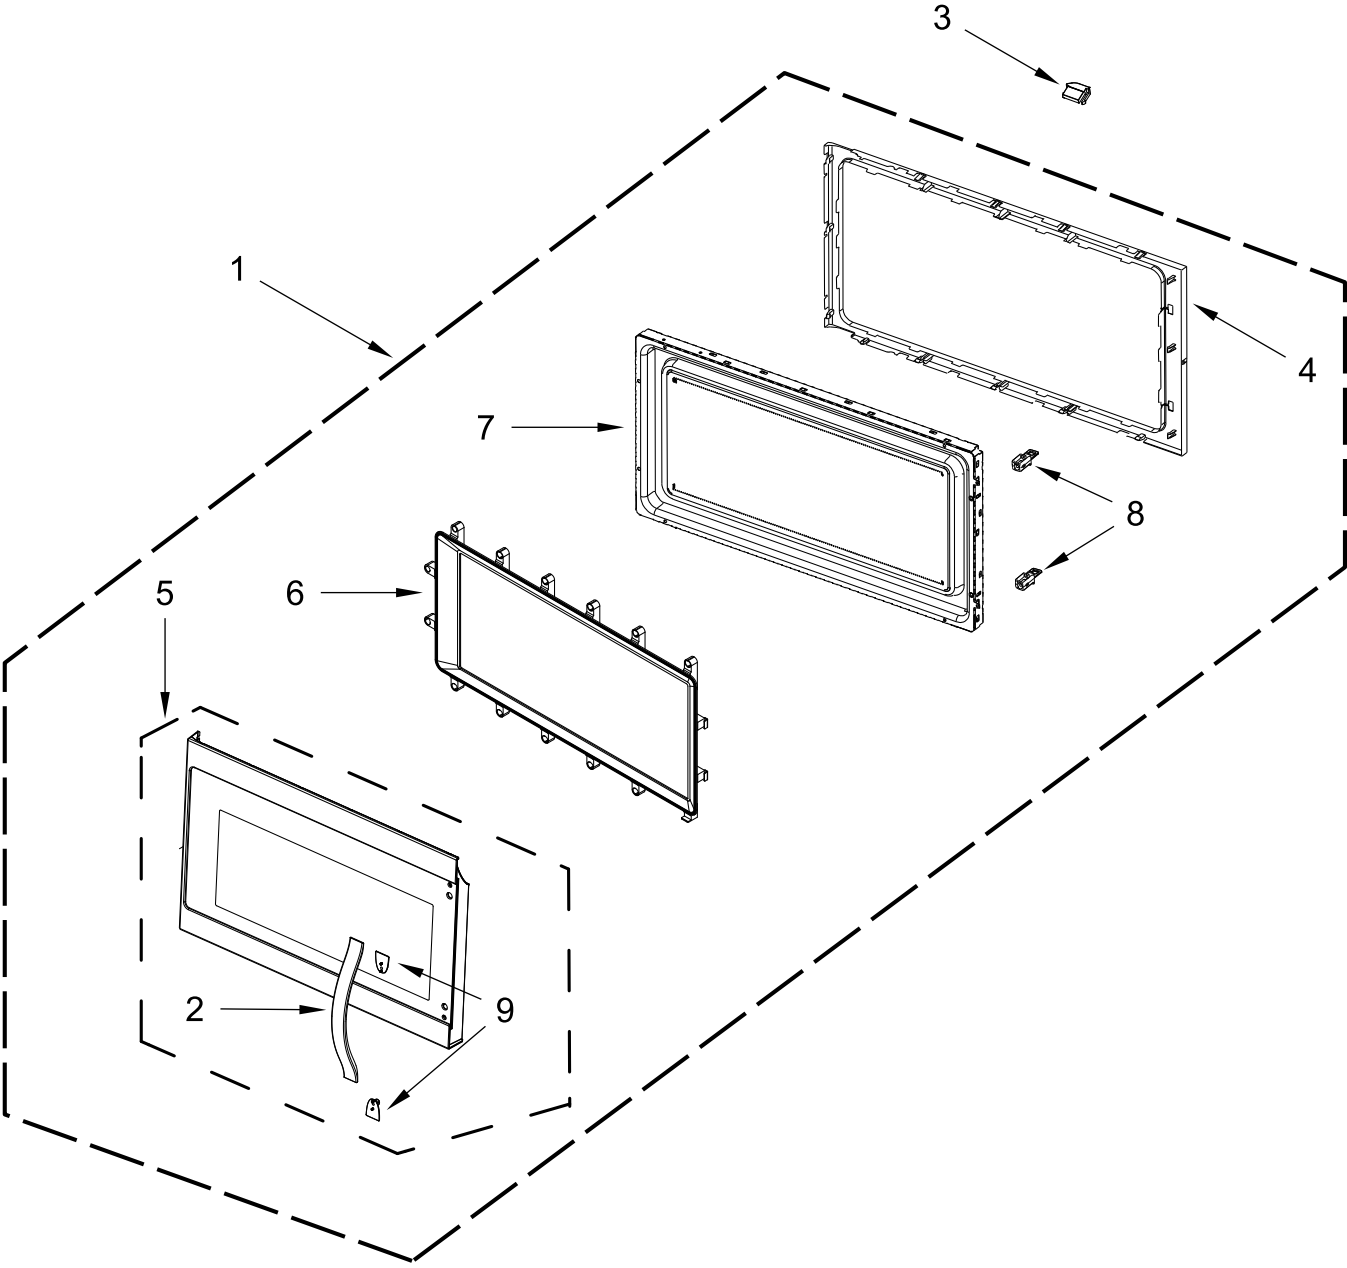


DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Door, Complete
	W10727601	White
	W10727602	Black
	W10727603	Stainless
2	W10603749	Handle, Door
3	W10643975	Stopper, Door (For White Models)
	W10643974	Stopper, Door (Black and Stainless Models)
4	W10647773	Frame, Inner (For White Models)
	W10647772	Frame, Inner (Black and Stainless Models)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
5		Assembly, Door Frame
	W10727606	White
	W10727607	Black
	W10727608	Stainless
6	W10562560	Plate, Steam Protection (For White Models)
	W10514243	Plate, Steam Protection (Black and Stainless Models)
7	W10647794	Foil, Door (For White Models)
	W10647793	Foil, Door (Black and Stainless Models)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
8	W10740455	Hooks, Door
9	W10540736	Cushion, Handle


INTERIOR AND VENTILATION PARTS

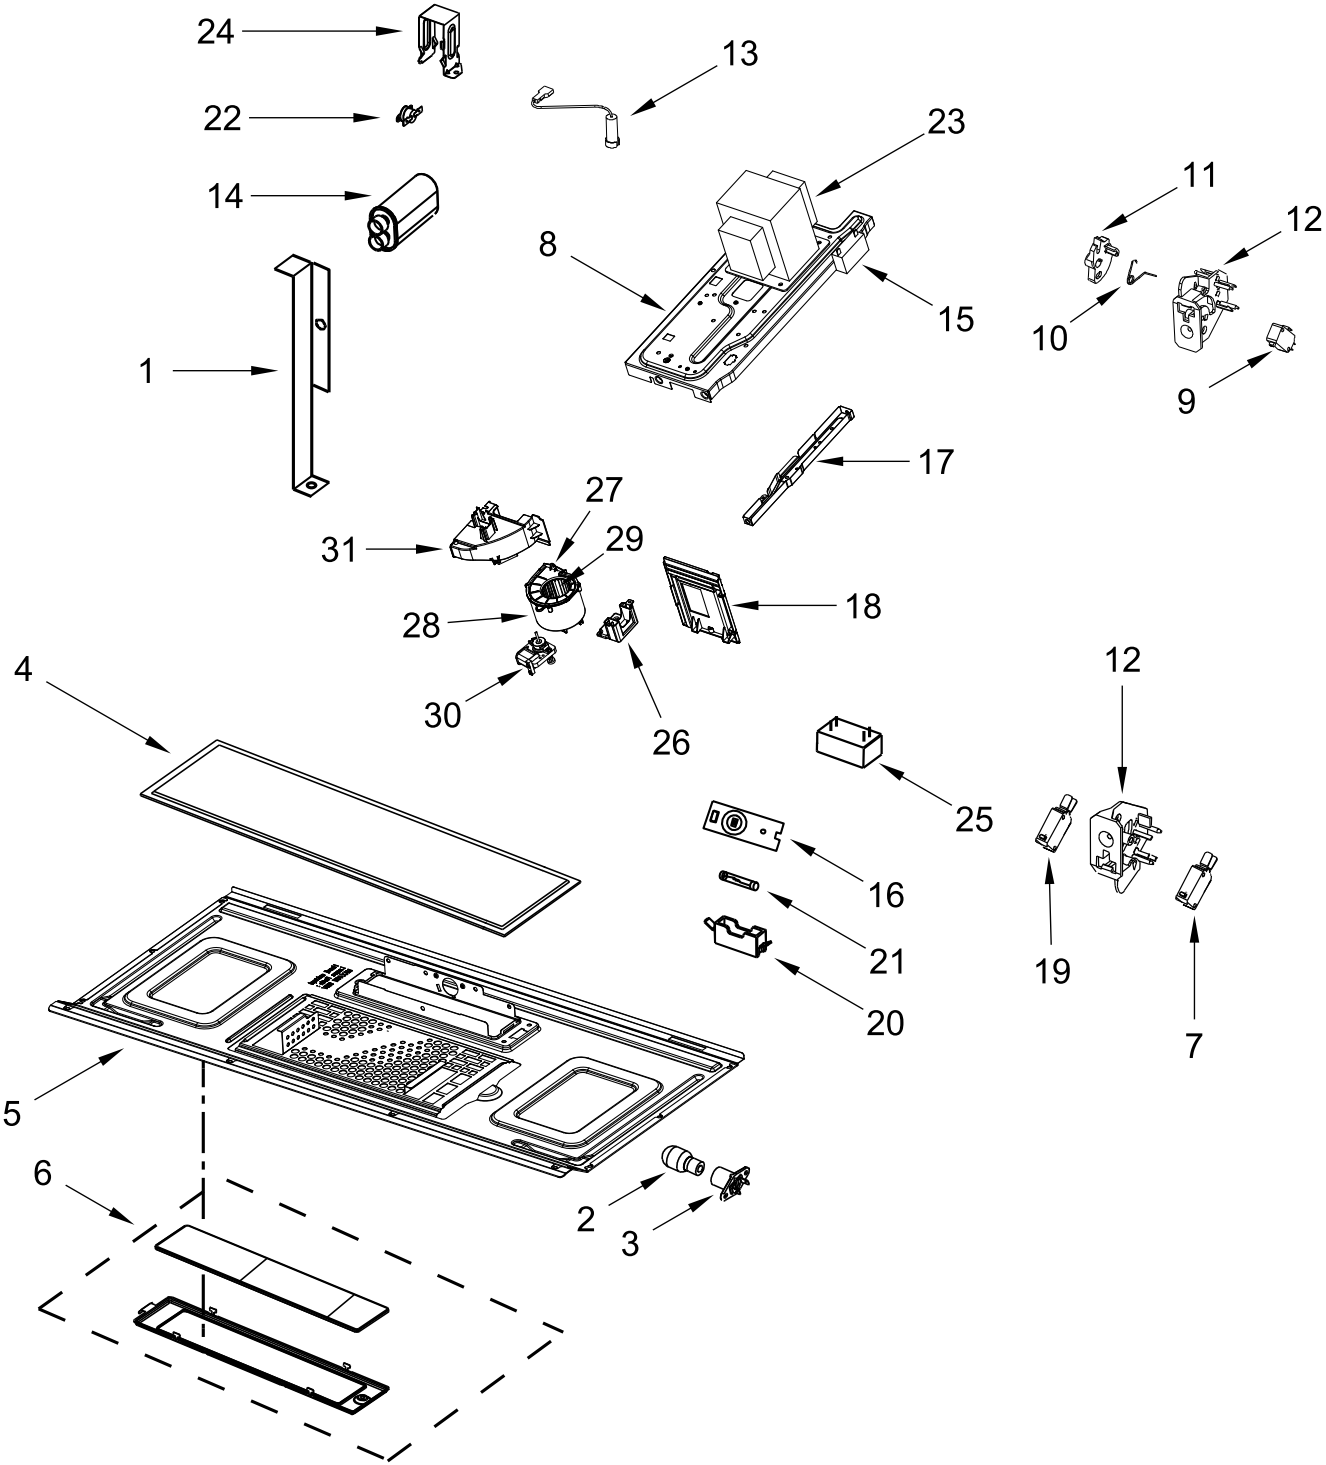

INTERIOR AND VENTILATION PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10540715	Bracket, Top Cavity	12		Support, Interlock	22	W10598693	Thermostat, Magnetron
2	8206232	Lamp 40 Watt		8206419	Top	23	W10880342	Transformer, High Voltage
3	W10210871	Holder, Lamp		W10156813	Bottom	24	W10633730	Bracket, Capacitor
4	W10208631	Filter, Grease	13	W10575765	Diode, High Voltage	25	W10568805	Resistor, Cement
5	W10571127	Plate, Bottom	14	W10343300	Capacitor, High Voltage	26	W10533480	Holder, NTC
6	W10240330	Assembly, Lamp Glass and Holder	15	W10605897	Capacitor, Hood Motor	27	W10533502	Cover, Cooling Fan
7	W10269458	Microswitch V15T16-CC200/NC	16	W10536989	Thermistor PCBA	28	W10533501	Housing, Cooling Fan
8	W10631826	Chassis	17	W10540718	Bracket, Cavity	29	W10533503	Wheel, Cooling Fan
9	W10269460	Microswitch V15T16-CP200/NO	18	W10533481	Deflector, Air	30	W10536556	Motor, Cooling
10	W10156812	Spring, Interlock	19	W10269457	Microswitch V15T16-CZ200/NC/NO	31	W10631700	Magnetron, Air Guide
11	W10156811	Plate, Cam	20	W10245194	Holder, Fuse			
			21	W10138793	Fuse			

AIR FLOW PARTS

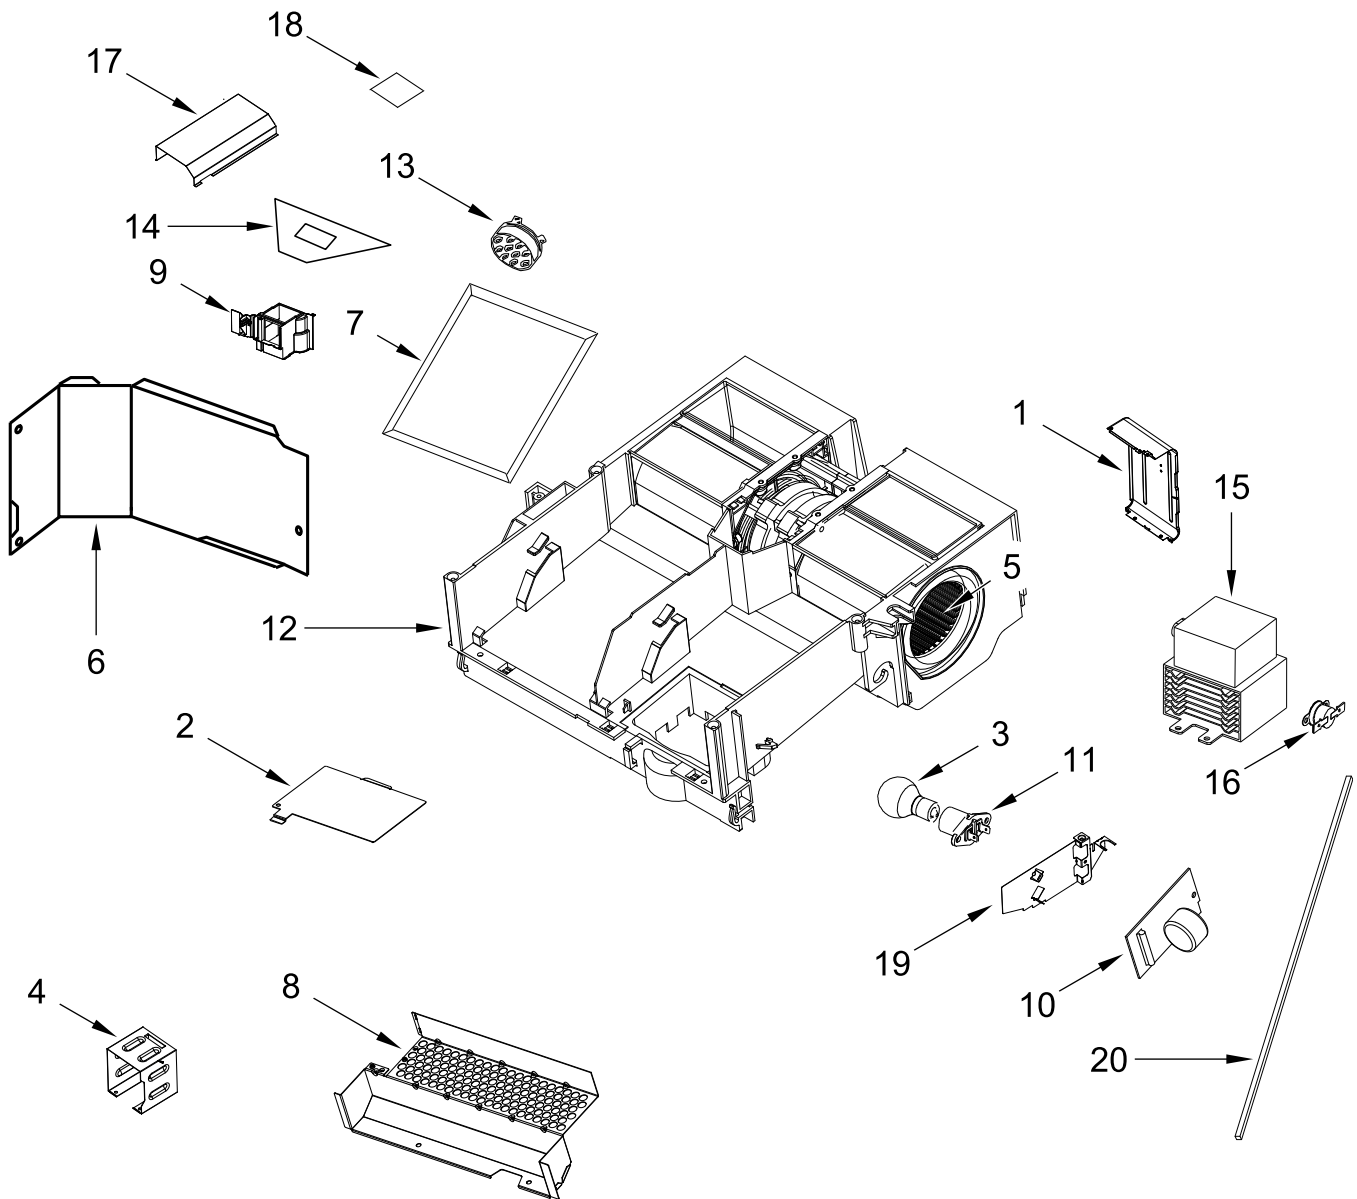


AIR FLOW PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10631697	Deflector, Air
2	8206382	Cover, Lamp
3	4393681	Lamp, Cavity 30 Watt
4	W10556824	Housing, Damper
5	W10726505	Motor, Fan
6	W10533116	Plate, Air Deflector
7	8206230	Filter, Charcoal
8	W10629803	Shield, Finger (Includes Seal)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
9	W10570208	Outlet, Cavity (Front)
10	W10531156	Board, Filter
11	W10210878	Holder, Lamp Cavity
12	W10533096	Baseplate, Air Guide
13	W10557536	Sensor, Humidity
14	W10810142	Socket, Motor Wire
15	W10754514	Magnetron

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
16	W10476901	Thermostat, Cavity 125/-35 Celcius
17	W10533111	Outlet, Cavity (Back)
18	W10531724	Glass, Lamp
19	W10533484	Cover, Duct (Right)
20	W10626457	Seal

TURNTABLE PARTS

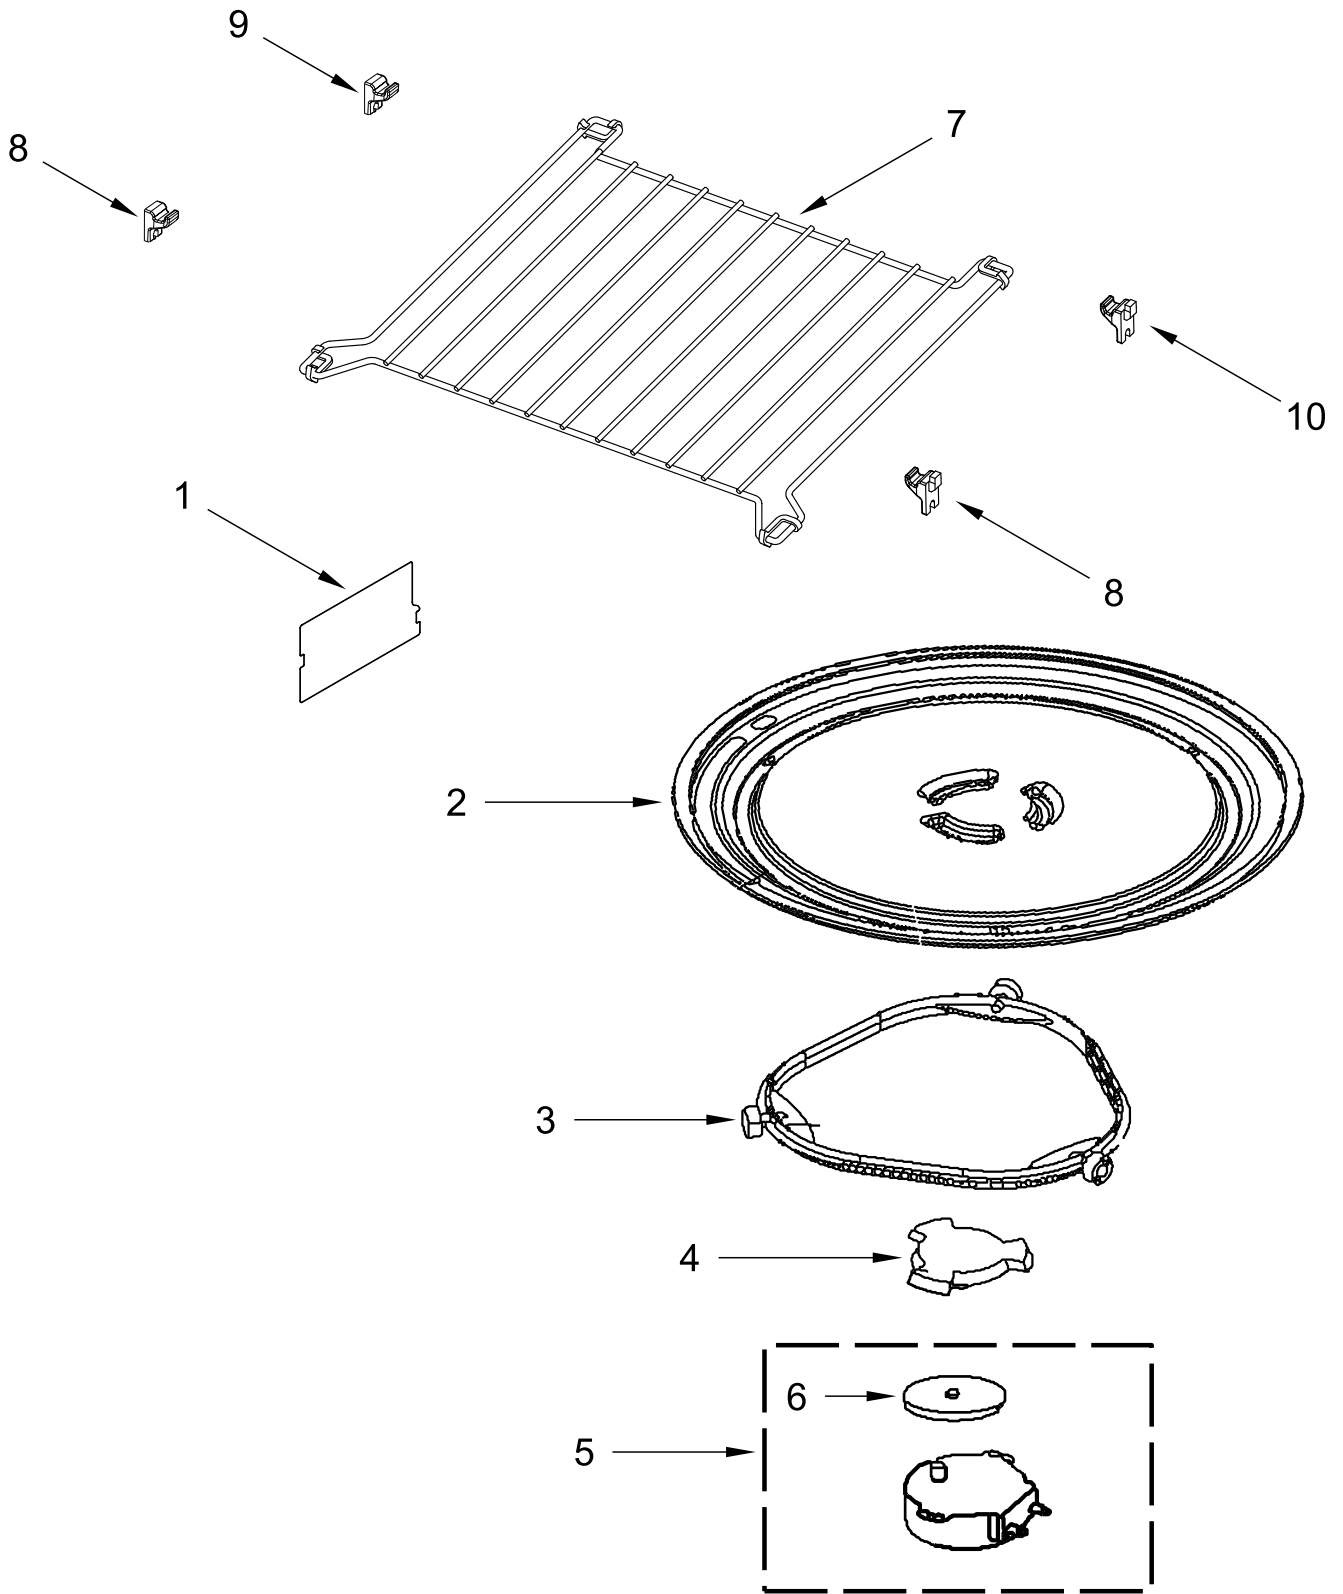


TURNTABLE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10533497	Cover, Waveguide
2	W10531726	Turntable
3	W10679311	Ring, Turntable
4	W10337248	Driver, Turntable
5	W10642989	Motor, Turntable

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
6	8184109	Seal, Waterproof
7	W10637159	Rack, Microwave
8	W10740485	Hook, Microwave (Left Front & Right Front)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
9	W10749119	Hook, Microwave (Left Rear)
10	W10749120	Hook, Microwave (Right Rear)

CABINET AND INSTALLATION PARTS

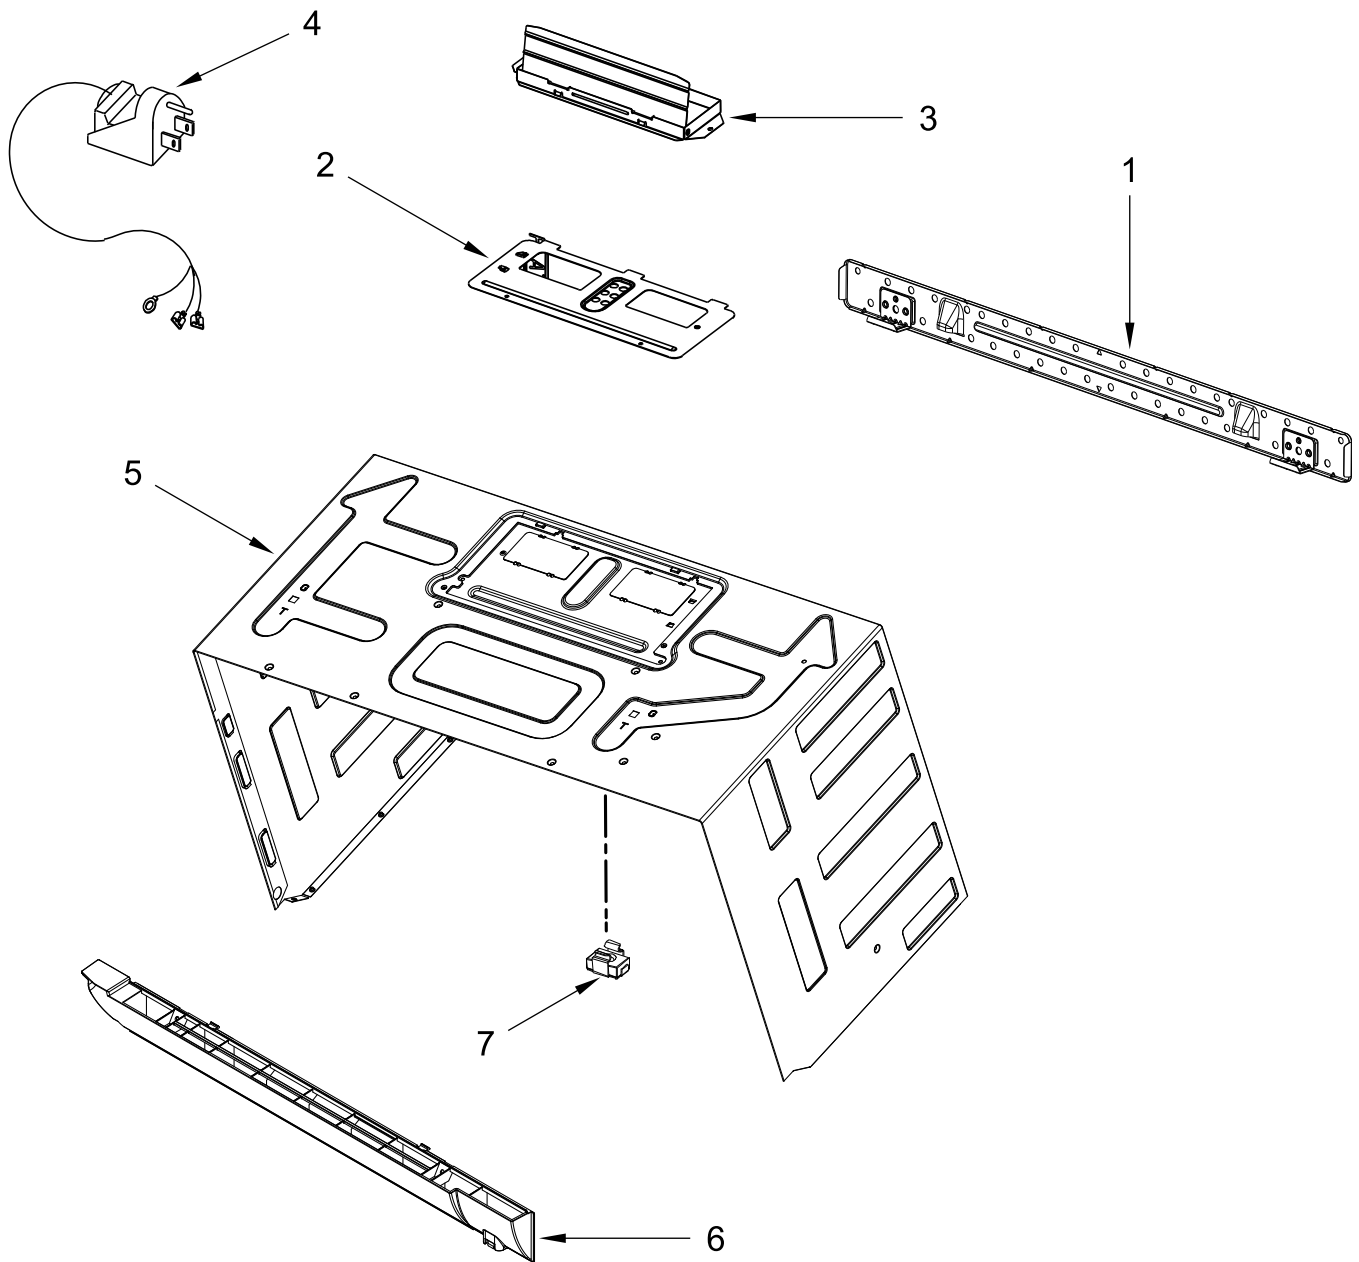

CABINET AND INSTALLATION PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10440498	Plate, Mounting
2	W10625423	Cover, Fan Motor
3	W10748710	Damper
4	W10654511	Cord, Power
5		Case, Outer
	W10571410	White
	W10571408	Black
6		Grille, Vent
	W10701696	White
	W10701697	Black

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
7	W10596040	Assembly, Mounting Nut
		Miscellaneous Parts
	W10821385	Hardware, Installation
	W10190018	Template, Upper
	8169704	1/4-20x3" Panhead Screw
	W10629733	Harness, Main
	W10710692	Harness, Hood Lamp and Turntable Motor
	W10539840	Harness, PCBA Ground Wire