

7390 Wireless Remote Indoor Sensor

Please read all instructions before proceeding.

The wireless remote indoor sensor monitors temperature at a remote indoor location and transmits the temperature data wirelessly to the thermostat. The thermostat can be set to monitor temperature at the thermostat location, at the sensor location or by combining the temperature at the thermostat and the remote location(s). Up to 4 wireless indoor remote sensors can be connected.

1 Specifications

Operating Temperature: 40 - 99 °F

Storage Temperature: 14 - 140 °F

Operating Humidity: 5 - 95% Rh

Control Range: 45 - 90°F

Battery Power: 3.0 Volt DC

Accuracy: +/- 1°F

Blue LED Indicator

- 1 flash every 30 seconds: Normal operation
- 3 flashes every 30 seconds: Sending sensor data to thermostat
- 1 flash every 2 seconds: Sensor is in pairing mode
- Solid for 60 seconds: Successfully paired remote sensor

Red LED Indicator

- 3 flashes every 30 seconds: Low battery
- 1 flash every 10 seconds: Lost communication with thermostat

IMPORTANT: Before mounting the remote sensor, you should verify there is good wireless communication in the area you wish to mount it by first pairing it in that location. If you are having trouble pairing in that location, try moving the remote sensor to a location closer to the thermostat.