


KitchenAid®

BUILT-IN MICROWAVE

MODELS:

KMBS104EBL01 (Black)
KMBS104ESS01 (Stainless)


CONTROL PANEL PARTS

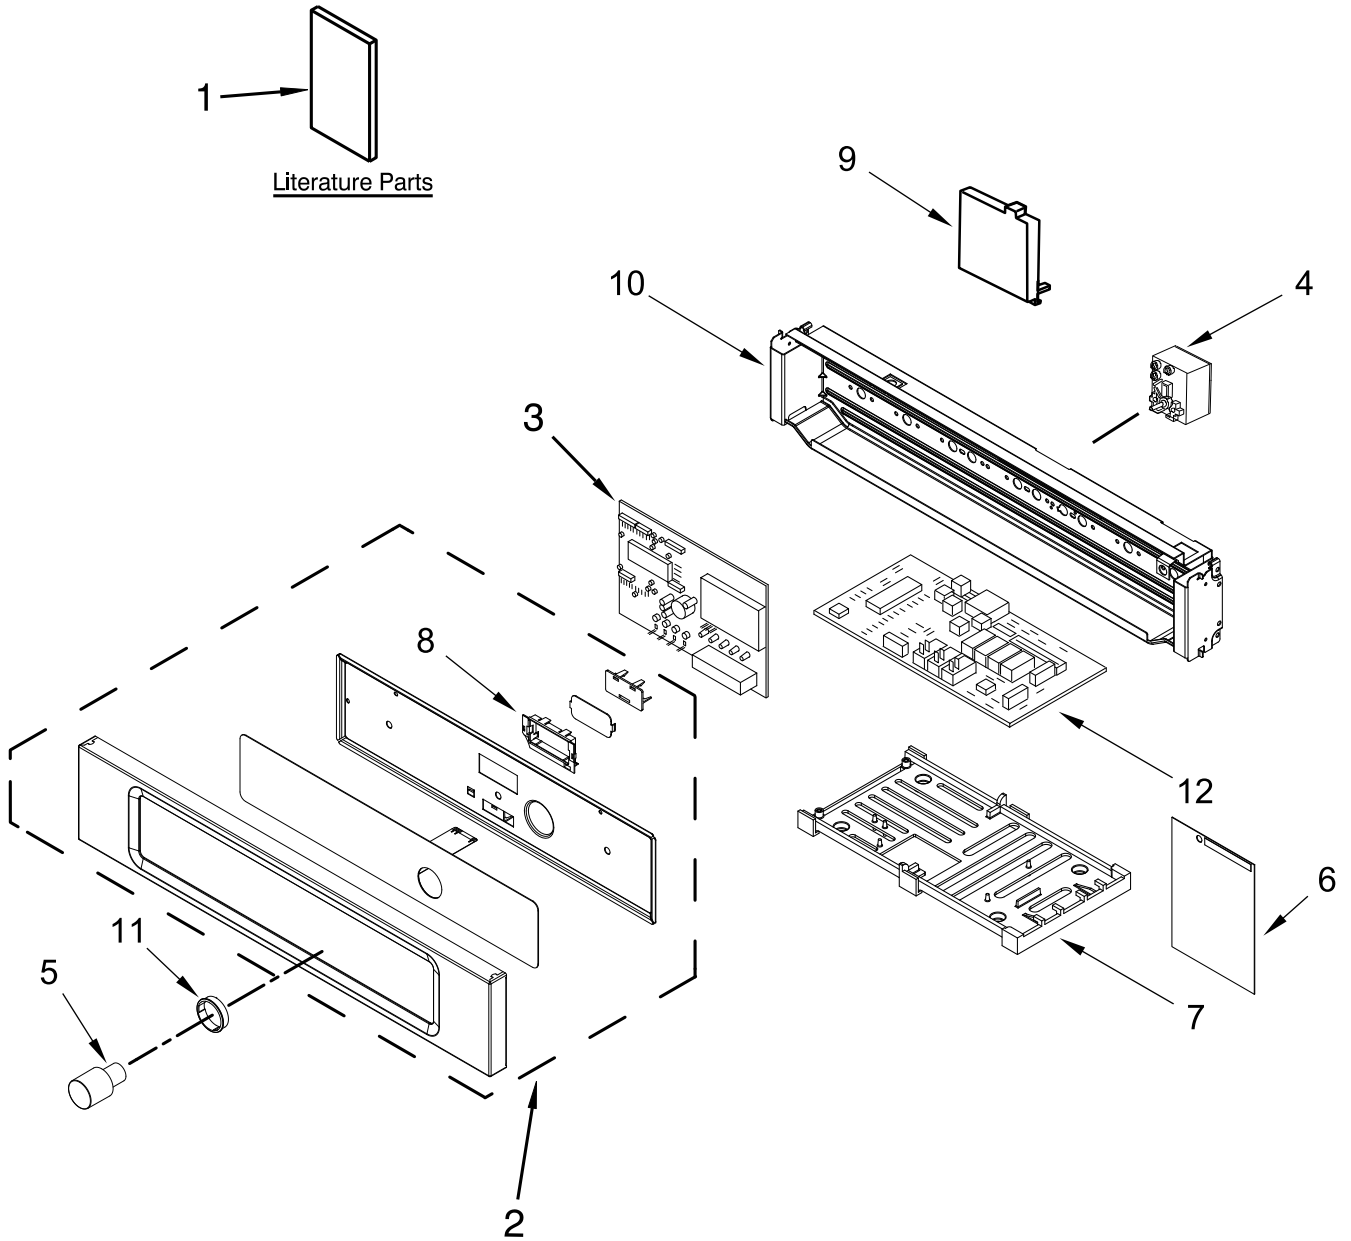

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	3	W10660608	Interface, User	11	461960204731	Ring
	W10772547	Instructions, Installation	4	W10623991	Dial, Control	12	W10591452	Board, Power
	W10721491	Guide, Use and Care	5	W10448758	Knob			WIRE HARNESS PARTS
	W10721492	Guide, Quick Reference	6	461968968091	Plate, Noise Reduction		W10773900	Harness, Main
	W10782150	Sheet, Tech	7	461967750752	Holder, PCB		461968956681	Harness, Fan & Turntable Motor
2		Assembly, Control Panel	8	461967750153	Holder, Display Board		461968956671	Harness, Lamp
	W10696354	Black	9	461967750132	Holder, Control Board		W10491632	Harness, Sensor
	W10731701	Stainless	10	461961099964	Support, Panel			

CABINET PARTS

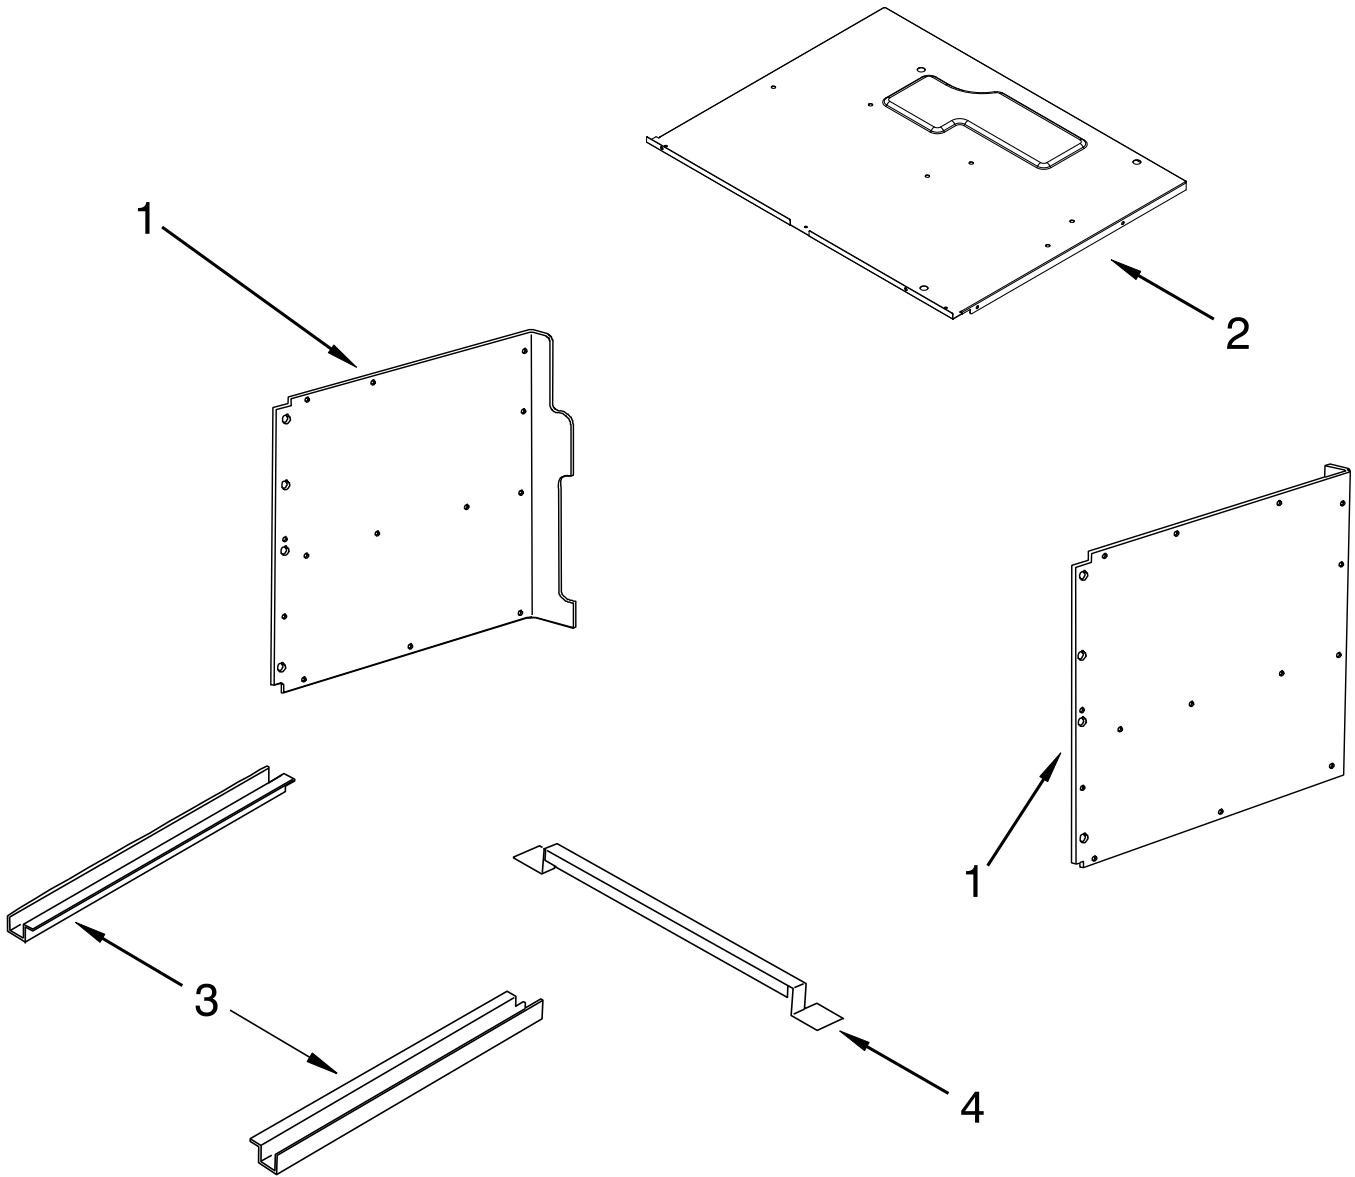


CABINET PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10693407	Chassis, Side (Left)
	W10693408	Chassis, Side (Right)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
2	461967008052	Plate, Top

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
3	461967008461	Support, Bottom
4	W10694565	Bracket, Bottom

DOOR PARTS

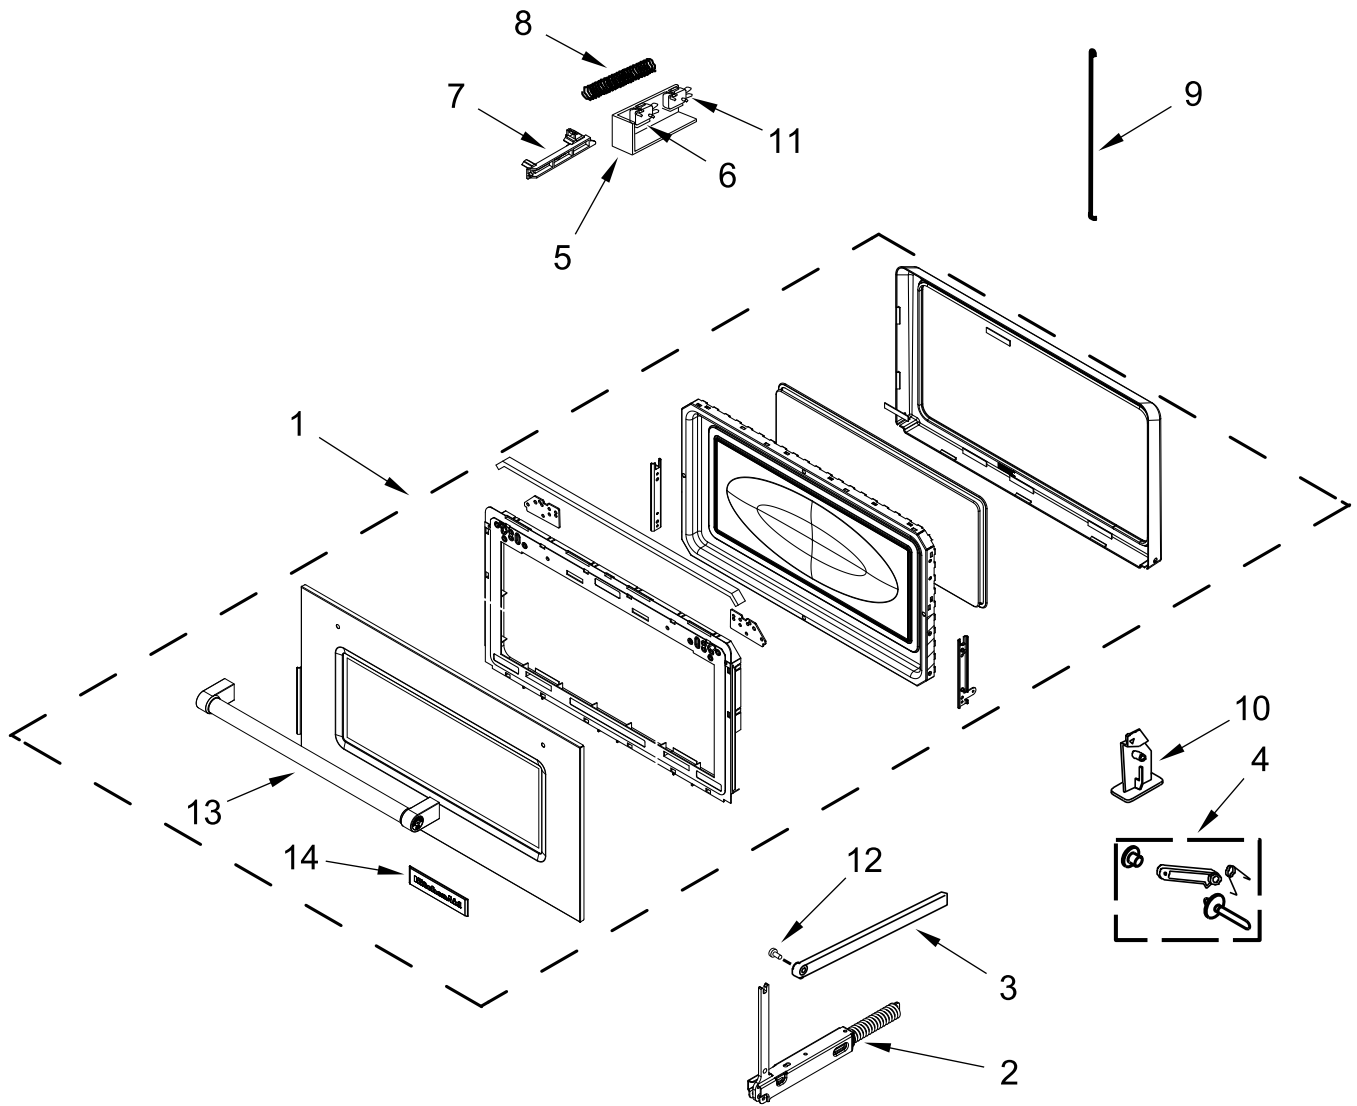


DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Assembly, Door
	W10696352	Black
	W10731697	Stainless
2	461968979591	Hinge, Door
3	461967750483	Arm, Sliding
4	251968600013	Pin, Damper
5	461967750452	Holder, Switch

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
6	461967848881	Switch
7	461967750464	Rod, Push
8	423107570871	Spring, Cam
9	461967570351	Spring, Torsion
10	461967750494	Support
11	4375346	Switch, Door

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
12	461967510191	Bushing
13		Assembly, Handle
	W10737395	Stainless
14		Badge
	W10518672	Grey

TOP VENTING PARTS

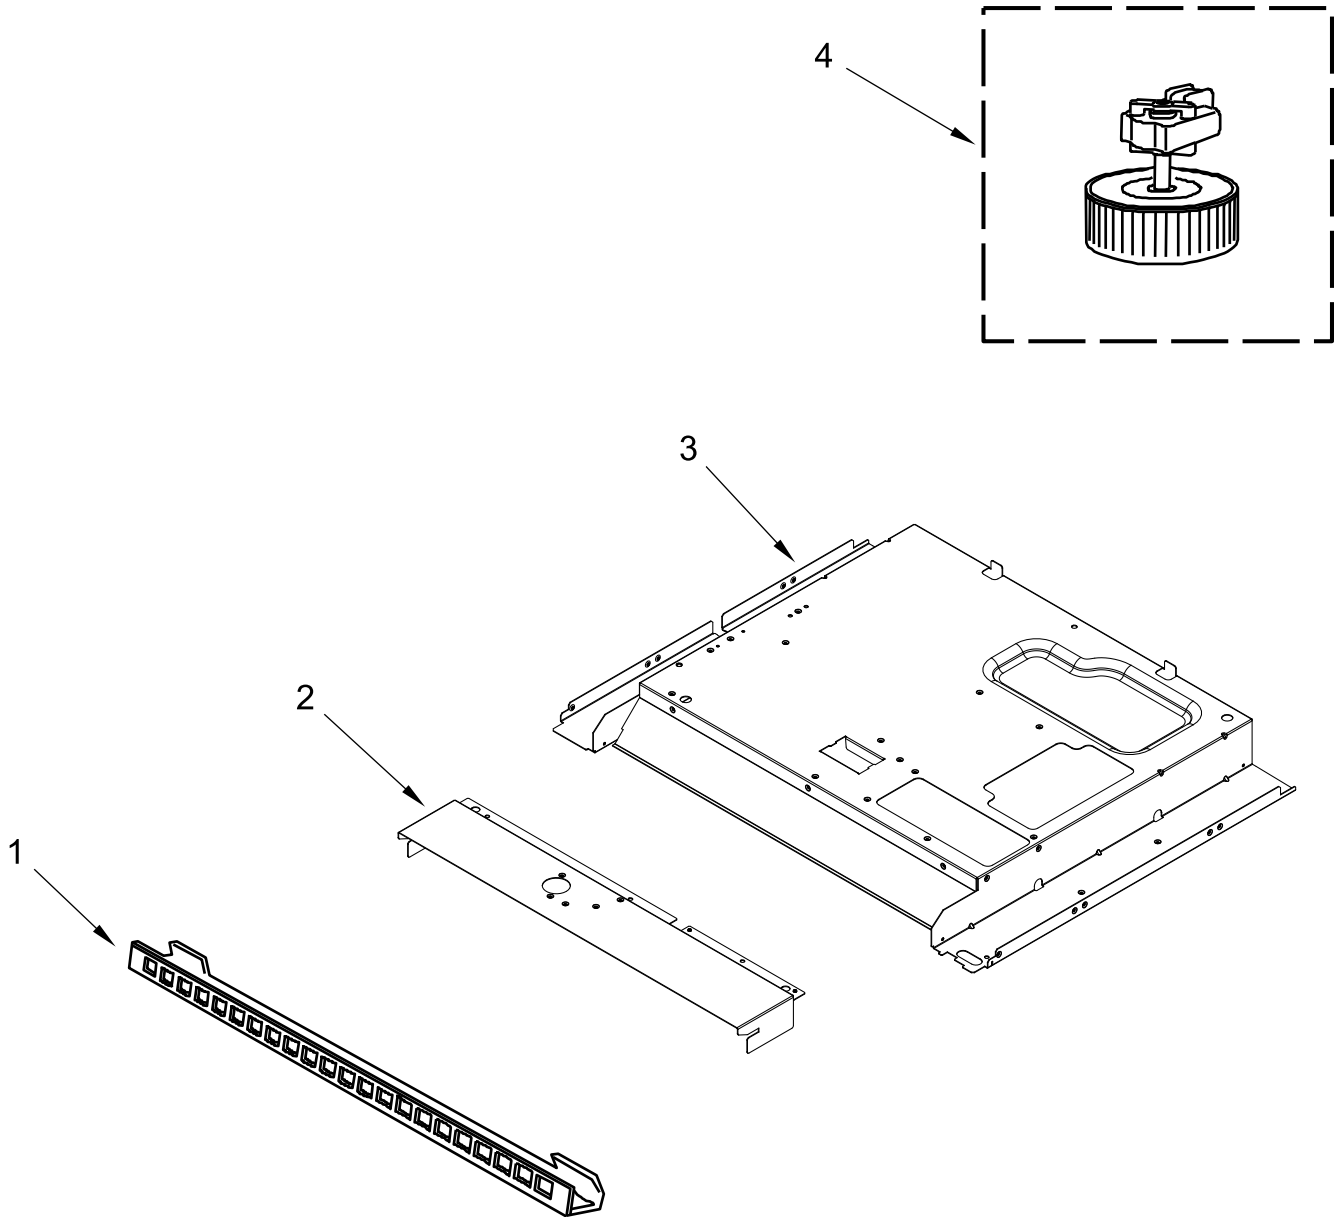


TOP VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	461967749811	Vent, Panel
2	461968956142	Plate, Cover

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
3	W10782523	Chassis, Top
4	461968973761	Assembly, Cooling Fan



OVEN INTERIOR PARTS

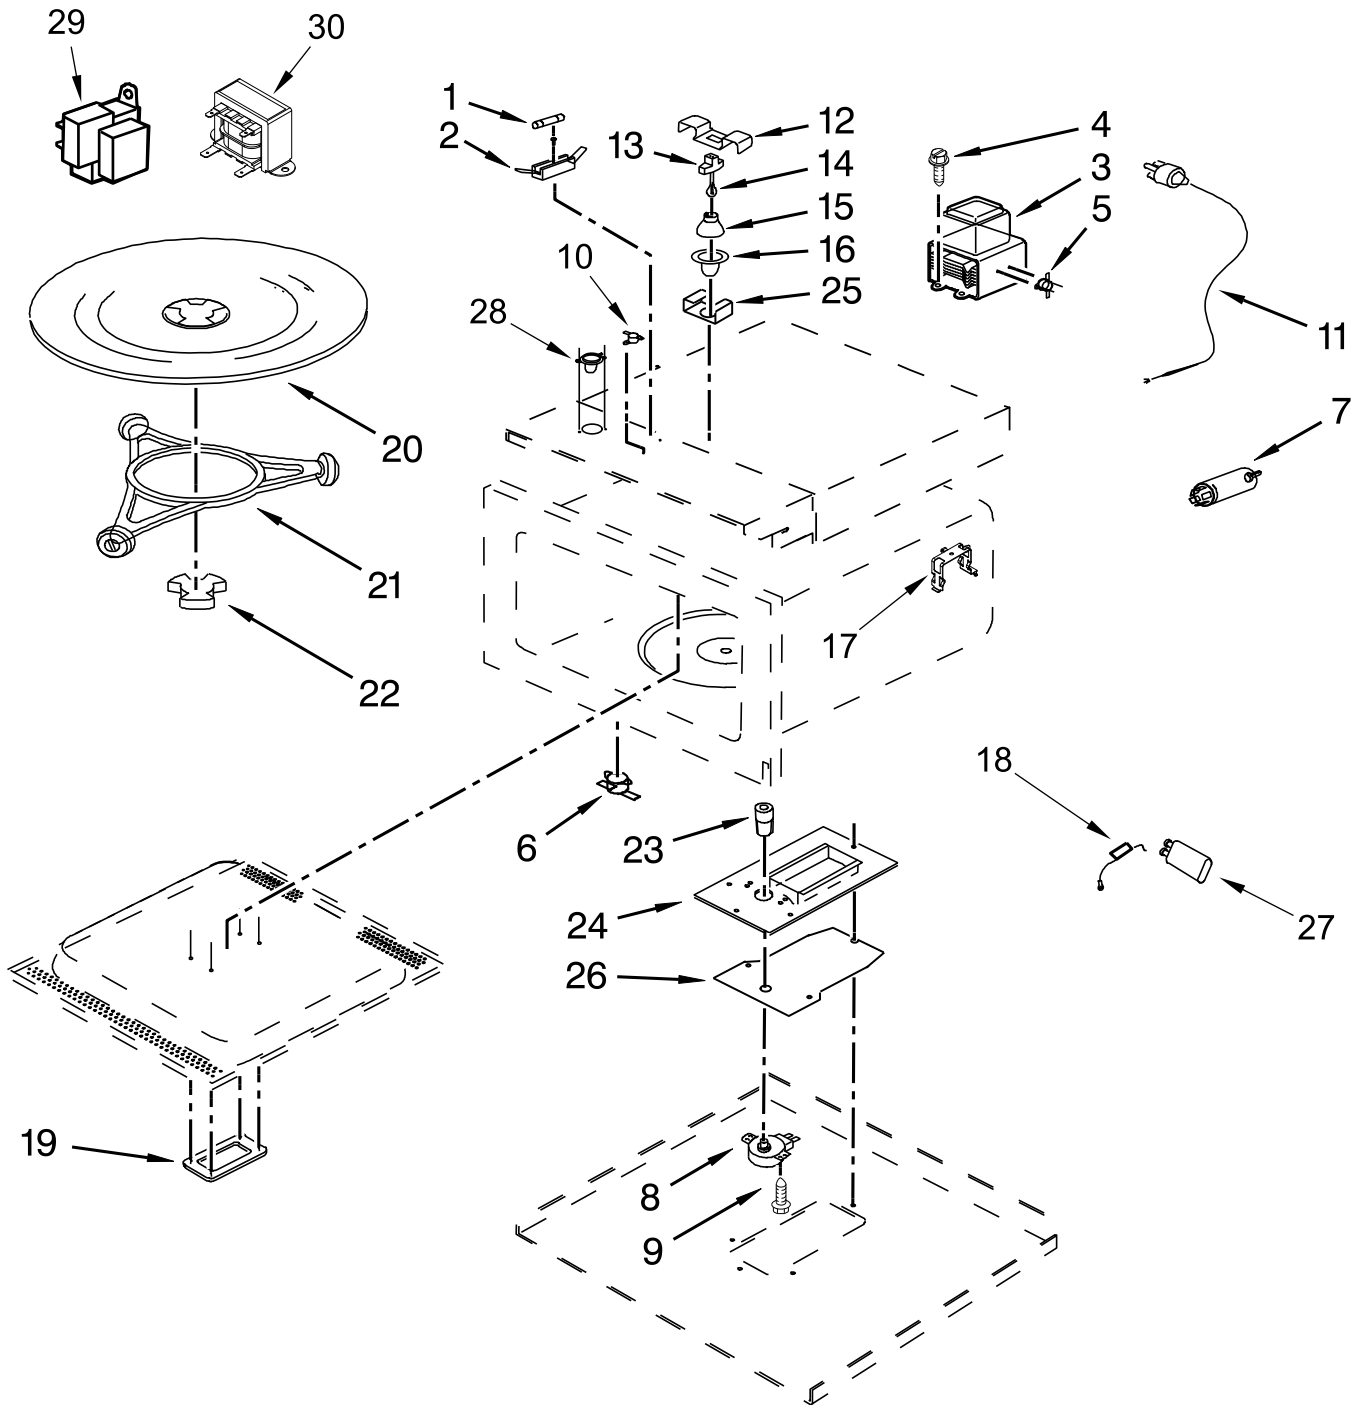

OVEN INTERIOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	241908600053	Fuse	12	W10474015	Spring, Lamp Holder	23	461967750791	Shaft, Turntable Drive
2	4375231	Block, Fuse	13	W10490593	Holder, Lamp	24	461967008471	Holder, Turntable Motor
3	W10776925	Magnetron	14	W10795595	Lamp, Halogen	25	461967010591	Clip, Spring
4	461967825061	Screw	15	423107022541	Reflector	26	461967451191	Cover, Motor
5	4375079	Thermostat, Magnetron	16	423107720491	Lens, Lamp	27	W10781465	Capacitor
6	W10141630	Thermostat	17	461967009212	Holder, Capacitor	28	461967847491	Sensor, Humidity
7	461964885341	Filter, Noise	18	461964697812	Diode, High Voltage	29	W10776767	Transformer, High Voltage (120V)
8	461967848971	Motor, Turntable	19	461967749842	Cover, Inlet	30	461967848621	Transformer, Light (20V)
9	461967825321	Screw	20	461967721091	Turntable			
10	8205659	Thermostat, Cavity	21	W10422379	Assembly, Turntable Ring			
11	461967847092	Cord, Power	22	461967745121	Driver, Turntable			

INSTALLATION PARTS

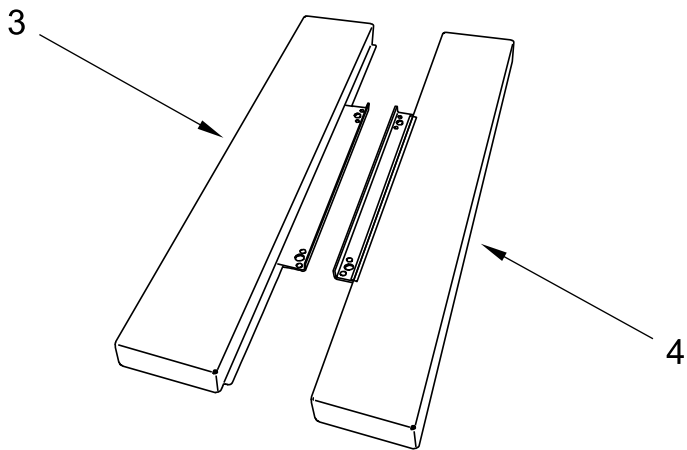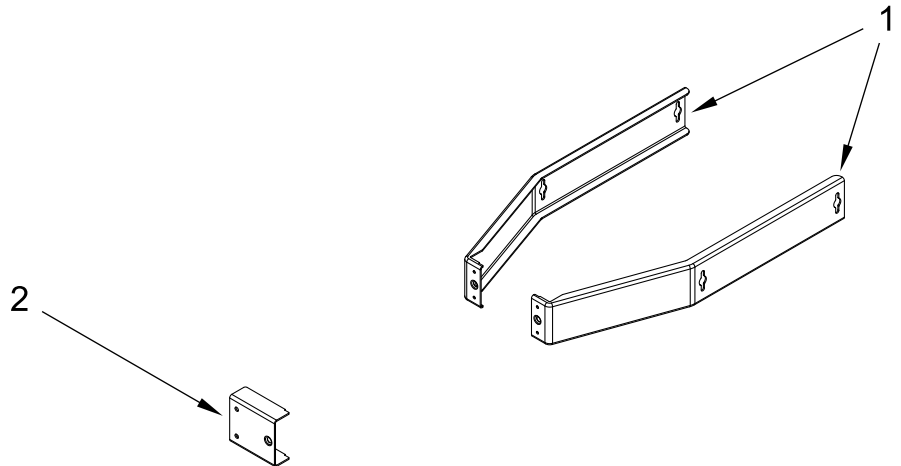

INSTALLATION PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	461967011821	Bracket, Mounting	3		Assembly, Side Strip (Left)	4		Assembly, Side Strip (Right)
2	461967011831	Tip, Mounting Bracket		W10696311	Black		W10696310	Black
				W10696307	Stainless		W10696306	Stainless
								FOLLOWING PARTS NOT ILLUSTRATED
							W10737666	Kit, Screw