



KitchenAid®

30" ELECTRIC SLIDE-IN SELF-CLEAN CONVECTION RANGE

MODELS:

KSEG700EWH0 (White)
KSEG700EBL0 (Black)
KSEG700ESS0 (Stainless)


COOKTOP PARTS

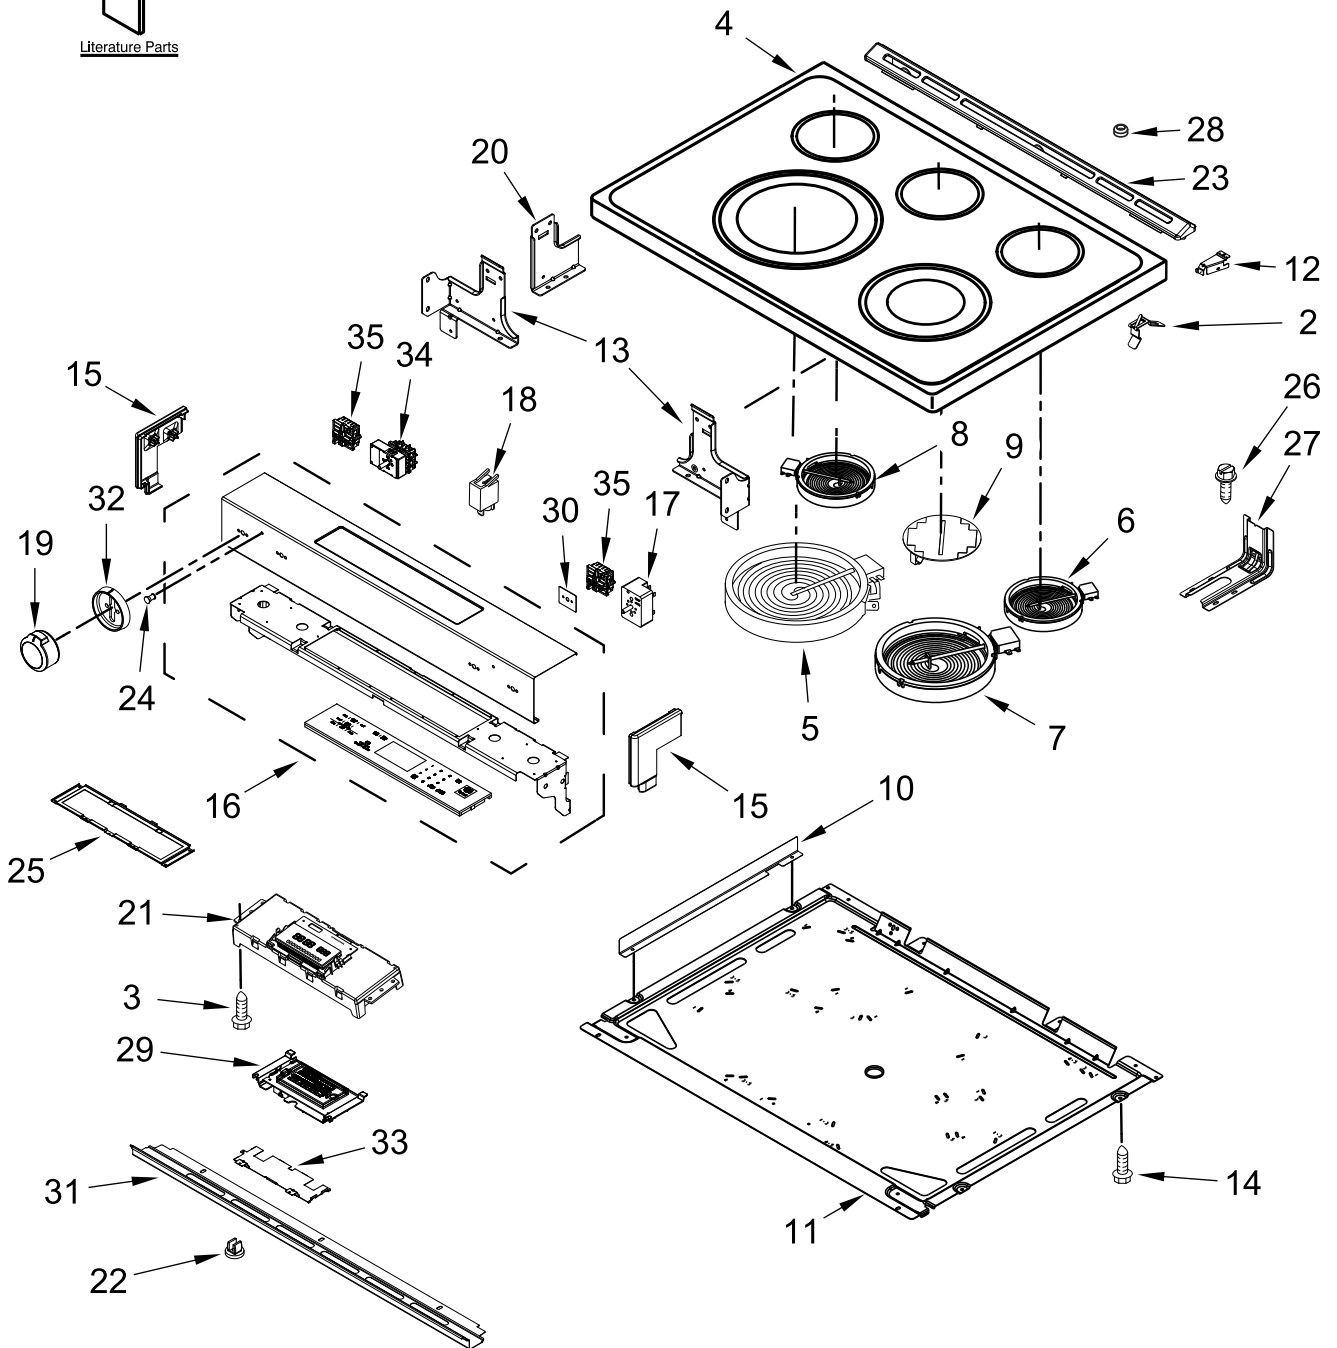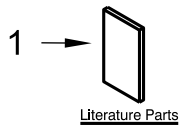

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	14	3196173	Screw	27	W10606241	Bracket, Anti-Tip
	W10665255	Installation Instructions	15		Endcap	28	W10664705	Bumper
	W10722059	Use and Care Guide		W10555935	White (Left)	29	W10603096	Assembly, Display
	W10665227	Sheet, Tech		W10555936	Black (Left)	30	7201P077-60	Gasket, Infinite Switch
	9762761	Tips, Safe Cooking (English)		W10555938	White (Right)	31		Console, Lower Panel
	W10065852	Tips, Safe Cooking (French)	16		Console, Panel		W10555933	White
	W10400064	Guide, Quick Start (English)		W10547091	White		W10555932	Black
	W10400065	Guide, Quick Start (French)		W10547090	Black		W10555934	Stainless
	W10665238	Wiring Diagram	17	W10547092	Stainless	32		Bezel
2	W10225448	Spring, Element		W10578768	Switch, Infinite (Single)		W10663809	Stainless
3	3196178	Screw	18		(Right Rear)	33	W10558372	Bracket, Control
4		Cooktop	19	8523265	Light, Indicator (125V)	34	W10437097	Switch, Infinite Triple
	W10536294	White			Knob			(Left Front)
	W10536295	Black		W10505762	Stainless	35	W10437094	Switch, Infinite (Hyper)
5	W10187839	Element (3000W) (Left Front)			(Right Rear)			(Right Front and Left Rear)
6	8273994	Element (1200W) (Right Rear)		W10505763	Stainless (Left Rear)			FOLLOWING PARTS NOT ILLUSTRATED
7	W10251108	Element (3200W) (Right Front)		W10579764	Stainless (Right Front)		W10580304	Harness, Main
8	W10342780	Element (1300W) (Left Rear)		W10579765	Stainless (Left Front)		W10575120	Harness, Keypad
9	W10388247	Element, Warm Zone (Center Rear)	20	W10598048	Bracket, Console (Center)		W10598170	Harness, Display
10	W10613286	Bracket, Radiant	21	W10453975	Control, MRC2		W10580303	Harness, Console
11	W10536275	Pan, Radiant	22	W10645947	Grommet		W10664316	Clip, Harness
12	W10162253	Brace, Corner (Left)	23		Vent, Trim Top		W10580249	Harness, Cooktop
	W10162252	Brace, Corner (Right)		W10636527	White			
13	W10289169	Support, Cooktop (Right)		W10636528	Black			
	W10289170	Support, Cooktop (Left)		W10636529	Stainless			
			24	3196068	Lens, Indicator			
			25	W10555923	Bracket, User Interface			
			26	7101P485-60	Screw, Anti-Tip Kit			

CHASSIS PARTS

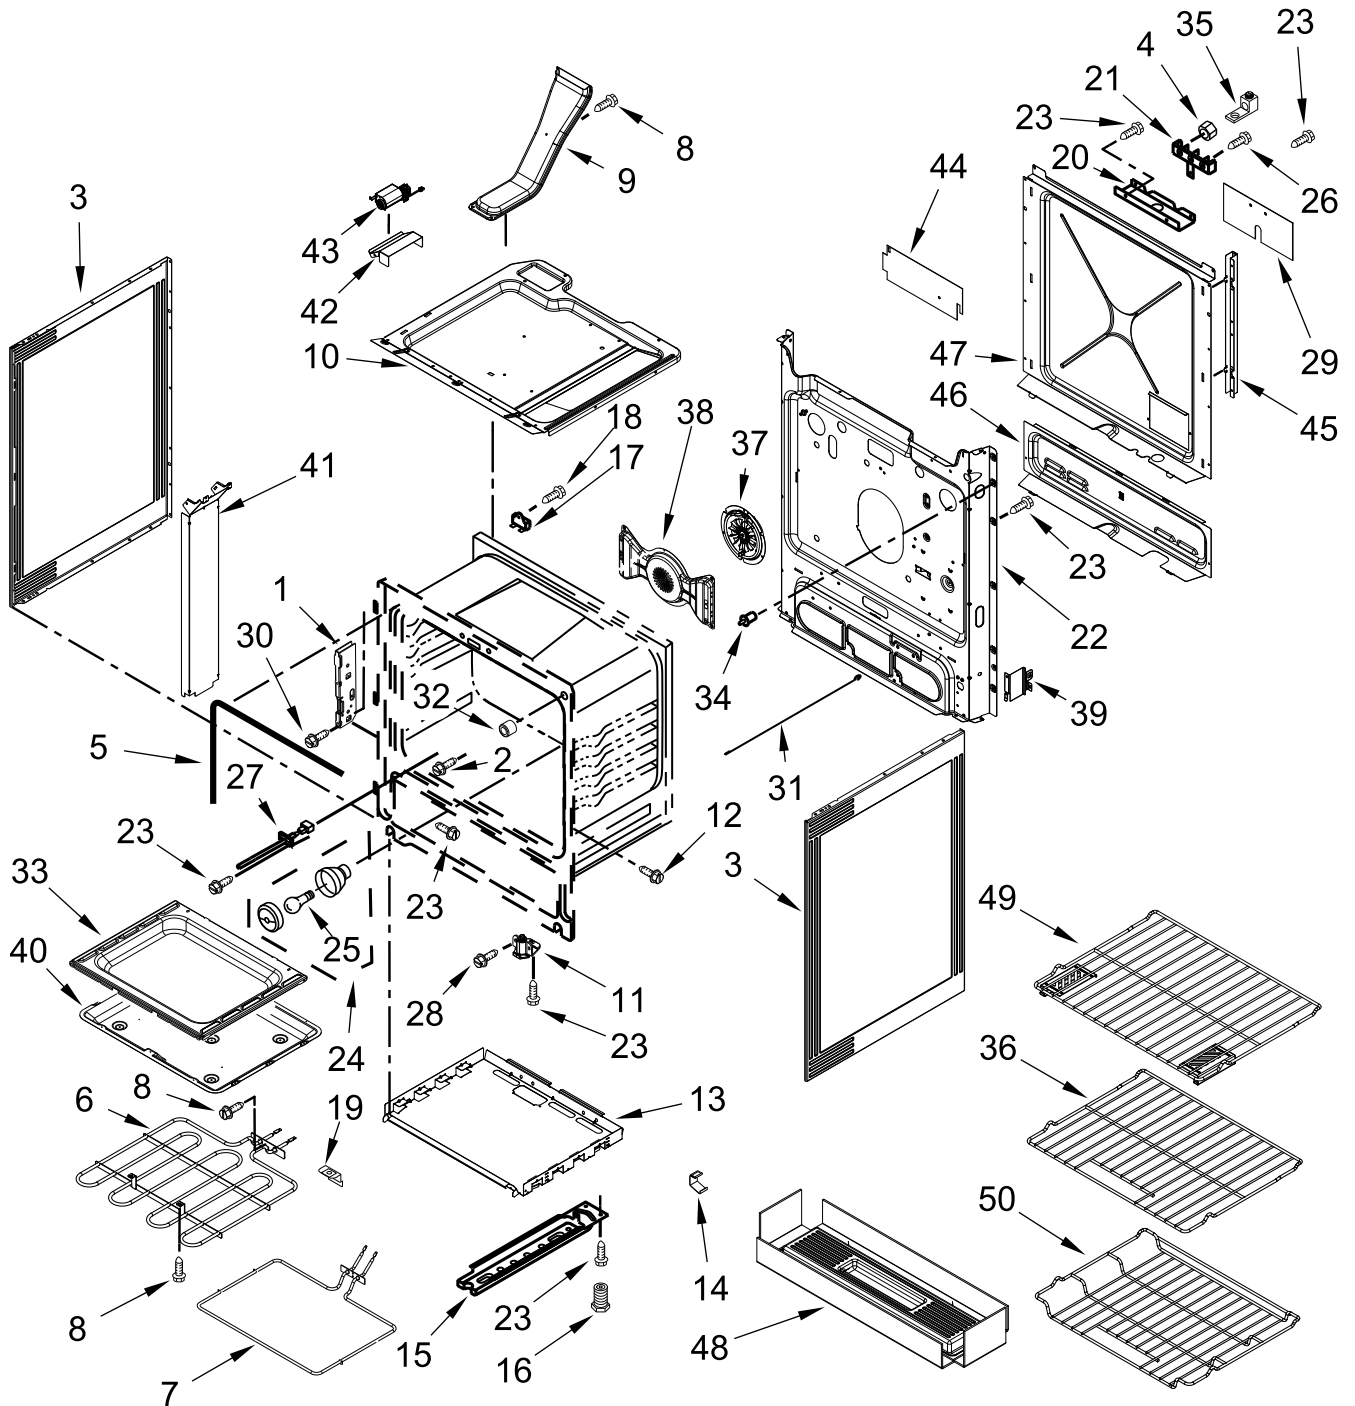


CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge
2	3196560	Screw
3		Panel, Side
	W10575396	White
	W10162245	Black
4	3400029	Nut
5	W10162385	Gasket, Door
6	W10544952	Element, Broil
7	W10774342	Element, Bake
8	W10362924	Screw
9	W10613792	Assembly, Flue
10	W10289168	Box, Burner
11	W10341186	Assembly, Front Foot
12	W10067840	Screw
13	W10541959	Shield, Bake
14	W10137382	Clip, Panel
15	W10390008	Assembly, Base Rail (Left)
	W10390007	Assembly, Base Rail (Right)
16	W10058460	Foot, Leveling
17	3196548	Fuse, Thermal
18	3196172	Screw

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
19	W10035900	Support, Oven Bottom
20	3186034	Bracket, Service
21	W10245259	Block, Terminal
22	W10289166	Back, Main
23	3196178	Screw
24	W10454648	Assembly, Light
25	311255	Bulb, Oven Light
26	3400016	Screw
27	W10586204	Sensor
28	3196169	Screw
29	W10655441	Shield, Power Cord
30	W10031780	Screw
31	W10273192	Rod, Door Switch
32	9758701	Spacer, Door
33	W10774446	Bottom, Oven
34	W10627802	Switch, Door
35	W10281322	Kit, Bare Wire Adapter Block
36	W10554005	Rack, Heavy Duty
37	W10563084	Assembly, Convection
38	W10346153	Baffle, Full Convection
39	W10273002	Bracket, Oven Support

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
40	W10346147	Pan, Bake
41	W10162255	Duct, Cover
42	W10162254	Duct, Cooling
43	W10162259	Assembly, Cooling Fan
44	W10655485	Shield, Wire
45	W10162241	Channel, Rear
46	W10162248	Cover, Wire
47	W10289172	Cover, Back
48	W10686408	Kit, Reservoir (Steam Rack)
49	W10554007	Rack, Steam
50	W10554006	Rack, Maximum Capacity INSULATION
	W10289173	Insulation, Wrap
	W10575374	Insulation, Bottom
	4820F015-59	Insulation, Strap
	W10162240	Insulation, Back
	7111P017-60	Clamp, Wire

DOOR PARTS

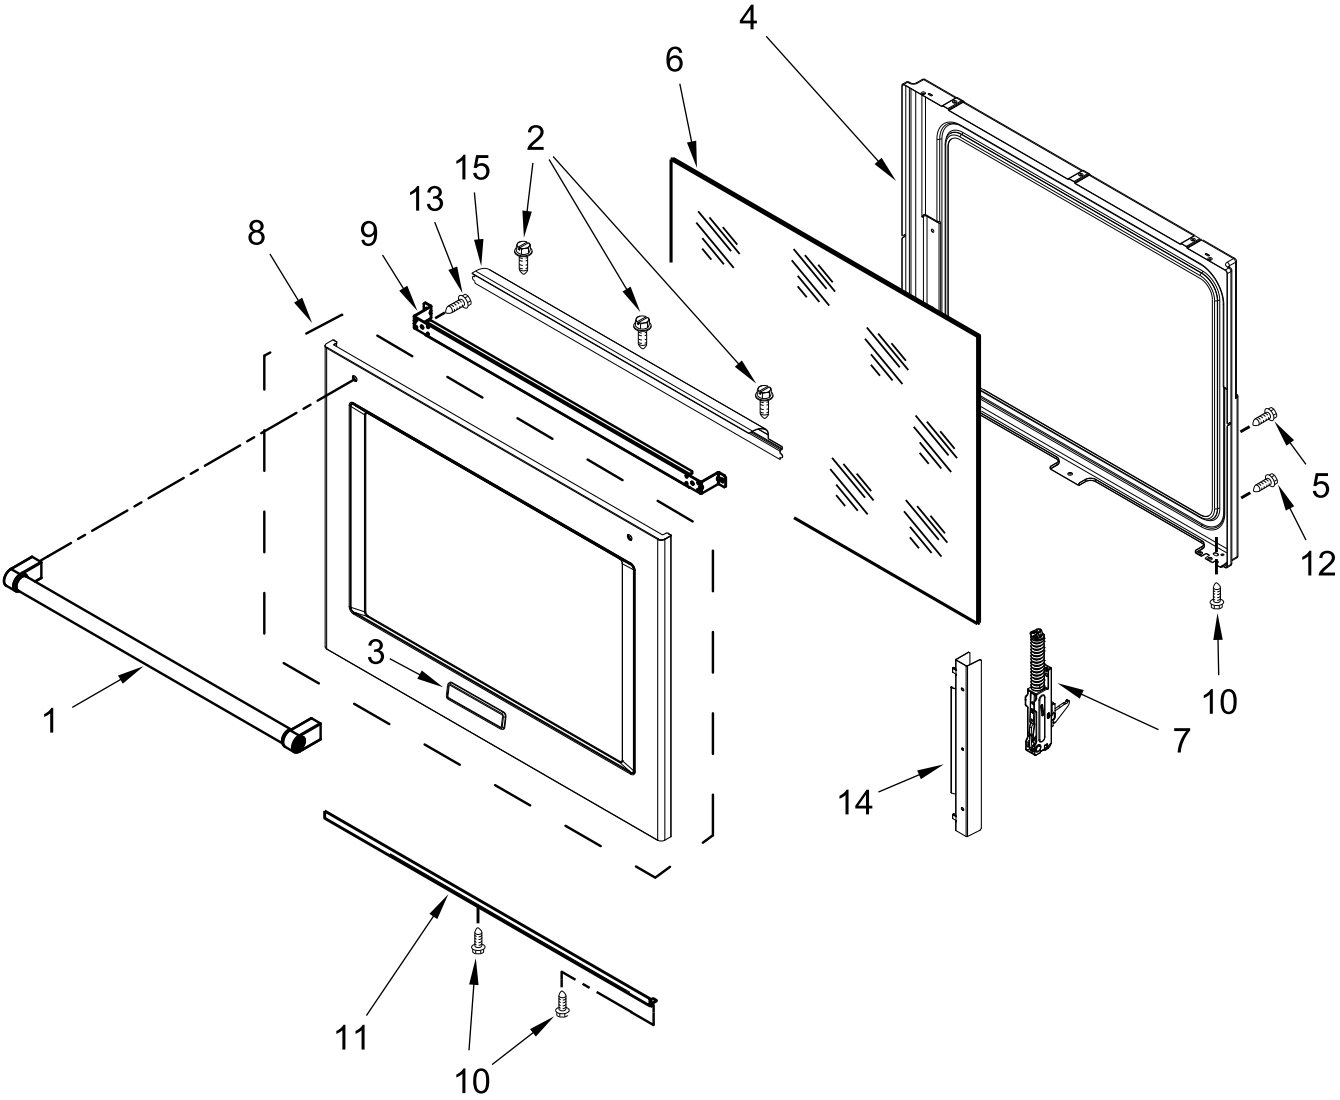


DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle, Door
	W10551000	Stainless
2	9780274	Screw
3		Badge
	W10518672	Grey
4	W10541882	Liner, Door
5	W10031790	Screw
6	W10541888	Glass, Inner
7	W10388635	Hinge, Door (Active)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
8		Panel, Door
	W10634273	White
	W10634272	Black
	W10634271	Stainless
9	W10541911	Bracket, Glass Upper Handle
10	W10327235	Screw
11	W10541885	Support, Glass
12	W10031780	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
13	8533988	Screw
14	W10541883	Hinge, Support Rail
15		Scoop, Door
	W10613790	White
	W10613791	Black
	W10551024	Stainless

DRAWER PARTS

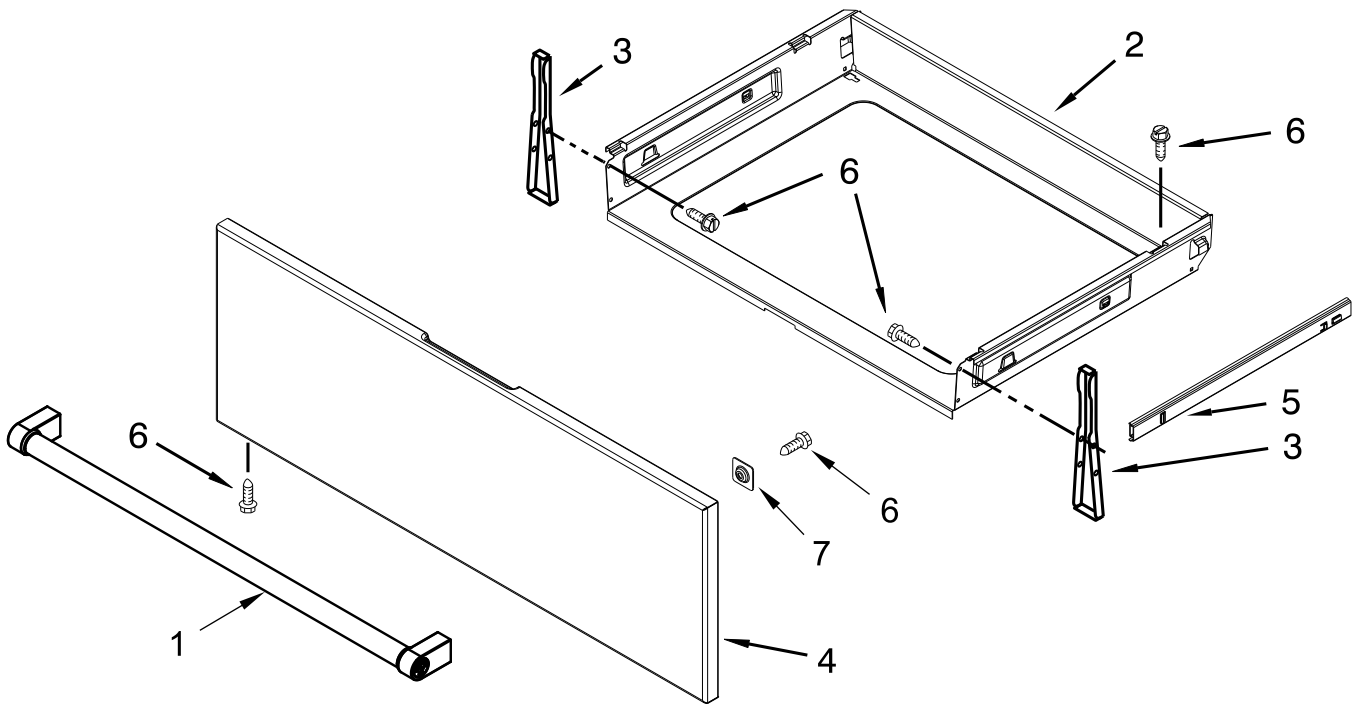

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle, Drawer
	W10551000	Stainless
2	W10688022	Drawer, Storage
3	W10318026	Bracket, Mounting

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
4		Panel, Drawer Front
	W10541952	White
	W10541953	Black
	W10541954	Stainless

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
5	W10441804	Slide, Drawer (Left)
	W10441805	Slide, Drawer (Right)
6	3196169	Screw
7	3823F017-45	Spacer, Handle

OPTIONAL PARTS (NOT INCLUDED)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	4392899	Biscuit/Bisque
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	4392901	Biscuit/Bisque

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		CLEANERS / POLISHES
	31605	Kit, Cooktop Care
	31463A	Protectant, Cooktop
	W10355051	Cleaner, Cooktop
	W10355016	Cleaner, Stainless Steel
	WA906B	Scraper, Cooktop
	W10355049	Wipes, Stainless Steel Cleaning
	W10355010	Cleaner, Kitchen & Appliance
	W10275756	Cleaner, Granite
	31617A	Cleaner, Grate & Drip Pan
	W10432019	Alt Cleaning Kit
	W10391473	Pad, Cooktop Cleaning
		MISCELLANEOUS
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan & Roasting
	W10432539	Griddle
	W10432545	Kit, Grill
	242905	Kit, Canning Unit
		TRIM KITS
	W10675026	Black
	W10675027	White
	W10675028	Stainless
		BACKSPLASH ASSEMBLY
	W10655449	Black
	W10655448	White
	W10655450	Stainless