
MFWSF110 MOUNTING FRAME INSTRUCTIONS

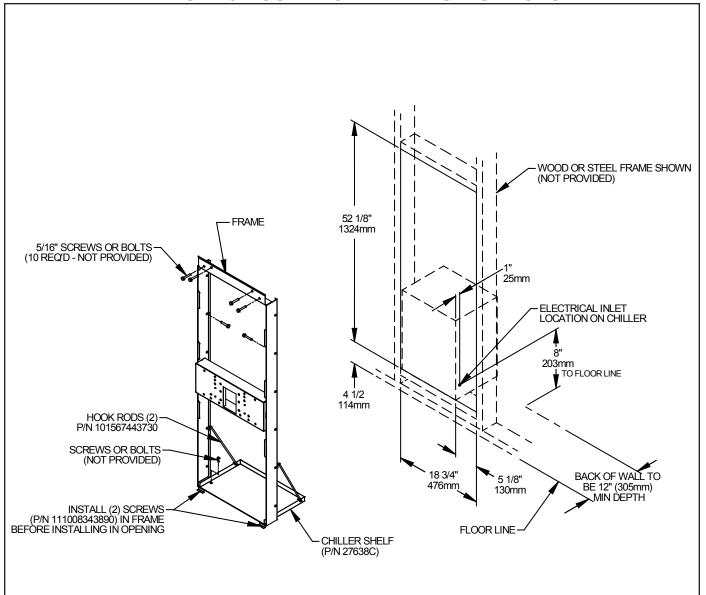

- 1. Cut a square rectangular wall opening 18 3/4" (476mm) W x 52 1/8" (1324mm) H and 4 1/2" (114mm) above the floor line. These dimensions are required to obtain proper rim and bubbler heights for compliance with ANSI standard A117.1.
- Reinforce the wall opening on all sides so that it will adequately support the water fountain. This reinforcement
 must support up to 150 lbs static load and provide a means for securing the frame assembly in place.
 NOTE: Building construction must allow for adequate air flow on both sides and top of remote chiller unit.
 Minimum of 4" (102mm) is required.
- 3. **Install plumbing and electrical rough-ins.** A junction box for a (3) wire, 10 amp branch circuit is provided on the inside of the chiller. (Standard 120 Volts, 60 Hz and single phase).
- 4. Remove frame assembly and related hardware from packaging. Install the frame squarely in wall opening with frame upright edges flush with the finished wall face. Place shelf inside frame and line up the (2) holes on each. Insert loose ends of rods into holes on sides of shelf panel. Using appropriately sized screws or bolts (not provided), fasten the shelf and frame to bottom of wall opening. Secure the frame sides and top to the wall using (10) 5/16" bolts or screws (not provided). Tighten securely.

NOTE: Be sure that frame is squared in location. Do not use less than required screw quantity and size.

FOR PARTS, CONTACT YOUR LOCAL DISTRIBUTOR OR CALL 1.800.323.0620