



MADE IN THE USA


Model #: 5100

WHEEL PULLDOWN FAUCET INSTALLATION INSTRUCTIONS

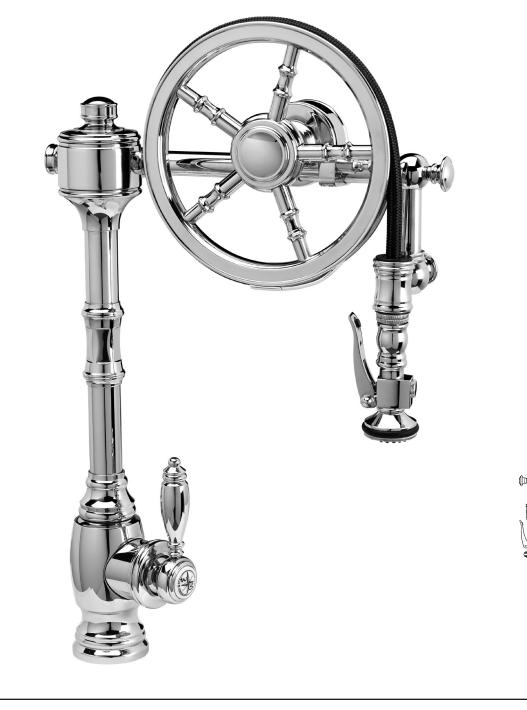


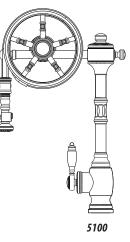


BEFORE YOU BEGIN YOUR INSTALLATION:

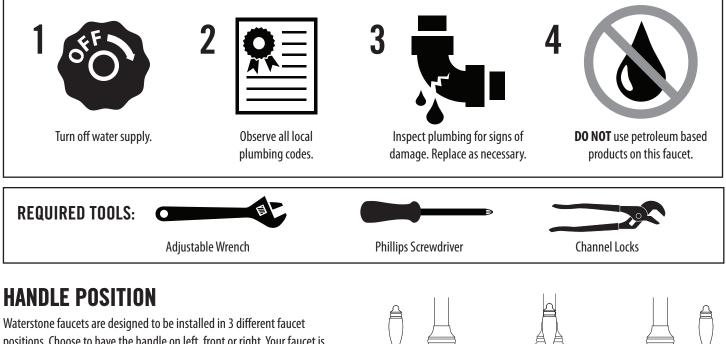

positions. Choose to have the handle on left, front or right. Your faucet is factory configured for the most common positions - a front and right side installation. To reverse this and have the handle positioned on the left, connect the hose for cold water to the hot supply and the hose for hot water to the cold supply. This will maintain the relationship of pulling the handle for hot water or pushing for cold water.

 




 


HANDLE ON RIGHT

WHEEL FAUCET INSTALLATION

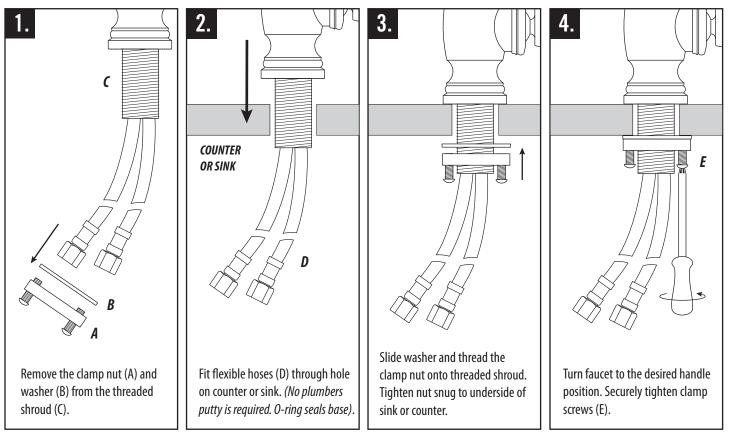


CONNECTING SUPPLY HOSES

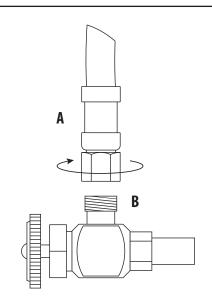

Before connecting supply hoses, flush supply stops to clear any debris. Place a bucket underneath stops and run water for 5 to 10 seconds. Turn water off. Carefully position hot and cold supplies so they will not interfere with other hoses. Connect supply hoses (A) to supply stops (B). DO NOT use teflon tape, plumbers tape or plumbers putty. Turn water back on and check for leaks.

ADJUST HANDLE POSITION AND HANDLE TENSION

 On some kitchen countertops, the handle may hit the backsplash when the faucet handle is positioned to the left or right (Fig. 1). Waterstone gives you the option of adjusting the handle 45 degrees to avoid hitting backsplash.




ORIGINAL FACTORY POSITION MAY HIT BACKSPLASH NEW ADJUSTED POSITION CLEARS BACKSPLASH

FIG.1

Place a small standard screwdriver in slot at bottom of metal ring that surrounds handle button (A). Gently pry button from handle (B). Unscrew and remove holding screw (C) and washer (D). Hold handle in a vertical position. Wiggle and pull straight off faucet. Rotate handle away from backsplash 45 degrees then slide handle back onto valve stem (E). Insert holding screw with washer and tighten. Snap handle cap back into place. To adjust handle tension, turn ring (F) clockwise to increase or counterclockwise to decrease handle tension.

OPTIONAL DECORATIVE BUTTONS

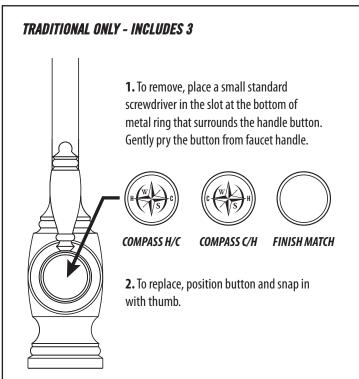

LIFETIME WARRANTY


All Waterstone products manufactured by Waterstone carry a **Limited Lifetime Guarantee** against functional defect in material or workmanship in a residential application. Consult with an authorized Waterstone dealer for complete information about our warranty.

For any questions or concerns about your faucet's warranty, contact Waterstone.

Waterstone Faucets 41180 Raintree Court Murrieta, CA 92562 1-888-304-0660 www.waterstoneco.com



CLEANING DEBRIS SCREEN

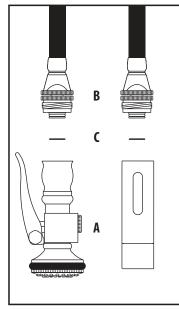


1. Turn off water supplies underneath sink and remove any water pressure by opening the faucet handle.

2. Unscrew sprayer (A) from spray hose by holding knurled swivel (B).


 Inspect, remove and clean debris screen (C) in sprayer.
Once cleaned, replace debris screen and reattach to swivel.
Close faucet handle and turn on water supplies. Make sure sprayer is secure and sealed by running faucet.

CLEANING AERATOR - CONTEMPORARY

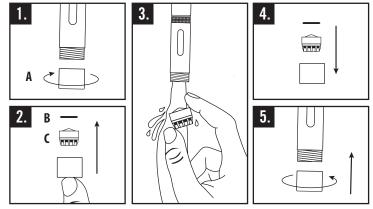

- 1. Gently unscrew and remove spout tip (A) by hand.
- 2. Remove O-ring (B). To remove aerator (C), push with finger from bottom.
- 3. Thoroughly rinse aerator with water until all debris is removed.
- 4. Place aerator, then O-ring back into spout tip.
- 5. Gently screw spout tip, by hand, snuggly back onto spout.

CLEANING AERATOR - TRADITIONAL

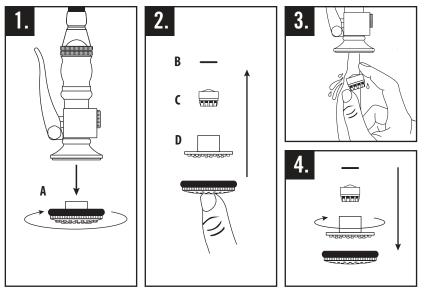

1. Gently unscrew and remove spray face (A) by hand.


2. To remove O-ring (B), aerator (C) and spray face insert (D), push with finger from bottom.

3. Thoroughly rinse aerator with water until all debris is removed.


4. Place spray face insert back into spray face and spin until it clicks into place. Next, place

aerator and O-ring into spray face. Gently screw spray face, by hand, snuggly back onto sprayer.


INSTALL SOAP/LOTION DISPENSER (OPTIONAL)

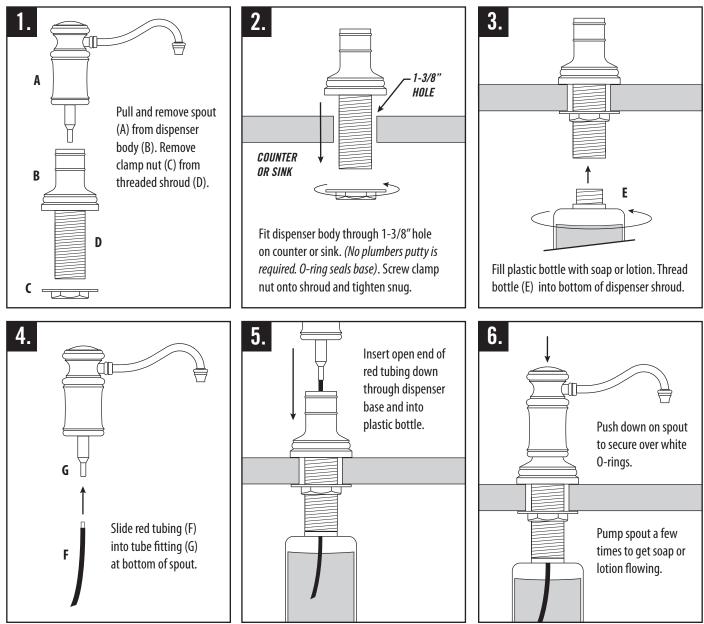


INSTALL AIR SWITCH (OPTIONAL)

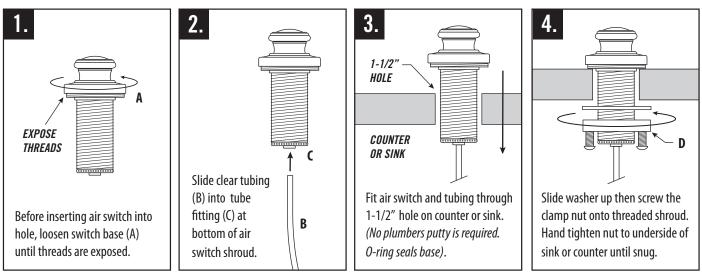

CONTINUED FROM PREVIOUS PAGE

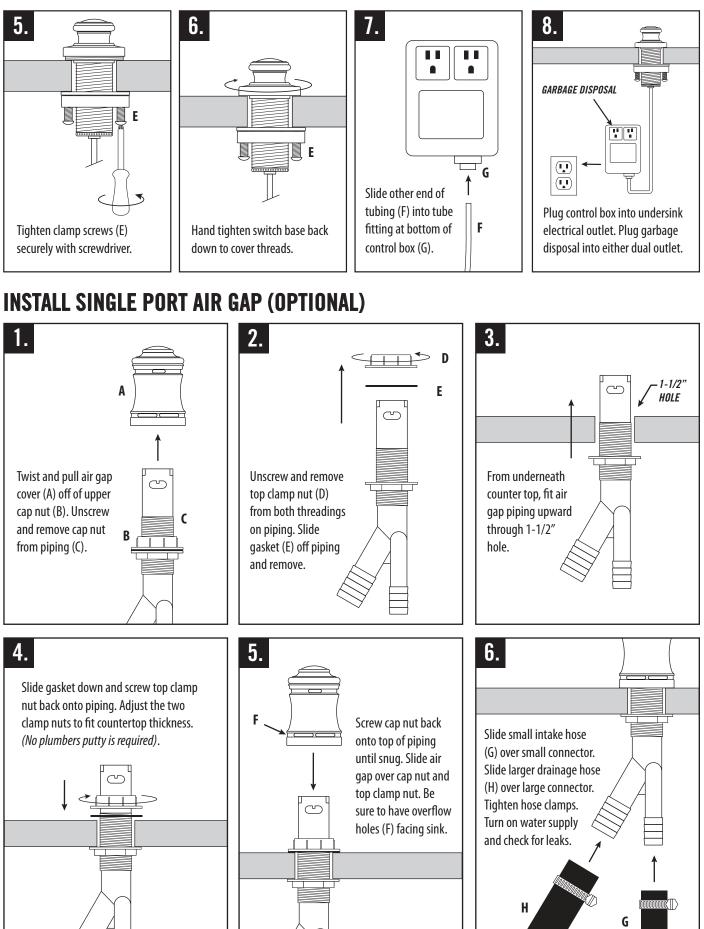

INSTALL DUAL PORT AIR GAP (OPTIONAL)

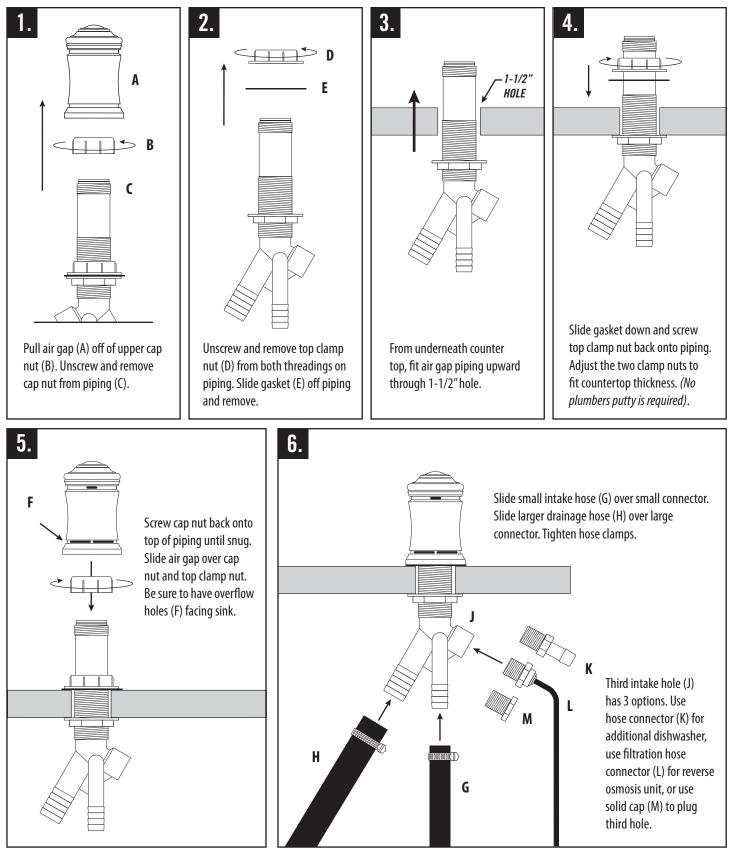

WATERSTONE FAUCETS