


Not Shown: A-2 and A-41

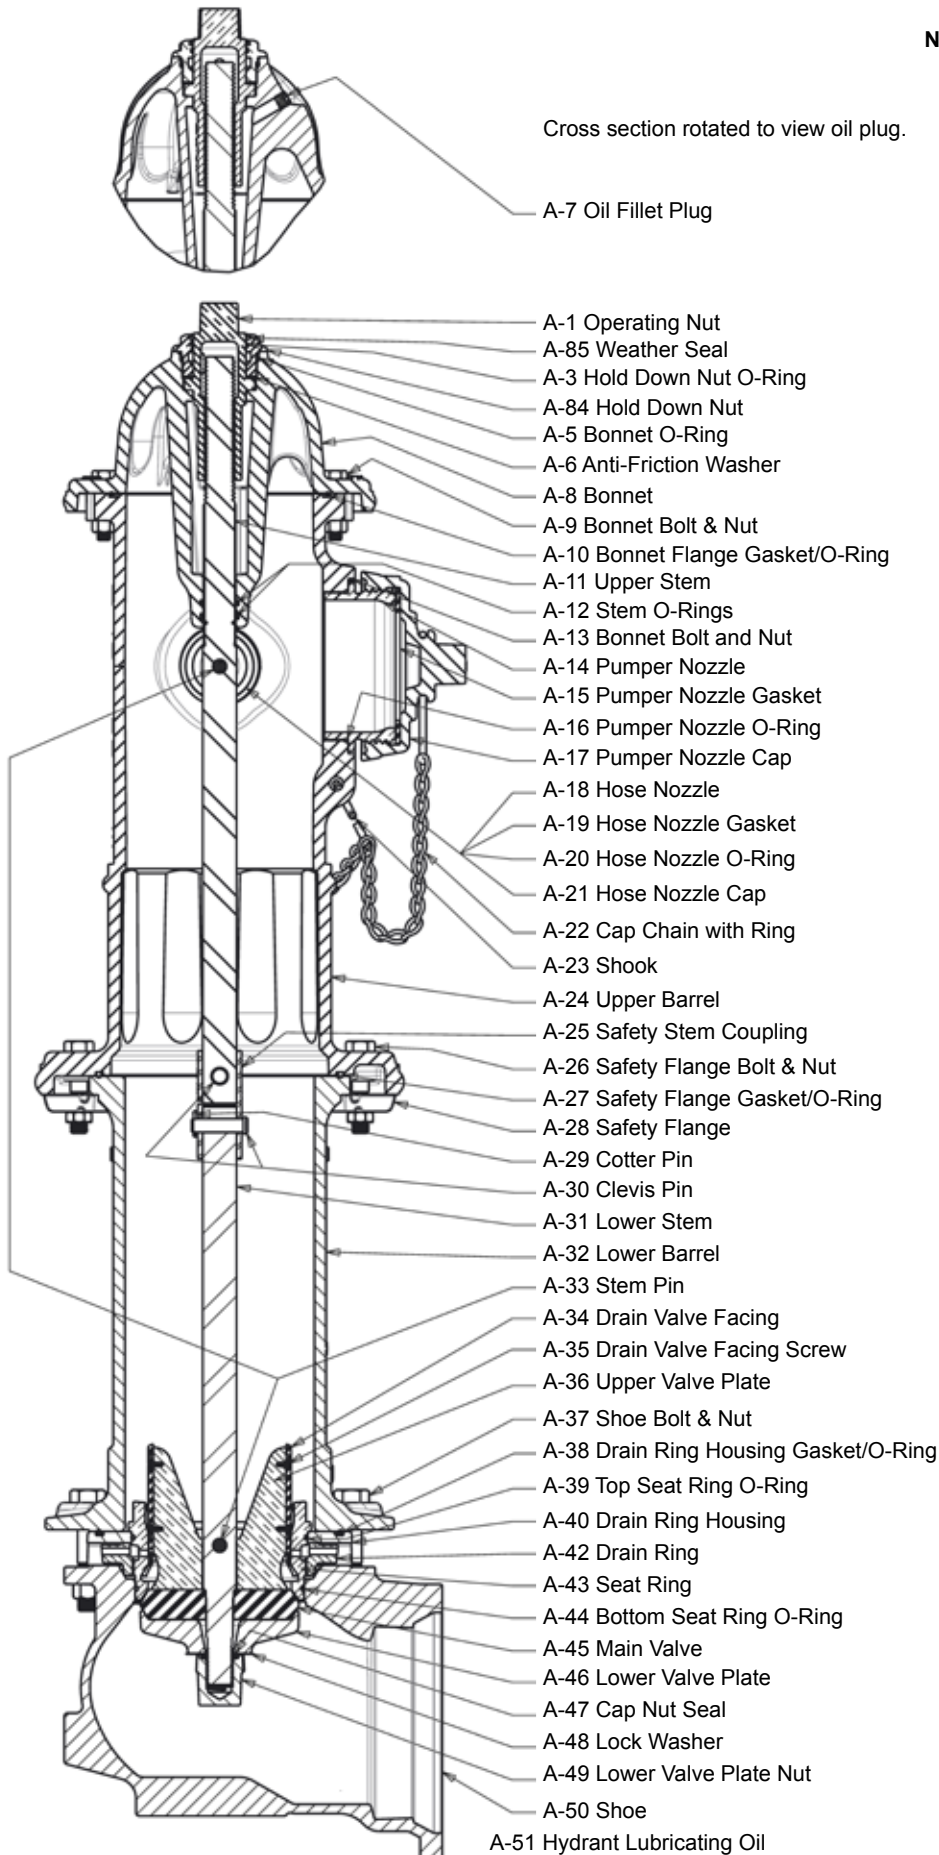

		1975 - Present 4-1/2" and 5-1/4"
A-33	Stem pin for upper or lower stems	195347
A-34	Drain valve facing	142811
A-35	Drain screw (4 required)	142812
A-36	Bronze upper valve plate (includes A-34 and A-35)	184071 (4-1/2") 184055 (5-1/4")
A-37	Shoe bolt/nut (6 required)	280024
		1975 - 1996
A-38	Drain ring housing gasket	142859 (4-1/2") 142805 (5-1/4")
		1997 - Present
A-38	Drain ring o-ring	190348 (4-1/2") 190349 (5-1/4")
A-39	Top seat o-ring	195186 (4-1/2") 195083 (5-1/4")
A-40	Drain ring housing	148585 (4-1/2") 148584 (5-1/4")

		1975 - 1996 4-1/2" and 5-1/4"	1997 - Present
A-41	Bolt and Nut (Drain Ring Housing) (2 Required)	280070	N/A
A-42	Bronze drain ring		142833 (4-1/2") 142804 (5-1/4")
A-43	Bronze seat ring		142830 (4-1/2") 142764 (5-1/4")
A-44	Bottom seat o-ring		195161 (4-1/2") 142893 (5-1/4")

		1975 - 1996 (Non-Reversible Rubber)	1975 - 2015 (Reversible Rubber)	2016 - Present (Encapsulated Rubber)
		Interchangeable		
A-45	Main valve §	195800 (4-1/2")	190353 (4-1/2")	290614 (4-1/2")
		192913 (5-1/4")	190354 (5-1/4")	290615 (5-1/4")
A-46	Lower valve plate	175286-1 (4-1/2")	190355-1 (4-1/2")	190355-1 (4-1/2")
		175233-1 (5-1/4")	190356-1 (5-1/4")	190356-1 (5-1/4")
A-47	Cap nut seal	195547	195547	195547
A-48	Lock washer	142845	142845	142845
A-49	Lower valve plate nut	142771	142771	142771