



WALL CONTROL COMPATIBILITY CHART

The 59W crank timer and VB20W push-button timer are compatible with all units.

Last update: June 2016

| Model no. | Name | VT9W | VT8W version 4.04 and up (NOTE 1) | VT7W version 2.04 and up (NOTE 1) | VT4W | VT6W | VB60W |
|---|---|------|-----------------------------------|-----------------------------------|------|------|-------|
| ERV140TE | ERV140TE | | PJ1214xxxxxxx (NOTE 2) | PJ1214xxxxxxx (NOTE 2) | | | |
| HRV160TE | HRV160TE | | | | | | |
| HRV160T | HRV160T | | | | | | |
| ERV200TE, HRV200TE, ERV250TE & HRV250TE | ERV200TE, HRV200TE, ERV250TE & HRV250TE | | | | | | |
| ERV70T, ERV70S | ERV70T, ERV70S | | | | | | |
| HRV80T, HRV80S | HRV80T, HRV80S | | | | | | |
| HRV90T, HRV90S | HRV90T, HRV90S | | | | | | |
| HRV150S | HRV150S | | | | | | |
| HRV190S | HRV190S | | | | | | |
| ERV180S | ERV180S | | | | | | |
| ERV110T, ERV110S | ERV110T, ERV110S | | | | | | |
| ERV120T, ERV120S | ERV120T, ERV120S | | | | | | |
| HRV120T, HRV120S | HRV120T, HRV120S | | | | | | |
| ERV100SP | ERV100SP | | | | | | |
| ERV100S | ERV100S | | | | | | |
| ERVS100S | ERVS100 | | | | | | |
| HRVH100S & ERVH100S | HRVH100S & ERVH100S | | | | | | |

NOTE 1: Wall control including configurable low speed recirculation in intermittent mode.

NOTE 2: Low speed recirculation in intermittent mode starts with this unit serial number.

However, this control remains compatible with units with serial number under this one.

| | |
|---------------------|---|
| | Compatible |
| | Not compatible |
| Letters and numbers | This code is the serial number of the ventilation unit; consider only the letters and numbers mentioned, not the "xxx" E. g.: ERV140TE with serial number PJ12150004007 is fully compatible with VT8W version 4.04 and VT7W version 2.04 (PJ1215 is higher than PJ1214). |

Subject to change without prior notice.