 


INSTALLATION INSTRUCTIONS

READ IMPORTANT SAFETY TIPS BEFORE PROCEEDING WITH INSTALLATION


SAFETY TIPS

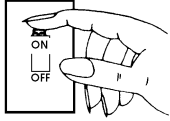

Turn fixture off! (Place wall switch in off position, if fixture has built-in switch or chain pull, switch or pull chain so fixture is off.)




Next - go to the main fuse box. If your fuse box has an ON/OFF switch, simply place main power switch in OFF position.

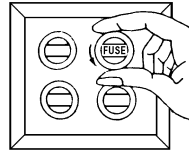


Screw-in type fuses - unscrew the fuse or fuses that control the power to the fixture or room you are working in.

 1

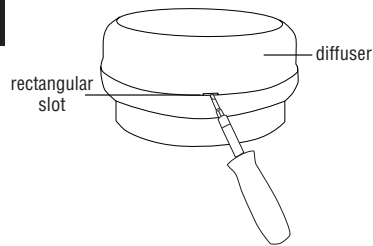


Remove the Diffuser. Insert a flat bladed screw driver into the rectangular slot and rotate the blade. The Diffuser will then pop out.

 2

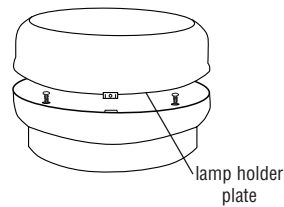

Remove the screws that secure the Lamp holder Plate to the fixture body. A round fixture has three and a square fixture has four screws in the lamp holder plate.

 3

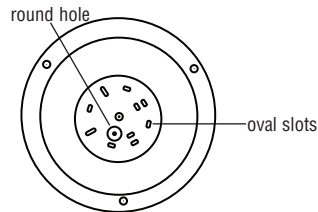

Select desired mounting method. Over an outlet box or with conduit and fixture mounted directly to desired surface. The fixture may be mounted to either a wall or ceiling.

 
(A) OUTLET BOX: Knock out two of the oval slots that match the outlet mounting box threaded holes and whose location will result in the desired fixture orientation. Knock out the round hole.

-Feed the power supply wires (including ground) through the round hole and secure the enclosure to the mounting surface with two 8-32 x 1/2 screws (provided).

(B) CONDUIT: Knock out two of the oval slots that are opposite of each other. Orientate the enclosure to desired position. Mark slot location on the mounting surface. Drill out desired conduit outlet(s). Attach the enclosure to the surface using an appropriate method.

-Attach the conduit to the fixture. Use fittings suitable for a wet location if the fixture is installed outdoors.

4

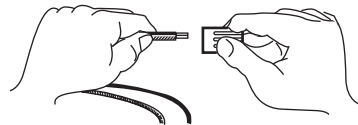

Connect the black fixture wire(s) to the black supply wire, the white fixture wire(s) to the white supply wire and the fixture ground to the supply ground using wire connectors (not provided).

-Take the black fixture wire(s) and place evenly against the black wire from the conduit or outlet box. Do not twist wires together before using a wire connector.

-Fit a wire connector over the wires and thread the connector clockwise until you feel a firm resistance.

-Gently try to remove the wires from the connector, if you can remove the wires carefully.

 
-Repeat process for the connection of white fixture wire(s) to white wire from outlet box or conduit and fixture ground wire and ground wire from outlet box or conduit.

ISFK39XLE0S

INSTALLATION INSTRUCTIONS

READ IMPORTANT SAFETY TIPS BEFORE PROCEEDING WITH INSTALLATION


SAFETY TIPS

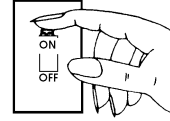

Turn fixture off! (Place wall switch in off position, if fixture has built-in switch or chain pull, switch or pull chain so fixture is off.)




 Next - go to the main fuse box. If your fuse box has an ON/OFF switch, simply place main power switch in OFF position.

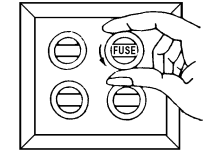


Screw-in type fuses - unscrew the fuse or fuses that control the power to the fixture or room you are working in.

 1

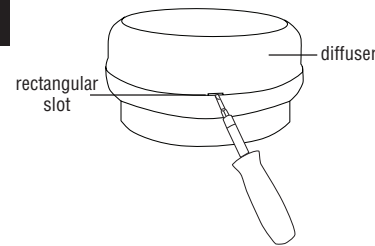


Remove the Diffuser. Insert a flat bladed screw driver into the rectangular slot and rotate the blade. The Diffuser will then pop out.

 2

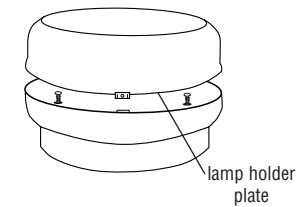

Remove the screws that secure the Lamp holder Plate to the fixture body. A round fixture has three and a square fixture has four screws in the lamp holder plate.

 3

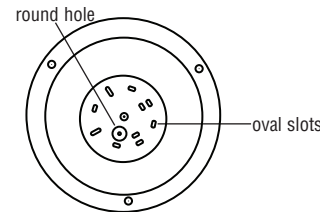

Select desired mounting method. Over an outlet box or with conduit and fixture mounted directly to desired surface. The fixture may be mounted to either a wall or ceiling.

 
(A) OUTLET BOX: Knock out two of the oval slots that match the outlet mounting box threaded holes and whose location will result in the desired fixture orientation. Knock out the round hole.

-Feed the power supply wires (including ground) through the round hole and secure the enclosure to the mounting surface with two 8-32 x 1/2 screws (provided).

(B) CONDUIT: Knock out two of the oval slots that are opposite of each other. Orientate the enclosure to desired position. Mark slot location on the mounting surface. Drill out desired conduit outlet(s). Attach the enclosure to the surface using an appropriate method.

-Attach the conduit to the fixture. Use fittings suitable for a wet location if the fixture is installed outdoors.

4

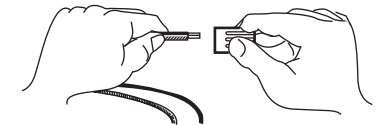

Connect the black fixture wire(s) to the black supply wire, the white fixture wire(s) to the white supply wire and the fixture ground to the supply ground using wire connectors (not provided).

-Take the black fixture wire(s) and place evenly against the black wire from the conduit or outlet box. Do not twist wires together before using a wire connector.

-Fit a wire connector over the wires and thread the connector clockwise until you feel a firm resistance.

-Gently try to remove the wires from the connector, if you can remove the wires carefully.

 
-Repeat process for the connection of white fixture wire(s) to white wire from outlet box or conduit and fixture ground wire and ground wire from outlet box or conduit.

ISFK39XLE0S

INSTALLATION INSTRUCTIONS


CONTINUED FROM OTHER SIDE

5

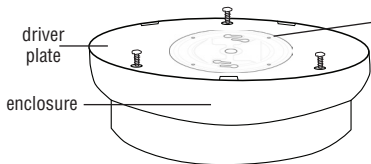

Attach the driver plate to the enclosure with three (round) or four (square) screws. No lamp replacement required! Integral LED light engine supplied. Do not remove protective cover from LED light engine.

 
6

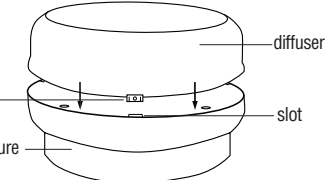


Attach the diffuser to the fixture enclosure. Align the three or four tabs on the diffuser with the slots on the enclosure and push diffuser into the enclosure.

Note Outdoor Fixtures must be caulked with an Acrylic Caulk where the base of the enclosure meets the mounting surface. This provides a water tight seal.

 This fixture may have an integral photo sensor that turns the fixture off during the day and on at night. The photo sensor is not adjustable. The fixture could possibly cycle on and off due to light reflected from nearby surfaces into the photo sensor. If cycling occurs, remove the photo sensor nut and install the swivel hood and base.



The hood and base are adjustable. The hood can be rotated and the base can be cut along the dotted line to reduce overall length. Check operation before cutting the base.



Clean only with mild soap and water. Avoid spraying with Cleansers, Insecticides, and Pesticides that a petroleum based hydrocarbon products. These will degrade Luminaire.

CAUTION: Do not turn on without diffuser installed. Do not touch LEDs or circuit board. LED optics could be damaged. No lamp replacement required! Integral LED light engine supplied. Do not remove protective cover from LED light engine.

FIVE YEAR (60 MONTH) LIMITED WARRANTY

Inter-Global warrants this lighting fixture to be free from defects in material and workmanship for a period of five (5) years from the date of purchase and agrees, at its option, to repair or replace any defective product without charge. **IMPORTANT: THIS WARRANTY DOES NOT COVER ANY DAMAGE RESULTING FROM ACCIDENT, MISUSE OR ABUSE, ABNORMAL USAGE, FAULTY INSTALLATION, NON-RESIDENTIAL USE, NEGLIGENCE, DAMAGE IN TRANSIT, OR REPAIR OR ALTERATIONS TO THE PRODUCT, IMPROPER MAINTENANCE, OR ANY CAUSE, OTHER THAN OUR DEFECTIVE MATERIAL OR WORKMANSHIP.**

For warranty service, call Inter-Global at 800-325-7364 to request RGA.

NOTE: Inter-Global shall not be liable for any special, incidental, or consequential damages arising out of or in connection with the use, manufacture, design, sale, or performance of its products.

No other warranties, express or implied, written or oral are authorized by Inter-Global. **ALL IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE SHALL BE LIMITED IN DURATION FOR A PERIOD OF 60 MONTHS FROM THE ORIGINAL DATE OF PURCHASE.** Seller shall in no event be liable for any breach of warranty in an amount that exceeds the price of the specific product.

 
This warranty gives you specific legal rights. You may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages or the limitation on the duration of how long an implied warranty lasts, so the above exclusions and limitations may not apply to you.

Inter-Global takes pride in this production and we hope that it brings you many years of enjoyment. If you have comments, please call 800-325-7364.

INSTALLATION INSTRUCTIONS


CONTINUED FROM OTHER SIDE

5

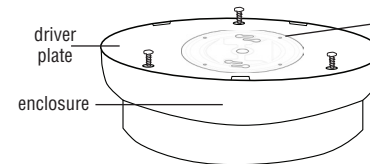

Attach the driver plate to the enclosure with three (round) or four (square) screws. No lamp replacement required! Integral LED light engine supplied. Do not remove protective cover from LED light engine.

 
6

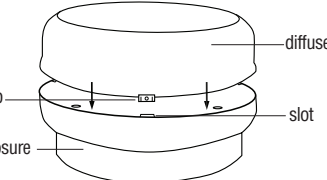


Attach the diffuser to the fixture enclosure. Align the three or four tabs on the diffuser with the slots on the enclosure and push diffuser into the enclosure.

Note Outdoor Fixtures must be caulked with an Acrylic Caulk where the base of the enclosure meets the mounting surface. This provides a water tight seal.

 This fixture may have an integral photo sensor that turns the fixture off during the day and on at night. The photo sensor is not adjustable. The fixture could possibly cycle on and off due to light reflected from nearby surfaces into the photo sensor. If cycling occurs, remove the photo sensor nut and install the swivel hood and base.



The hood and base are adjustable. The hood can be rotated and the base can be cut along the dotted line to reduce overall length. Check operation before cutting the base.



Clean only with mild soap and water. Avoid spraying with Cleansers, Insecticides, and Pesticides that a petroleum based hydrocarbon products. These will degrade Luminaire.

CAUTION: Do not turn on without diffuser installed. Do not touch LEDs or circuit board. LED optics could be damaged. No lamp replacement required! Integral LED light engine supplied. Do not remove protective cover from LED light engine.

FIVE YEAR (60 MONTH) LIMITED WARRANTY

Inter-Global warrants this lighting fixture to be free from defects in material and workmanship for a period of five (5) years from the date of purchase and agrees, at its option, to repair or replace any defective product without charge. **IMPORTANT: THIS WARRANTY DOES NOT COVER ANY DAMAGE RESULTING FROM ACCIDENT, MISUSE OR ABUSE, ABNORMAL USAGE, FAULTY INSTALLATION, NON-RESIDENTIAL USE, NEGLIGENCE, DAMAGE IN TRANSIT, OR REPAIR OR ALTERATIONS TO THE PRODUCT, IMPROPER MAINTENANCE, OR ANY CAUSE, OTHER THAN OUR DEFECTIVE MATERIAL OR WORKMANSHIP.**

For warranty service, call Inter-Global at 800-325-7364 to request RGA.

NOTE: Inter-Global shall not be liable for any special, incidental, or consequential damages arising out of or in connection with the use, manufacture, design, sale, or performance of its products.

No other warranties, express or implied, written or oral are authorized by Inter-Global. **ALL IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE SHALL BE LIMITED IN DURATION FOR A PERIOD OF 60 MONTHS FROM THE ORIGINAL DATE OF PURCHASE.** Seller shall in no event be liable for any breach of warranty in an amount that exceeds the price of the specific product.

This warranty gives you specific legal rights. You may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages or the limitation on the duration of how long an implied warranty lasts, so the above exclusions and limitations may not apply to you.

Inter-Global takes pride in this production and we hope that it brings you many years of enjoyment. If you have comments, please call 800-325-7364.