-(ISI)

WALL-MOUNT TUB FAUCET

INSTALLATION INSTRUCTIONS

Before installing, read entire installation instructions. Observe all local building and safety codes.

For the following installation instructions for your new faucet it is assumed that any old fixtures have been removed and that the water supply lines have been relocated to the proper installation location. A $\frac{1}{2}$ " pipe nipple should be attached to the water supply line extending $\frac{1}{2}$ " from the finished wall.

Unpack and inspect the product for any shipping damages. If you find damages, do not install. Contact Customer Service at 1-866-855-2284. If you need assistance or have questions while installing your faucet, contact Customer Service.

We recommend consulting a professional if you are unfamiliar with installing bathroom fixtures. Signature Hardware accepts no liability for any damage to the floor, walls, plumbing or for personal injury during installation.

TOOLS AND MATERIALS:

Allen Wrench (provided)LevelThread SealantSilicone Sealant

INSTALLATION

- 1. Remove the wall mount couplers from the faucet by unscrewing the large hex nuts behind the faucet handles.
- 2. Place thread sealant or plumber's tape on the ¹/₂" pipe nipples protruding from the wall.
- 3. Run a bead of silicone sealant along the base of the wall couplers.
- 4. Thread the wall couplers onto the $\frac{1}{2}$ " pipe nipples.
- 5. Make sure the bases of the couplers are firmly against the wall and that the couplers are aligned properly. Wipe away any excess sealant with a damp cloth.
- 6. Place the faucet body on the wall couplers. Hand tighten the coupling nuts to secure.
- 7. Install the hand shower and nozzle and any rubber sealing gaskets included.
- 8. When your faucet installation is complete, turn on the water supply. Check to make sure that all connections are tight (no water should be leaking) and that the hot and cold supplies are working correctly. Turn the water on and allow the water to flow through the spout for approximately 60 seconds.



SIGNATURE HARDWARE

customer service: 1.866.855.2284 signature**hardware**.com