



# BARREA™ WALL-MOUNTED LAVATORY FAUCET BARREA™ GRIFO MONTADO EN LA PARED

Bronze PP06845  
Bronce PP06845

This product complies with NSF61/9, ASME/ANSI A112.18.1 and CSA B 125 Standards.  
Este producto cumple con los estándares requeridos por las normas NSF61/9, ASME/ANSI A112.18.1 y CSA B 125.

Installation Instructions ● Instrucciones de Instalación

## Dear Customer

Thank you for selecting our product. We are confident we can fully satisfy your expectations by offering you a wide range of technologically advanced products which directly result from our many years of experience in faucet and fitting production.

## ENGLISH

## Estimado Cliente

## ESPAÑOL


Muchas gracias por elegir nuestro producto. Estamos seguros que podemos satisfacer completamente sus expectativas ofreciéndole una amplia variedad de productos tecnológicamente avanzados, resultado de nuestra amplia experiencia en grifos y en su producción apropiada.

### ATTENTION!

For care, use soft towel with soap and water only! Under no circumstances should you use any chemicals.

### ATENCIÓN!

Para su limpieza, utilice únicamente una toalla suave con agua y jabón. No utilice productos químicos bajo ninguna circunstancia

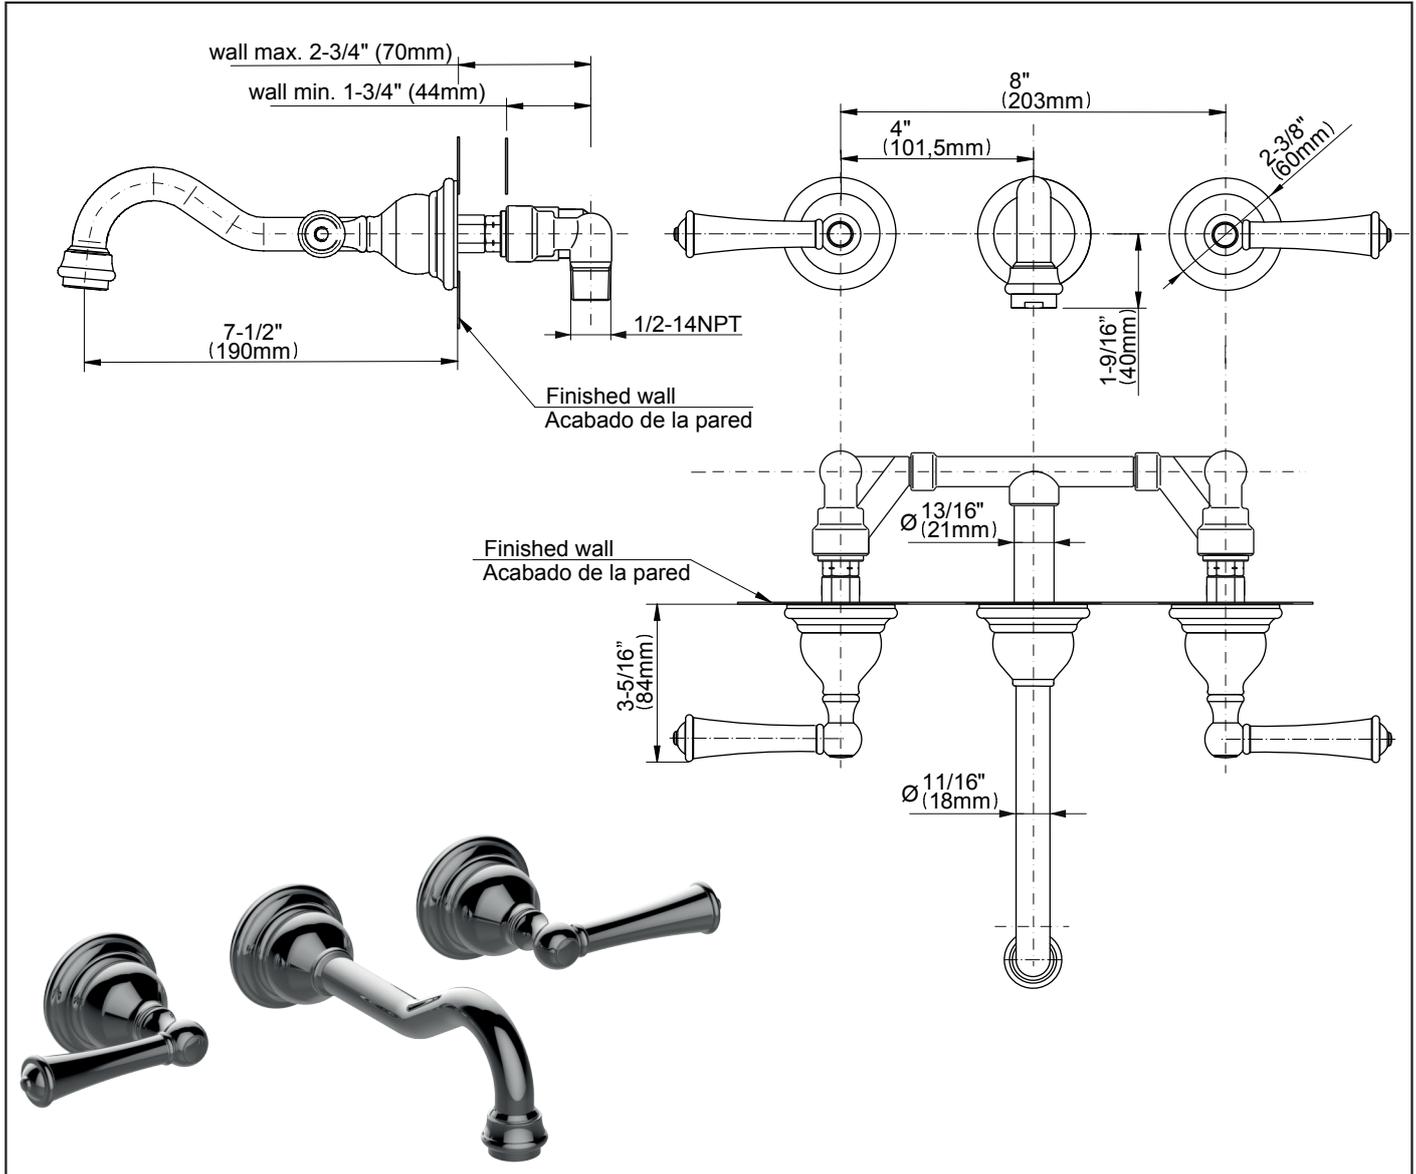

## ENGLISH

## ESPAÑOL

### ➤ For easy installation of your JACUZZI® faucet you will need:

- to READ ALL the instructions completely before beginning,
- to READ ALL the warnings, care and maintenance information.

### ➤ To complete the project, you should:

- gather the tools and all the parts you will need,
- prepare the mounting area,
- mount the faucet,
- connect the supply lines,
- finally test and flush the faucet.

### ➤ You should have the following tools:

- adjustable wrench,
- channel pliers,
- hex key (included in the box),
- plumbers putty or caulking (silicone).

### ➤ Para instalar su grifo JACUZZI® fácilmente, usted necesitará:

- LEER TODAS las instrucciones completamente antes de comenzar,
- LEER TODA la información sobre las advertencias, cuidado y mantenimiento.

### ➤ Para terminar el proyecto, usted debe:

- Tener a la mano las herramientas y todas las piezas que usted necesitará,
- prepare el área para el montaje,
- monte el grifo,
- conecte las líneas de agua,
- finalmente, abra el chorro de agua para probar y limpiar el grifo.

### ➤ Usted debe tener las herramientas siguientes:

- llave ajustable,
- alicates acanalados,
- llave de tuerca hexagonal (incluido en la caja),
- masilla o silicona.




# BARREA™ WALL-MOUNTED LAVATORY FAUCET BARREA™ GRIFO MONTADO EN LA PARED

This product complies with NSF61/9, ASME/ANSI A112.18.1 and CSA B 125 Standards.  
Este producto cumple con los estándares requeridos por las normas NSF61/9, ASME/ANSI A112.18.1 y CSA B 125.

Installation Instructions ● Instrucciones de Instalación

## ROUGH ● PARTE INTERNA

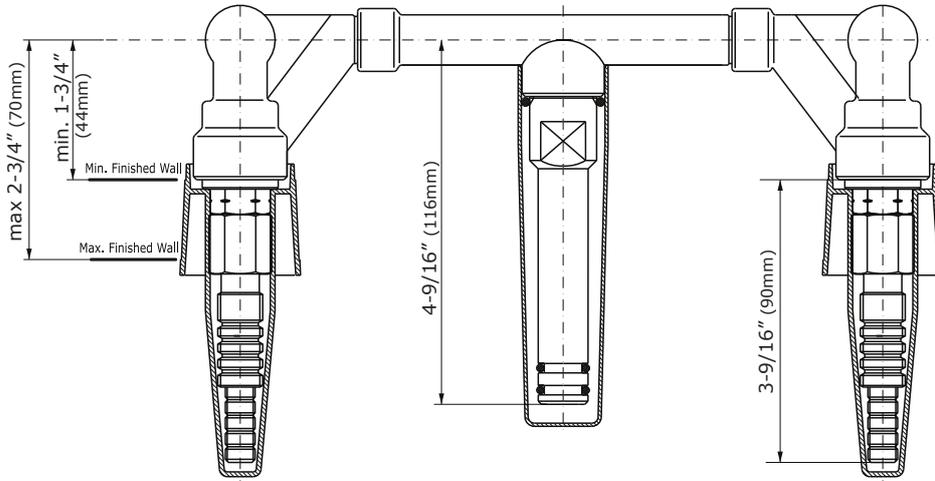

### ENGLISH


### ESPAÑOL

#### FLOW RATE INFORMATION

- Max flow rate 1.2 gpm (4.5 L/min.) at 60 psi (4.1 bar)

#### INFORMACIÓN DE INTENSIDAD DE FLUJO

- Flujo máximo 1.2 gpm (4.5 L/min.) con 60 psi (4.1 bar)

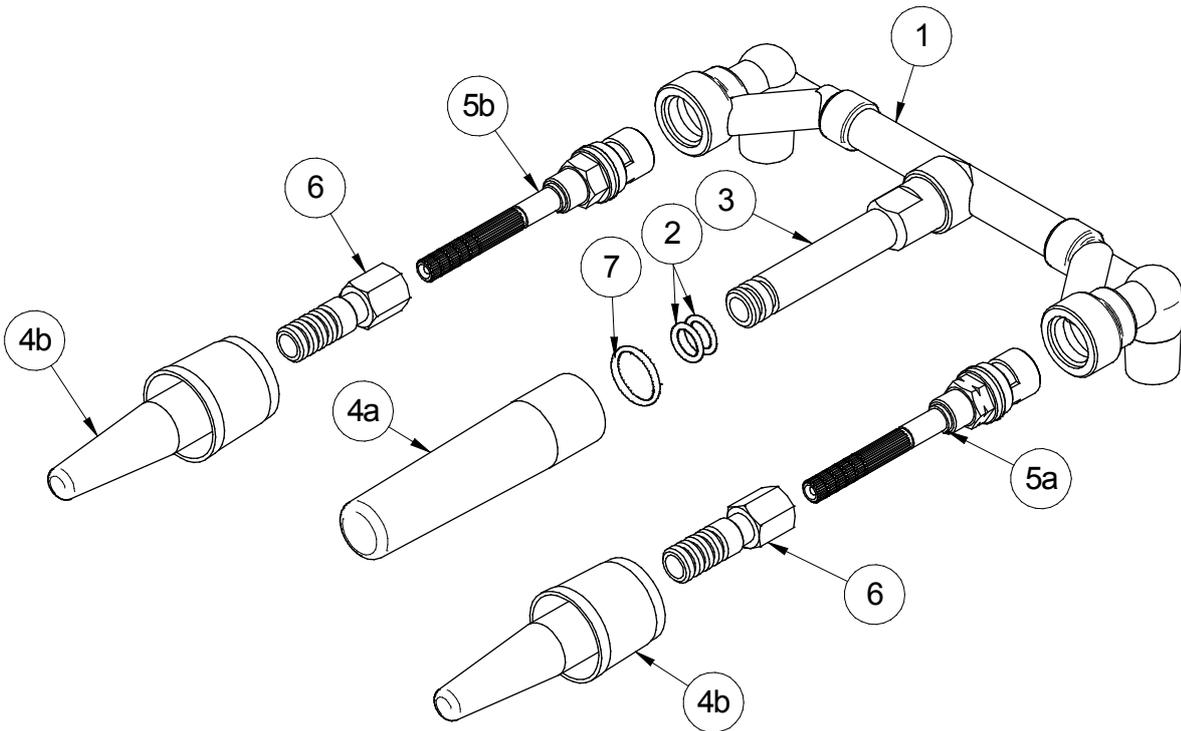

### ENGLISH

### ESPAÑOL

|           |                                               |                                                  |
|-----------|-----------------------------------------------|--------------------------------------------------|
| <b>1</b>  | FAUCET BODY UNIT                              | UNIDAD DEL CUERPO DEL GRIFO                      |
| <b>2</b>  | SEAL O-RING                                   | SELLADOR DE ANILLO (O-RING)                      |
| <b>3</b>  | TUBE OF SPOUT                                 | TUBO DEL CAÑO                                    |
| <b>4a</b> | CAP PROTECTION                                | TAPÓN DE PROTECCIÓN                              |
| <b>4b</b> | CAP PROTECTION                                | TAPÓN DE PROTECCIÓN                              |
| <b>5a</b> | RIGHT CARTRIDGE<br>(counterclockwise opening) | CARTUCHO DERECHO<br>(se abre hacia la izquierda) |
| <b>5b</b> | LEFT CARTRIDGE<br>(clockwise opening)         | CARTUCHO IZQUIERDO<br>(se abre hacia la derecha) |
| <b>6</b>  | EXTENSION                                     | EXTENSIÓN                                        |
| <b>7</b>  | SEAL O-RING                                   | SELLADOR DE ANILLO (O-RING)                      |

**1**




# BARREA™ WALL-MOUNTED LAVATORY FAUCET BARREA™ GRIFO MONTADO EN LA PARED


This product complies with NSF61/9, ASME/ANSI A112.18.1 and CSA B 125 Standards.  
Este producto cumple con los estándares requeridos por las normas NSF61/9, ASME/ANSI A112.18.1 y CSA B 125.

Installation Instructions ● Instrucciones de Instalación

## ROUGH-IN INSTALLATION ● INSTALACIÓN DEL CONJUNTO

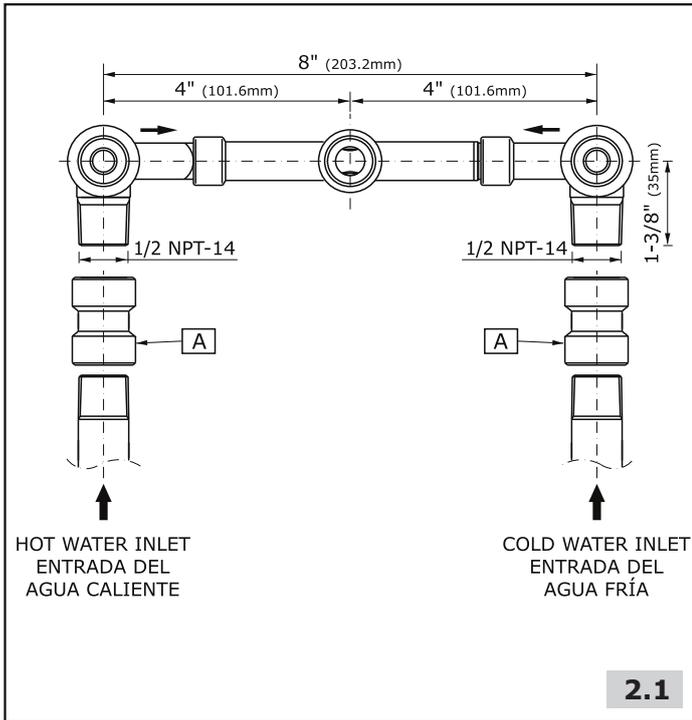

2.1

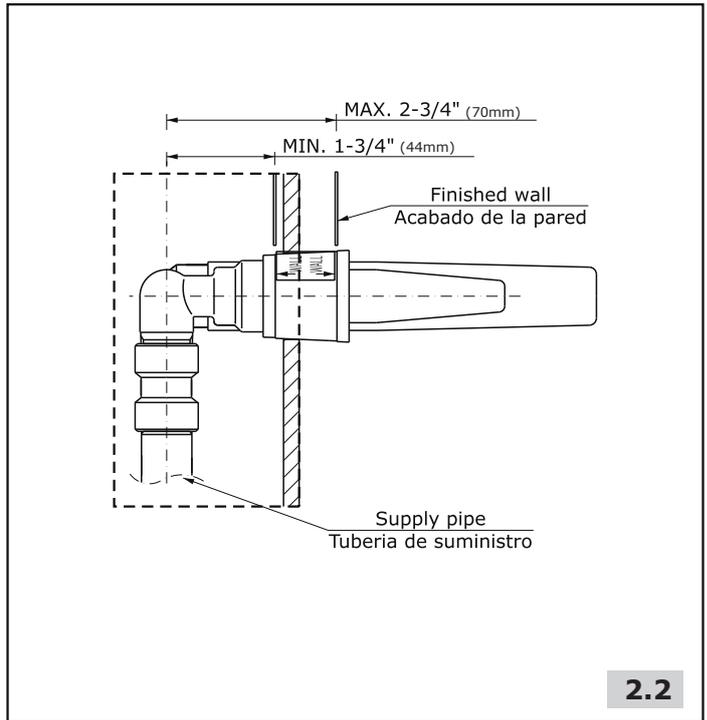

2.2

### ENGLISH

#### See fig. 2.1 & 2.2

Prepare the recess in the wall for the faucet body unit (1) pipe work taking into account the maximum and minimum depth allowed. Arrange the pipe work so that the hot water feed is on the left (HOT) and the cold in on the right (COLD) in relation to the faucet body unit.

Place faucet body unit (1) into the wall recess. Recommended depth for faucet body unit in wall measured from center of faucet body unit (1) to finished wall surface is in the range 1-3/4" (44mm) - 2-3/4" (70mm). Apply thread sealant to the exposed pipe nipple threads of faucet body unit. Screw on a 1/2" pipe connectors (A) onto faucet body unit inlets. Connect HOT water supply to left valve inlet and COLD water supply to right valve inlet.

### ESPAÑOL

#### Vea dis. 2.1 y 2.2

Prepare la hendidura en la pared para el trabajo de la tubería del cuerpo del grifo (1) considerando la profundidad máxima y mínima permitida. Ubique la tubería de tal modo que el suministro del agua caliente esté a la izquierda (CALIENTE) y del agua fría esté a la derecha (FRÍA) de acuerdo al cuerpo del grifo.

Ponga el cuerpo del grifo (1) en la hendidura de la pared. La profundidad recomendada para el cuerpo del grifo en la pared medida del centro del cuerpo del grifo (1) a la superficie acabada de la pared está en el intervalo de 1-3/4" (44mm) - 2-3/4" (70mm). Aplique sellador para rosca a las roscas expuestas del niple del cuerpo del grifo. Atornille las piezas de empalme 1/2" (A) en la entrada de la unidad del cuerpo del grifo. Conecte el suministro de agua CALIENTE a la entrada de la válvula izquierda y agua FRÍA a la entrada de la válvula derecha.





# BARREA™ WALL-MOUNTED LAVATORY FAUCET BARREA™ GRIFO MONTADO EN LA PARED

This product complies with NSF61/9, ASME/ANSI A112.18.1 and CSA B 125 Standards.  
Este producto cumple con los estándares requeridos por las normas NSF61/9, ASME/ANSI A112.18.1 y CSA B 125.

Installation Instructions ● Instrucciones de Instalación

## EXPOSED PARTS ● PARTE EXTERNA

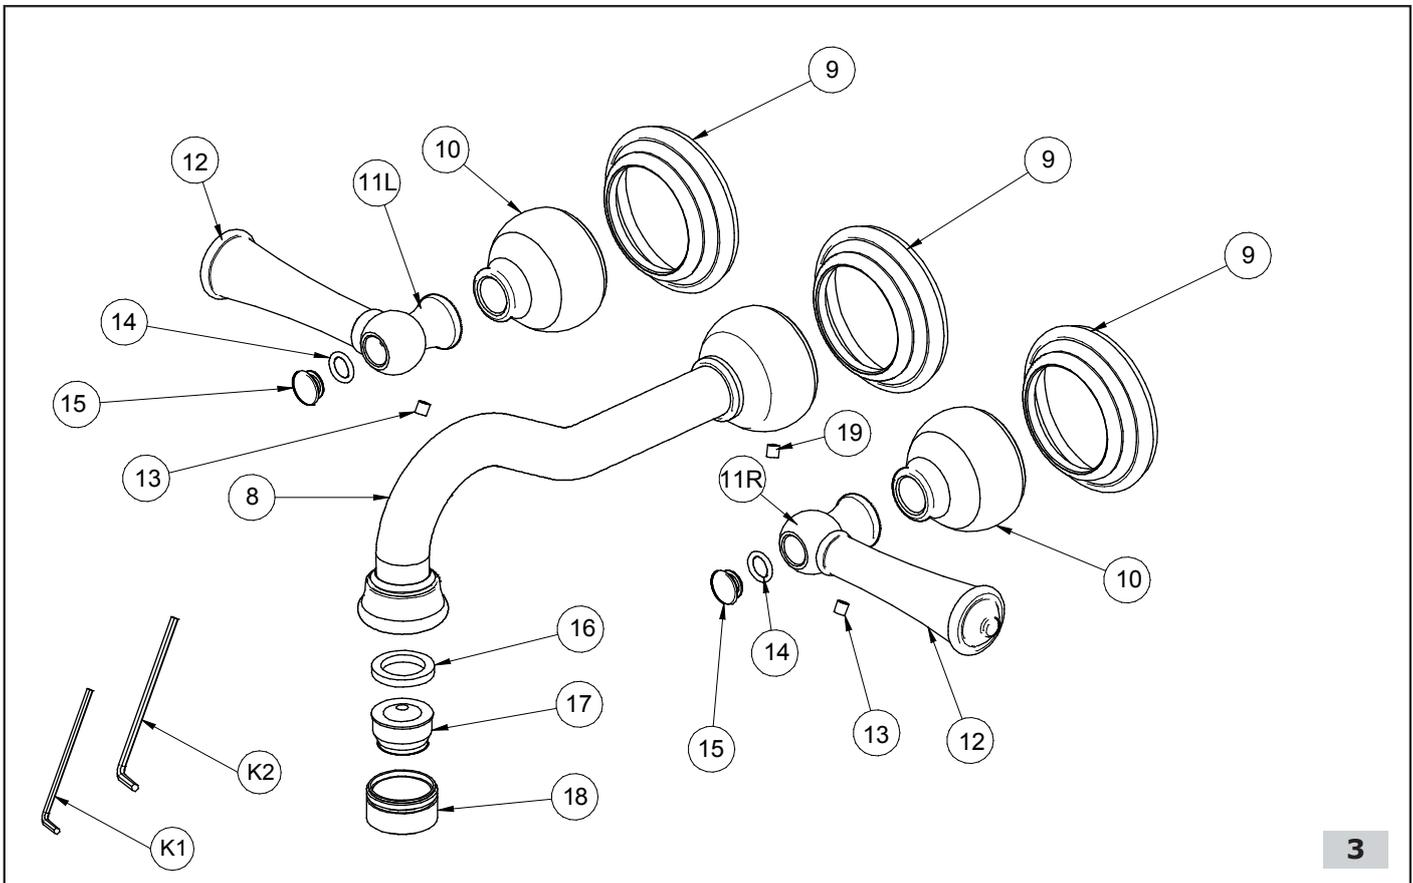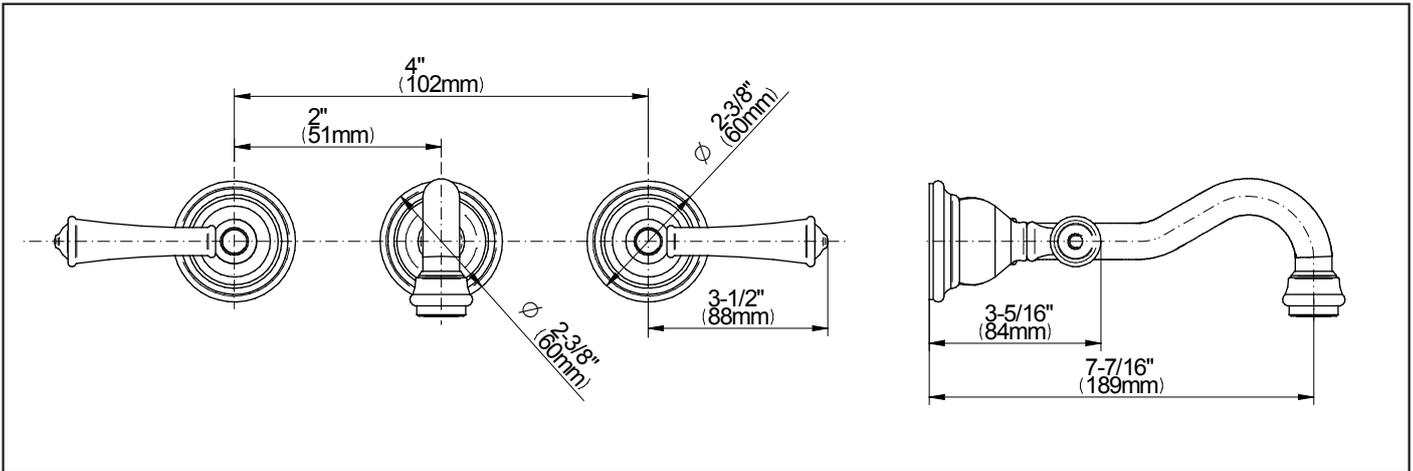

3

### ENGLISH

### ESPAÑOL

|     |                          |
|-----|--------------------------|
| 8   | SPOUT                    |
| 9   | SPOUT BASE / HANDLE BASE |
| 10  | SHROUD                   |
| 11R | LEVER KNOB - RIGHT       |
| 11L | LEVER KNOB - LEFT        |
| 12  | LEVER                    |
| 13  | SCREW                    |
| 14  | O-RING                   |
| 15  | HOLE PLUG                |
| 16  | WASHER                   |
| 17  | AERATOR                  |
| 18  | AERATOR BODY             |
| 19  | SCREW                    |
| K1  | HEX KEY 2mm              |
| K2  | HEX KEY 2,5mm            |

|     |                                     |
|-----|-------------------------------------|
| 8   | CAÑO                                |
| 9   | BASE DEL CAÑO/BASE DE LA MANILLA    |
| 10  | CHAPA                               |
| 11R | MANIVELA DEL LA PALANCA - DERECHO   |
| 11L | MANIVELA DEL LA PALANCA - IZQUIERDA |
| 12  | PALANCA                             |
| 13  | TORNILLO                            |
| 14  | JUNTA TÓRICA                        |
| 15  | TAPÓN DEL ORIFICIO                  |
| 16  | ARANDLLA                            |
| 17  | AERADOR                             |
| 18  | CUERPO DEL AERADOR                  |
| 19  | TORNILLO                            |
| K1  | LLAVE ALLÉN 2mm                     |
| K2  | LLAVE ALLÉN 2,5mm                   |




# BARREA™ WALL-MOUNTED LAVATORY FAUCET BARREA™ GRIFO MONTADO EN LA PARED

This product complies with NSF61/9, ASME/ANSI A112.18.1 and CSA B 125 Standards.  
Este producto cumple con los estándares requeridos por las normas NSF61/9, ASME/ANSI A112.18.1 y CSA B 125.

Installation Instructions ● Instrucciones de Instalación

## SPOUT INSTALLATION ● INSTALACIÓN DEL CAÑO

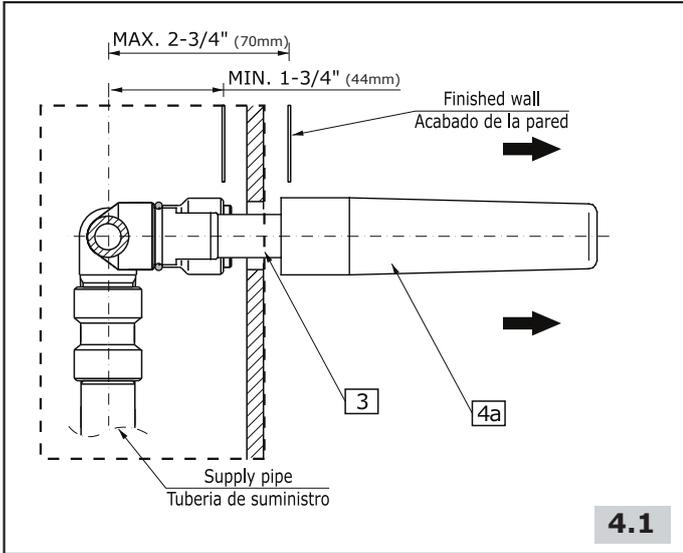

4.1

ENGLISH


See fig 4.1-4.2

1. Remove cap protector (4a) by turning and pulling.
2. Insert spout base (9) over the tube of spout (3).
3. Slide spout (8) over tube of spout (3) until snug against finished wall. Finished wall has to be between the **MAX [3-3/4"]** and **MIN [1-3/4"]**.
4. Attach spout (8) with hex socket screw (19). Use provided hex key (K).

ESPAÑOL


Vea dis. 4.1-4.2

1. Quite el tapón de protección (4a) girando y tirando.
2. Coloque la base del caño (9) en el tubo del caño (3).
3. Coloque el caño (8) sobre el tubo del caño (3) hasta que toque la pared. La pared acabada tiene que ser entre **MAX [3-3/4"]** y **MIN [1-3/4"]**.
4. Una el caño (8) con el tornillo de zócalo con tuerca hexagonal (19). Utilice la llave de tuerca hexagonal (K), proporcionada.

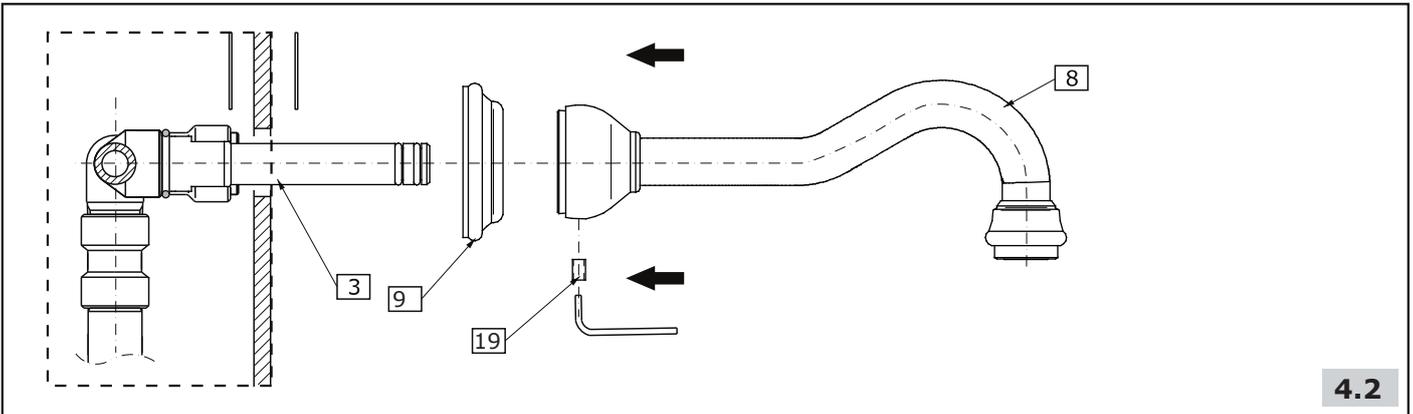


4.2


## HANDLES INSTALLATION ● INSTALACIÓN DE LAS MANILLAS

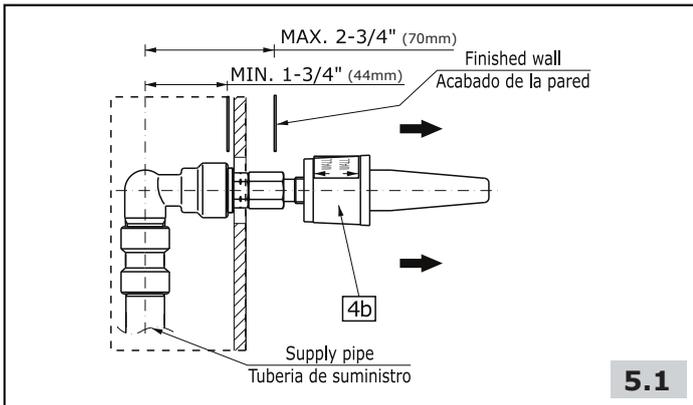


5.1

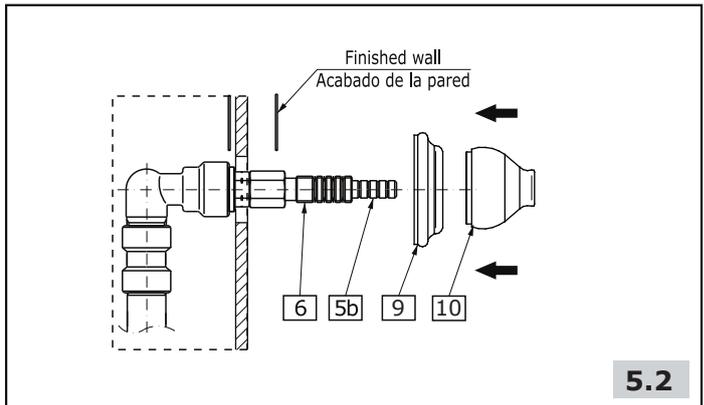

5.2

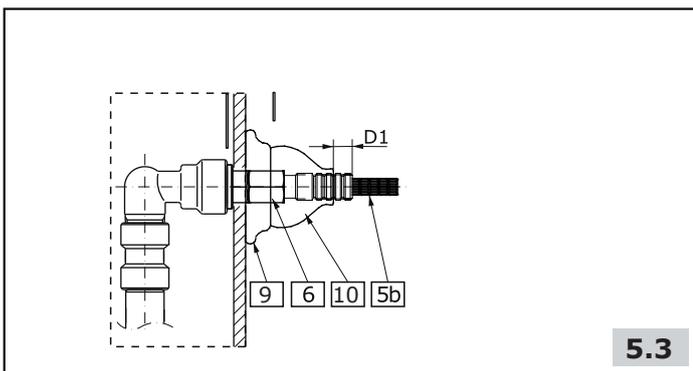

5.3

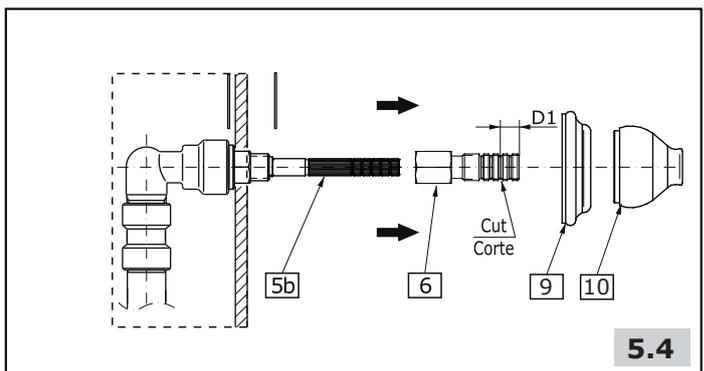


5.4




# BARREA™ WALL-MOUNTED LAVATORY FAUCET BARREA™ GRIFO MONTADO EN LA PARED

This product complies with NSF61/9, ASME/ANSI A112.18.1 and CSA B 125 Standards.  
Este producto cumple con los estándares requeridos por las normas NSF61/9, ASME/ANSI A112.18.1 y CSA B 125.


## Installation Instructions ● Instrucciones de Instalación

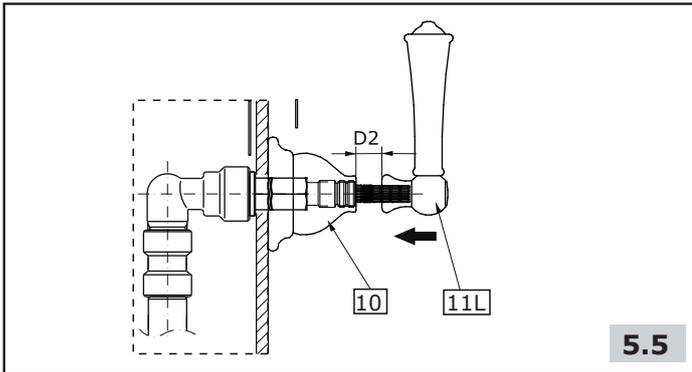

5.5

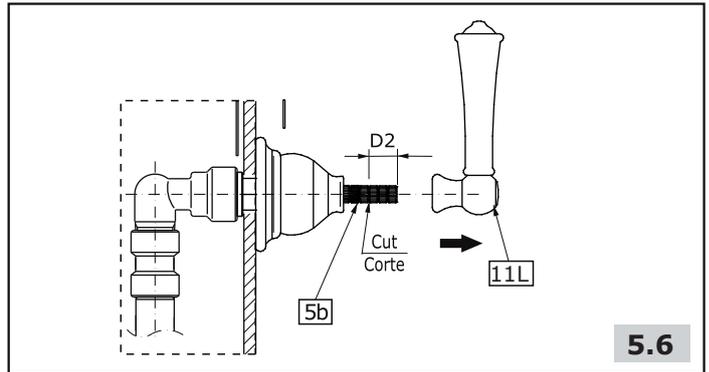

5.6

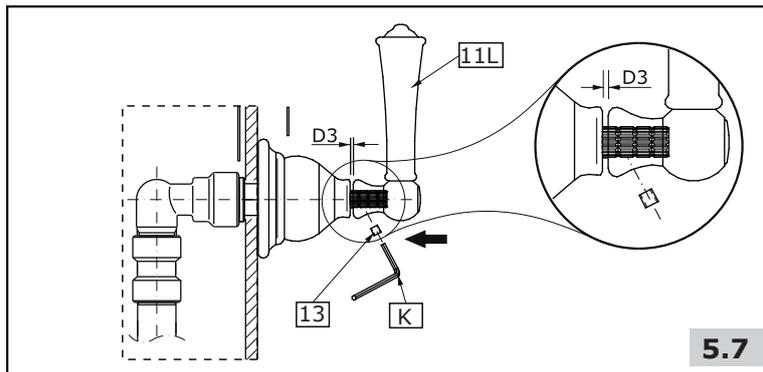

5.7

### ENGLISH

### ESPAÑOL

#### I. If the finished wall installation is between MAX and MIN distances:

See fig. 5.1-5.7

1. Remove cap protector (4b) by turning and pulling - see fig. 5.1
2. Screw on the extension (6) onto the cartridge (5b) - see fig. 5.2
3. Insert handle base (9) over extension (6). Holding the handle base (9) screw on the shroud (10) onto the extension (6) until it rests against base. Do not overtighten. Measure (or mark-up) the protruding thread on the extension (6) - see fig. 5.2 & 5.3.
4. Unscrew the shroud (10), take off the handle base (9) and unscrew the extension (6) - see fig. 5.4.
5. Cut-off the protruding part (D1) of the extension (6) at the marked-up place and then screw on the extension (6) onto cartridge (5b). Replace handle base (9) and screw on the shroud (10). (NOTE: The thread of the extension (6) cannot protrude above the edge of the shroud (10)) - see fig. 5.4.
6. Insert LEFT handle (11L) on the cartridge (5b). Measure how much the handle (11b) extends above the edge of the shroud (10) - see fig. 5.4 & 5.5.
7. Take off the handle (11L), measure this distance (D2) from the cartridge stem (5b) and cut off at the nearest notch - see fig. 5.6.
8. Replace the handle (11L) on the cartridge (5b). Test the correct position of handle. Displace the handle (11L) from the edge of the shroud (10) by about 0.02" [0.5mm] (D3). Using hex key (K) insert and tighten screw (13) underneath handle (11L) - see fig. 5.7.

Repeat steps for second handle. Make sure that the LEFT handle (11L) is on the left cartridge (5b) and the RIGHT handle (11R) is on the right cartridge (5a).

#### II. If the finished wall distance is at MAX value, do not cut the extension (6) and the cartridge (5b) - see fig. 6.

CONGRATULATIONS! Your installation is now complete!

#### I. Para la instalación media entre el MAX y MIN haga lo siguiente:

Vea dis 5.1-5.7

1. Quite el tapón de protección (4b) girando y tirando - vea dis 5.1.
2. Enrosque la extensión (6) en el cartucho (5b) - vea dis. 5.2.
3. Coloque la base de la manilla (9) en la extensión (6). Cogiendo la base de la manilla (9) enrosque la chapa (10) en la extensión (6) hasta que se encuentre junto a la base. No apriete demasiado. Mida (o marque) en la extensión (6) la rosca que sale - vea dis. 5.2 y 5.3.
4. Desatornille la chapa (10), quite la base de la manilla (9) y desenrosque la extensión (6) - vea dis. 5.4.
5. Corte la parte saliente (D1) de la extensión (6) en el sitio marcado y nuevamente enrosque la extensión (6) en el cartucho (5b); luego coloque de nuevo la base de la manilla (9) y enrosque la chapa (10). (NOTA: la rosca de la extensión (6) no puede salir del borde de la chapa (10)) - vea dis. 5.4.
6. Inserte la manilla IZQUIERDA (11L) en el cartucho (5b). Mida por cuánto la manilla (11L) se despegue del borde de la chapa (10) - vea dis. 5.4 y 5.5.
7. Quite la manilla (11L); mida desde el final del cartucho (5b) la distancia (D2) y corte en la incisión (ranura) más cercana - vea dis. 5.6.
8. Nuevamente inserte la manilla (11L) en el cartucho (5b). Compruebe la posición correcta de manilla. Aleje la manilla (11L) por ca. 0.02" [0.5mm] (D3) desde el borde de la chapa (10). Usando la llave hexagonal (K) inserte y luego ajuste el tornillo (13) en la manilla (11L) - vea. dis 5.7.

Repita los pasos para el segundo de manilla. Asegurarse de que los manillas han sido instaladas correctamente, la manilla IZQUIERDA (11L) es en el cartucho izquierdo (5b) y la manilla DERECHA (11R) es en el cartucho derecho (5a).

#### II. Para la instalación MAX no cortar la extensión (6) y el cartucho (5b) - vea dis. 6.


FELICIDADES! Su instalación esta completa ahora!



# BARREA™ WALL-MOUNTED LAVATORY FAUCET BARREA™ GRIFO MONTADO EN LA PARED

This product complies with NSF61/9, ASME/ANSI A112.18.1 and CSA B 125 Standards.  
Este producto cumple con los estándares requeridos por las normas NSF61/9, ASME/ANSI A112.18.1 y CSA B 125.

## Installation Instructions ● Instrucciones de Instalación

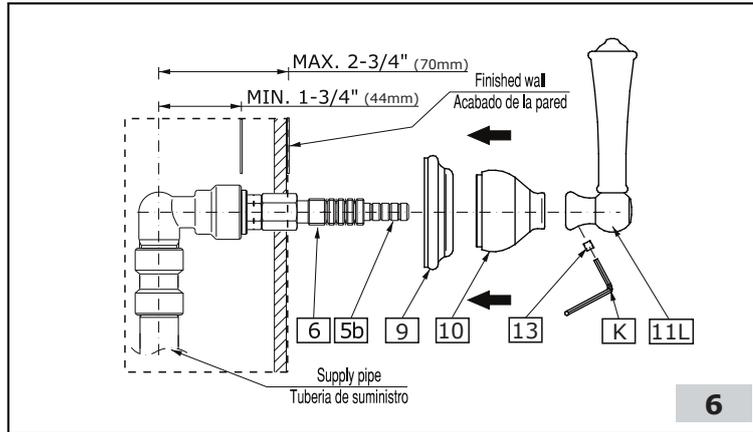

### AFTER INSTALLATION BEFORE USE ● DESPUES DE LA INSTALACIÓN Y ANTES DEL USO

See fig. 3

#### ENGLISH

1. Remove aerator insert (17) and turn faucet handle to the full on mixed position.
2. Turn on hot and cold water supply valves and flush water lines for 15 seconds<sup>1)</sup>.
3. Check all connections at arrows for leaks. Re-tighten if necessary, but do not overtighten.
4. Replace aerator insert (17).

<sup>1)</sup> IMPORTANT: This flushes away any debris that could cause damage to internal parts.

Ver la figura 3

#### ESPAÑOL

1. Retire el inserto del aereador (17) anexa al juego y gire el mango del grifo a la posición de mezclado completo.
2. Abra las válvulas de suministro de agua fría y caliente y enjuague las líneas de agua por 15 seg.<sup>1)</sup>.
3. Chequee todas las conexiones para ver si hay fuga de agua. Reajuste si es necesario, pero no ajuste demasiado.
4. Coloque el inserto del aereador (17).

<sup>1)</sup> IMPORTANTE: Esto limpia los residuos que podrían causar daño a las piezas internas con un chorro de agua.

### OPERATING INSTRUCTIONS ● LA DESCRIPCIÓN DEL FUNCIONAMIENTO

#### ENGLISH

1. Water flow is turned on and adjusted using the handles. The faucet is fully open when you turn the handles through a 90 angle (1/4 of a turn):
  - counterclockwise – for the cold water handle located on the right,
  - clockwise – for the hot water handle located on the left.
 Water flow rate is adjusted within the quarter turn range.
2. It is recommended that every 3-6 months (depending on water quality) you remove the aerator (item 17, fig. 3) from the faucet spout (8) in order to remove any impurities.

#### ESPAÑOL

1. Para abrir la salida y el ajuste de flujo de agua sirven los mangos. Apertura total sucede como consecuencia de girar los mangos por el ángulo de 90 (1/4 de giro):
  - en la dirección opuesta a las manillas del reloj – en caso de mango del agua fría colocado en la parte derecha,
  - en la dirección de las manillas del reloj – en caso de mango del agua caliente colocado en la parte izquierda.
 Ajuste de flujo del agua sucede en 1/4 de giro.
2. Una vez a 3-6 meses (dependiendo de la calidad del agua) se recomienda quitar el difusor (pos. 17 dis. 3) del caño de la mezcladora (8) con el fin de limpiarlo de todo tipo de ensuciamiento.

### CARE AND MAINTENANCE ● CUIDADO Y MANTENIMIENTO

#### ENGLISH

Your Jacuzzi® product is designed and engineered in accordance with the highest quality and performance standards. Be sure not to damage the finish during installation. Care should be given to the cleaning of this product. Although its finish is extremely durable, it can be damaged by harsh abrasives or polish. **Never use abrasive cleaners, acids, solvents, etc. to clean any Jacuzzi® product. To clean, simply wipe gently with a damp cloth and blot dry with a soft towel.**

#### ESPAÑOL

Su producto de la marca Jacuzzi® está diseñado para cumplir con los más altos estándares de calidad y funcionamiento. Tenga cuidado de no dañar el acabado del grifo durante su instalación. Cuide de su producto manteniéndolo siempre limpio. A pesar de que su acabado es extremadamente durable, puede ser dañado por materiales abrasivos y puliéntes ásperos. **Nunca utilice limpiadores abrasivos, ácidos, solventes, etc para limpiar los productos de la marca Jacuzzi®. Para limpiarlos, simplemente use un paño húmedo y seque con una toalla suave.**

### WARRANTY ● GARANTÍA

#### ENGLISH

Warranty conditions and warranty registration card are outlined on a separate sheet.

#### ESPAÑOL

Las condiciones de la garantía y la tarjeta del registro de la garantía se encuentran en una página separada.

All dimensions and drawings are for reference only. For details, please refer to actual products.  
Todas las dimensiones y dibujos sirven únicamente de referencia. Para consultar detalles, ver los productos.




# BARREA™ WALL-MOUNTED LAVATORY FAUCET BARREA™ GRIFO MONTADO EN LA PARED

This product complies with NSF61/9, ASME/ANSI A112.18.1 and CSA B 125 Standards.  
Este producto cumple con los estándares requeridos por las normas NSF61/9, ASME/ANSI A112.18.1 y CSA B 125.

Installation Instructions ● Instrucciones de Instalación

## REPLACEMENT PARTS LIST ● LISTA DE PIEZAS DE REPUESTO

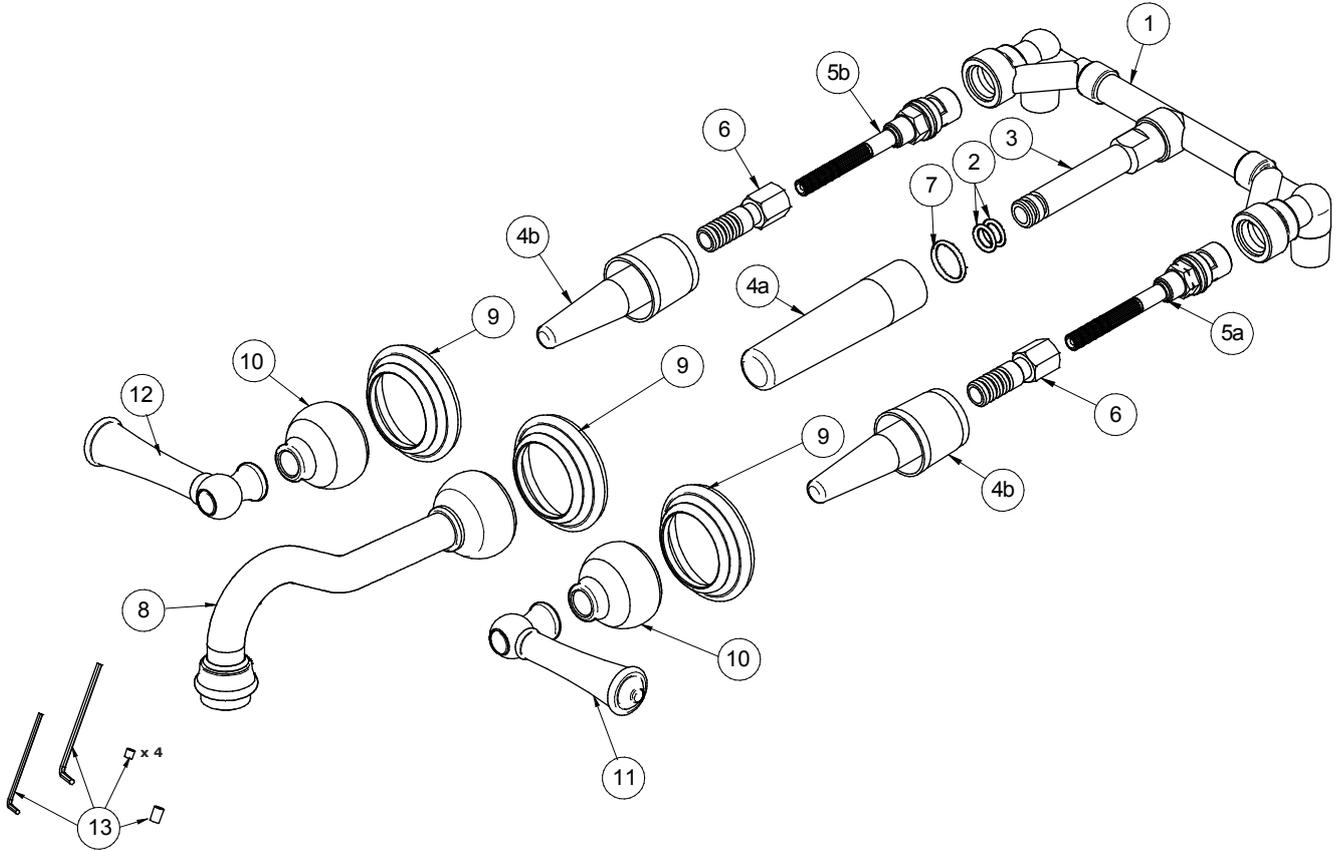

### ENGLISH

### ESPAÑOL

|           |                                            |           |                                               |           |           |
|-----------|--------------------------------------------|-----------|-----------------------------------------------|-----------|-----------|
| <b>1</b>  | FAUCET BODY UNIT                           | <b>1</b>  | UNIDAD DEL CUERPO DEL GRIFO                   | <b>1</b>  | 2042.76   |
| <b>2</b>  | SEAL O-RING                                | <b>2</b>  | SELLADOR DE ANILLO (O-RING)                   | <b>2</b>  | 9916090   |
| <b>3</b>  | TUBE OF SPOUT                              | <b>3</b>  | TUBO DEL CAÑO                                 | <b>3</b>  | 2042.79   |
| <b>4a</b> | CAP PROTECTION                             | <b>4a</b> | TAPÓN DE PROTECCIÓN                           | <b>4a</b> | 2042.69   |
| <b>4b</b> | CAP PROTECTION                             | <b>4b</b> | TAPÓN DE PROTECCIÓN                           | <b>4b</b> | 2042.71   |
| <b>5a</b> | RIGHT CARTRIDGE (counterclockwise opening) | <b>5a</b> | CARTUCHO DERECHO (se abre hacia la izquierda) | <b>5a</b> | 2042.87   |
| <b>5b</b> | LEFT CARTRIDGE (clockwise opening)         | <b>5b</b> | CARTUCHO IZQUIERDO (se abre hacia la derecha) | <b>5b</b> | 2042.88   |
| <b>6</b>  | EXTENSION                                  | <b>6</b>  | EXTENSIÓN                                     | <b>6</b>  | 2042.89   |
| <b>7</b>  | SEAL O-RING                                | <b>7</b>  | SELLADOR DE ANILLO (O-RING)                   | <b>7</b>  | 9917201   |
| <b>8</b>  | SPOUT                                      | <b>8</b>  | CAÑO                                          | <b>8</b>  | 2213.40-* |
| <b>9</b>  | SPOUT BASE / HANDLE BASE                   | <b>9</b>  | BASE DEL CAÑO/BASE DE LA MANILLA              | <b>9</b>  | 2004.97-* |
| <b>10</b> | SHROUD                                     | <b>10</b> | CHAPA                                         | <b>10</b> | 2004.94-* |
| <b>11</b> | LEVER - RIGHT                              | <b>11</b> | PALANCA - DERECHO                             | <b>11</b> | 5007060-* |
| <b>12</b> | LEVER - LEFT                               | <b>12</b> | PALANCA - IZQUIERDA                           | <b>12</b> | 5007030-* |
| <b>13</b> | MOUNTING KIT                               | <b>13</b> | KIT DE MONTAJE                                | <b>13</b> | 2211.86   |

\* specify finish: OB - Olive Bronze

# Limited Lifetime Warranty on Jacuzzi® Branded Barrea™ Faucets

## WARRANTY COVERAGE

Jacuzzi Luxury Bath ("Company") offers a limited lifetime non-transferrable warranty to the original purchaser ("user") of a Jacuzzi® branded Barrea™ faucet ("Faucet"), for personal or single family residential use, subject to the following terms, conditions and limitations. The Company will repair or replace, at its sole option, the Faucet or its component parts in accordance with the terms, conditions and limitations set forth in this limited warranty. Units in commercial use are excluded from any warranty coverage whatsoever. PLEASE READ THIS ENTIRE LIMITED WARRANTY, AS EXCLUSIONS AND CONDITIONS APPLY. The ceramic cartridge is warranted against defects in material and workmanship for the lifetime of the product. If at any time the cartridge fails, Company will provide a replacement cartridge or part, free of charge. All other portions of the Faucet are warranted against defects in material and workmanship for one year from date of purchase. This warranty does not apply to any display models or to any options or accessories not specifically mentioned herein. Warranty coverage begins on the date the unit was originally purchased by the user. The warranties provided by Company do not cover labor, and are parts only warranties.

The components referenced above and coverage of this warranty are for defects in material or workmanship, and not damage caused by installation, neglect, misuse, abuse, hard water conditions, optional equipment, the unit's prior usage as an operational display, defects that should have been discovered before installation, or failure to follow the instructions and warnings set forth in the owner's manual, including but not limited to cleaning of the Faucet and its component parts, such as using chemicals, abrasives, acids, solvents, etc. Inspecting the unit prior to installation is the responsibility of the user, as well as the installer or building contractor who acts on behalf of the user. In the event of a problem, the unit must not be installed. The Company is not responsible for failures or damage that could have been discovered, repaired, or avoided by proper inspection and testing prior to installation. Damage occurring in transit is the responsibility of the carrier. Damage occurring to the unit during installation is the responsibility of the installer, building contractor and/or user, and damage occurring thereafter is the responsibility of the user. Any replacement parts shall be covered only by the original equipment manufacturer warranty, if any. The distributor, dealer and user are responsible for knowing local code requirements and notifying the installing contractor of these requirements at the time of purchase. The Company is not responsible for costs to modify any product to obtain any code approval, such as city, county, or state building codes in U.S.A. or federal, municipal, provincial or other codes in Canada and Mexico. To make a claim, user must first contact Company and thereafter return any part claimed to be defective within the warranty period to Company, freight prepaid. Proof of purchase (original sales receipt) from the original purchaser must accompany all warranty claims. Defects or damage caused by the use of other than genuine Company parts is not covered by this warranty.

IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED TO THE FULLEST EXTENT ALLOWED BY LAW. This Limited Warranty takes the place of all other warranties, express or implied, in fact or at law, including implied warranties of merchantability and fitness for a particular purpose. Company reserves the right to use replacement parts that may be different from the part(s) that accompanied the original Faucet, including but not limited to different in appearance, configuration, performance and/or structure. No agent, dealer, distributor, service company or other party is authorized to change, modify or extend the terms of this limited warranty in any manner whatsoever. In addition, THE COMPANY WILL NOT BE RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES or losses arising from any cause (e.g., water damage to carpet, ceiling, tiles, marble, loss of use, etc.) including but not limited to its own negligence. This exclusion applies even if Company was advised in advance of the possibility of such damages. This limited warranty does not include labor, transportation, or other costs incurred in the removal and/or reinstallation of the original unit and/or installation of a replacement unit; any costs relating to obtaining access for repair; or loss of use damage, including loss of sales, profit or business advantage of any kind under any circumstances. Faucet units are excluded from any warranty coverage if any addition, deletion, or modification of any kind whatsoever has been made to the unit (or to any component). Warranty coverage is provided in the United States of America, Canada and Mexico only. The liability of Company under this limited warranty, if any, shall not exceed the original amount paid for the Faucet or product claimed to be defective. Dated proof of purchase of Faucet is required for a warranty claim. These disclaimers shall be equally applicable to any service provided by Company and its designated representatives.

To register your product, please go to our website <http://www.jacuzzi.com/baths/>, then select Warranty Registration at the bottom of the page. You may also register the warranty by completing the registration card provided with your product and mailing it to the Company at the address provided below. The warranty must be registered online or by filling out and returning to the Company the Warranty Registration card within thirty (30) days from the date of purchase in order for this warranty to become effective.

The Company will provide the warranty service described above when the following conditions have been met: the failure is of the nature or type covered by the warranty; the user has informed an Authorized Jacuzzi Luxury Bath Service Agent or Warranty Service Department Representative of the nature of the problem during the warranty period; conclusive evidence (e.g., dated proof of purchase) is provided to the foregoing by the user proving that the failure occurred or was discovered within the warranty period; and, an authorized independent service person or Company representative has been permitted to inspect the unit during regular business hours within a reasonable time after the problem was reported by the user. In order to obtain warranty service, contact Jacuzzi Luxury Bath at: [www.jacuzzi.com](http://www.jacuzzi.com) or Warranty Service Department, 14525 Monte Vista Avenue, Chino, California 91710, (800) 288-4002.

All replacement parts, equipment, and repairs shall assume the remaining warranty period of the part(s) replaced. The Company's warranty obligation shall be discharged upon tender of replacement or repair. The customer's refusal to accept the tender terminates the Company's warranty obligation.

**LEGAL RIGHTS:** This Limited Warranty gives you specific legal rights. There are no warranties applicable to Jacuzzi® products except as expressly stated herein or as implied by applicable state and federal laws. You may also have other rights that vary from state to state. Some states do not allow limitations on how long an implied warranty lasts, disclaimer of certain warranties, or the exclusion or limitation of incidental damages, so some of the above limitations may not apply to you. Company will not be responsible for any statements or representations made in any form that go beyond, are broader than or are inconsistent with any authorized literature or specifications furnished by the Company.