



INSTRUCTIONS:

1. Use key to remove recessed aerator from spout.
2. Clean threads inside spout.
3. Use key to install the new recessed aerator.
4. Turn on faucet. If leak occurs, tighten more firmly.