



For male faucets with outside threads:

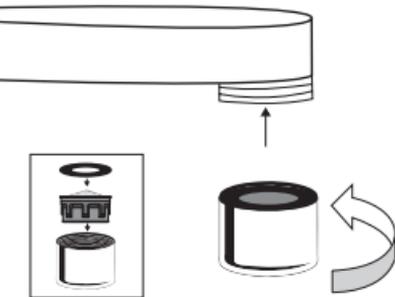

Place insert into original housing
and place thinner washer on top.

For female faucets with inside threads:

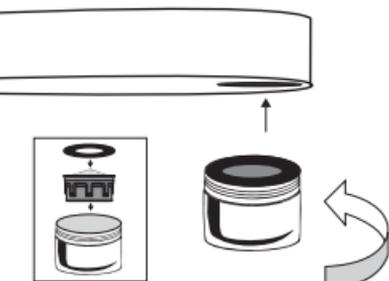

Place insert into original housing
and place thicker washer on top.

INSTRUCTIONS:

1. Unthread aerator from faucet and remove washer and insert.
2. Place new aerator insert into the original housing.
3. For housings with inside threads, use thinner washer. For housings with outside threads, use thicker washer.
4. Install onto spout by hand.