


## INSTALLATION INSTRUCTIONS

1. Remove screw and round handle.
2. Pull off old temperature lever control handle.
3. Replace new handles.

---

## INSTRUCCIONES DE INSTALACIÓN

1. Quite el tornillo y la manija redonda.
2. Retire la palanca de control de temperatura usada.
3. Instale los mandos nuevos.

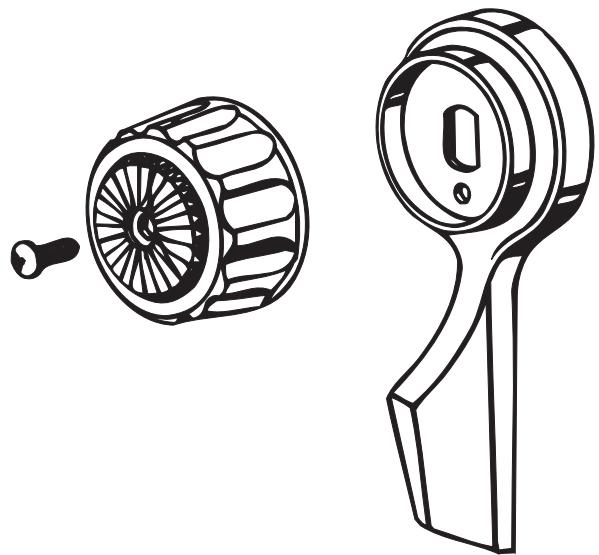

*Fits* **MIXET**