

TEST_{AND}DRAIN[®] MODEL 2500 VALVE OPERATING INSTRUCTIONS

A. TO TEST:


1. Turn valve handle counterclockwise from “Off” to “Test”. The handle will stop automatically.
2. After test is completed, return handle to “Off”.

B. TO DRAIN:

1. Turn valve handle counterclockwise from “Off” to “Test”. The handle will stop automatically.
2. Depress “Push” button and turn handle to “Drain”.
3. When system is empty, return handle clockwise to “Off” position.

AGF MANUFACTURING
100 Quaker Lane
Malvern, PA 19355
Telephone: 610-240-4900
Fax: 610-240-4906
www.testandrain.com

LIMITED WARRANTY: AGF Manufacturing, Inc. warrants each product against defects in material and workmanship for a period of one year from the date of original shipment. In the event of such defects within the warranty period, the Company will, at its option, replace or recondition the product without charge. This shall constitute the exclusive remedy for breach of warranty, and the Company shall not be responsible for any incidental or consequential damages, including, without limitation, damages or other costs resulting from labor charges, delays, vandalism, negligence, fouling caused by foreign material, damage from adverse water conditions, chemicals or any other circumstances over which the Company has no control. This warranty shall be invalidated by any abuse, misuse, misapplication or improper installation of product. THE COMPANY MAKES NO OTHER WARRANTIES EXPRESS OR IMPLIED EXCEPT AS PROVIDED IN THIS LIMITED WARRANTY.

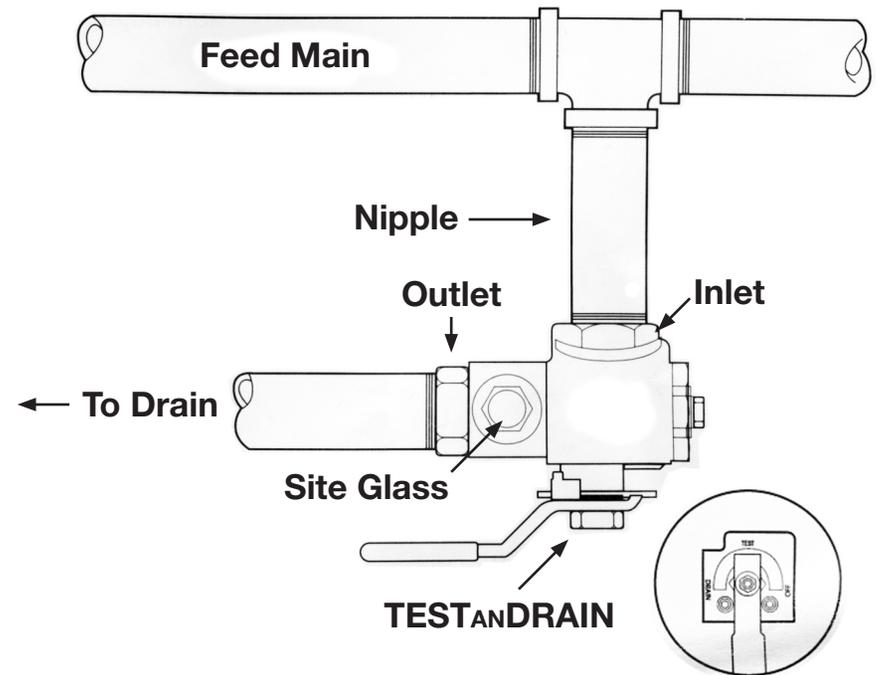

INSTALLATION INSTRUCTIONS FOR TEST_{AND}DRAIN[®] MODEL 2500 VALVE 1" AND 1¼" MODELS

1. Check the indicating plate for the correct orifice size.
2. Thread the pipe nipple into the inlet of the TEST_{AND}DRAIN.
3. Thread the pipe nipple and the TEST_{AND}DRAIN into the outlet on the feed main.
4. Thread the piping from the outlet of TEST_{AND}DRAIN to an acceptable drain fixture or active express drain as required.