



PRESSURE BALANCE SHOWER VALVE

INSTRUCTIONS

- A** Use a small Allen wrench to loosen the handle set screw, and remove the handle from the valve.
- B** Unthread and remove the decorative nut to expose the red plastic limiter ring. The limiter ring in your valve may be a different color.
- C** Pull the limiter ring out from the valve, this can be done by hand or with a small set of pliers.

Rotate the ring counter-clockwise to the desired position and push back into place in the valve. This will allow the white tab on the stem to travel further before hitting the stop on the red ring.

Please note: The limiter ring is a safety device and should not be removed. Limiter ring removal may result in serious injury from scalding water.

TOOLS AND MATERIALS:



Allen Wrench



Long-nose pliers

