
## INSTALLATION INSTRUCTIONS KITCHEN FAUCET WITH PULLDOWN SPRAY

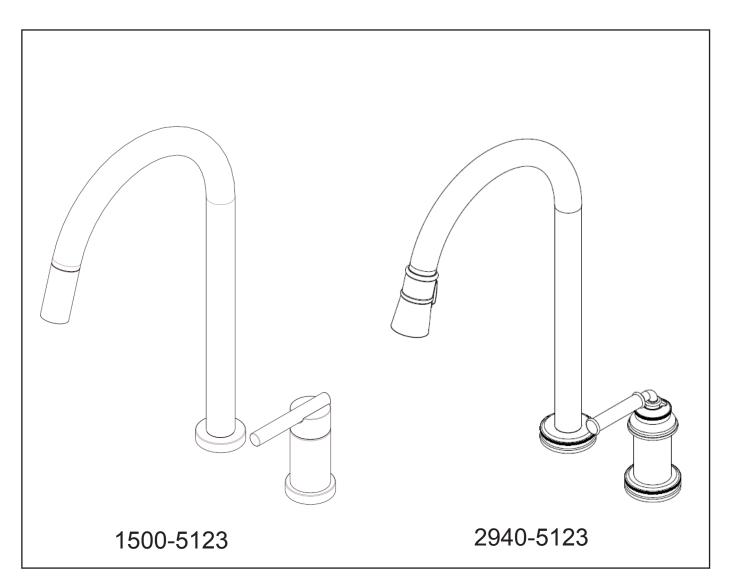

Model No's: 1500-5123 & 2940-5123



Congratulations on the purchase of your Newport Brass product, an excellent choice, that will give you years of quality service and enhance the look and style of your home.

## Recommended Installation by a Professional Plumbing Contractor


**Note**: The use of petroleum base plumbers putty on our products will nullify the warranty. We recommend the use of clear silicone sealing materials.


If mounting faucet to stainless steel rim, an under-mount support, (e.g. wood, appropriate size  $\times$  1/2" thick), should be utilized.


Detail A


- I. Drill holes in mounting surface. Recommended deck hole  $\emptyset$ 1.350" not to exceed  $\emptyset$ 1.562".
- 2. Place Spout assembly through hole on mounting surface and secure into place with MOUNTING KIT. **See Figure. I.**
- 3. Insert Hoses through hole in mounting surface. Secure into place with MOUNTING KIT. **See Figure 2**.
- Attach hot/cold spout supply directly to valves in the wall. See Figure. 3
- 5. **DO NOT** remove the HOSE from SPOUT. **See Figure 4**.

Do **NOT** remove the zip tie and ensure the hose does not rub against the hot/cold supply lines.

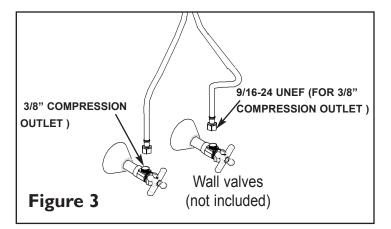

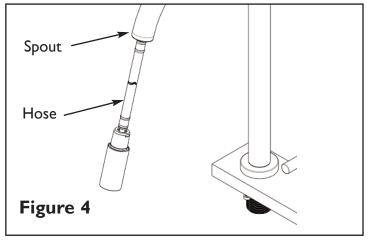

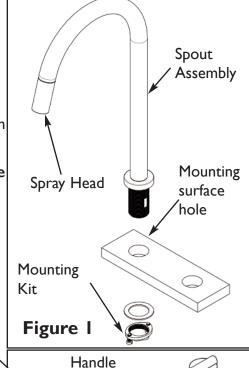

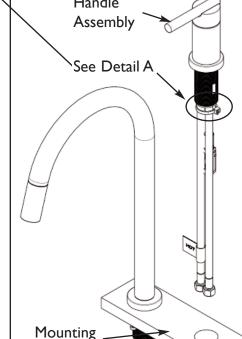

surface hole

Figure 2

Mounting

Kit

- 6. Attach WEIGHT to HOSE in the appropriate area shown, on the upward swing toward the SPRAYHEAD, in order to provide proper pull to hose. **See Figure 5**.
- 7. Connect HOSE to valve OUTLET. **See Figure 5.** Attach CLIP to the connection between HOSE and OUTLET. **See Figure 5a.**
- 8. With faucet in the OFF position, open water supply valves. Inspect connections under sink for leaks. **DO NOT** turn faucet on yet.
- 9. Pull SPRAYHEAD out from SPOUT. While holding HOSE, detach SPRAYHEAD. Aiming HOSE into sink, turn on faucet to center position (mixed) and flush for one minute to remove debris from lines.
- 10. Turn OFF faucet and reattach SPRAYHEAD to HOSE. See Figure 6.
- 11. Check the SPRAYHEAD by operating the trigger from aerator to spray.

