



PUMP ASSEMBLY REMOVAL & INSTALLATION INSTRUCTIONS

The H2hOme pump assembly can be easily removed for transporting and servicing the unit. The following instructions describe how to remove/reinstall the pump assembly and riser manifold kit. For full instructions regarding installation, operation and maintenance procedures, please refer to the H2hOme manual.


Pump Assembly Removal



1 Remove the bolts on both sides of base plate.



2 Loosen clamps on cam fitting & disconnect hose.

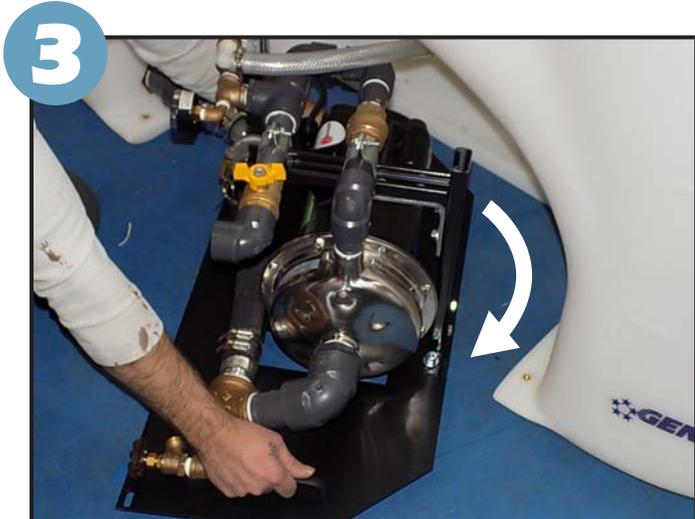

3 Slide the right side of pump assembly out first using the handles on the sides of the base plate.




4 Continue to pull the pump assembly out by the base plate handles & disconnect the test hose.


Pump Assembly Installation



Using the handles on base, slide the left side of pump assembly into the tank opening & connect test hose.

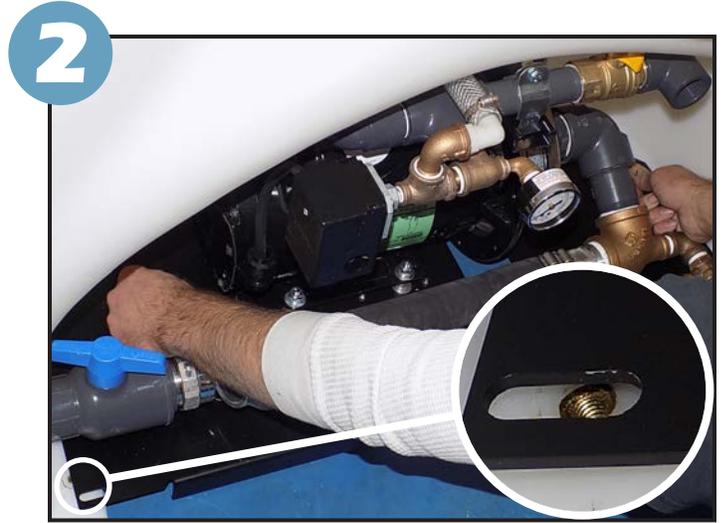

Position the pump assembly so the slots in the base line up with the nuts on both sides.

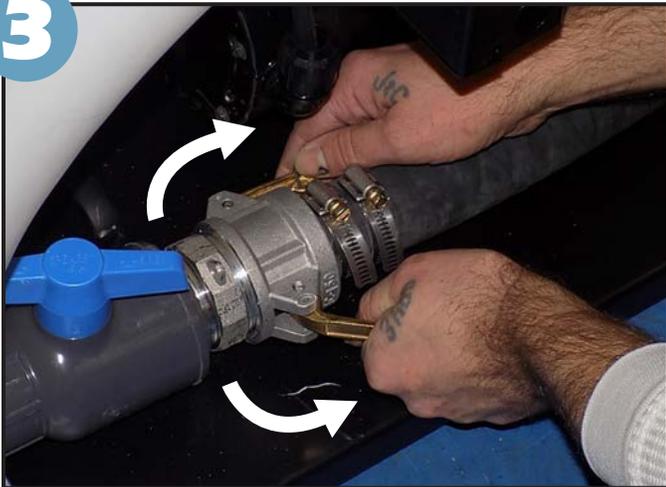

Install the hose & lock the clamps on cam fitting.



Install the bolts on both sides of base plate.

Riser Installation



Thread the riser into manifold and tighten until riser is in an upright position.