


---

# INSTALLATION GUIDE

---

## GB-250-B 75 GPM 99% Efficient Grease Interceptor for Indoor/Outdoor Installation

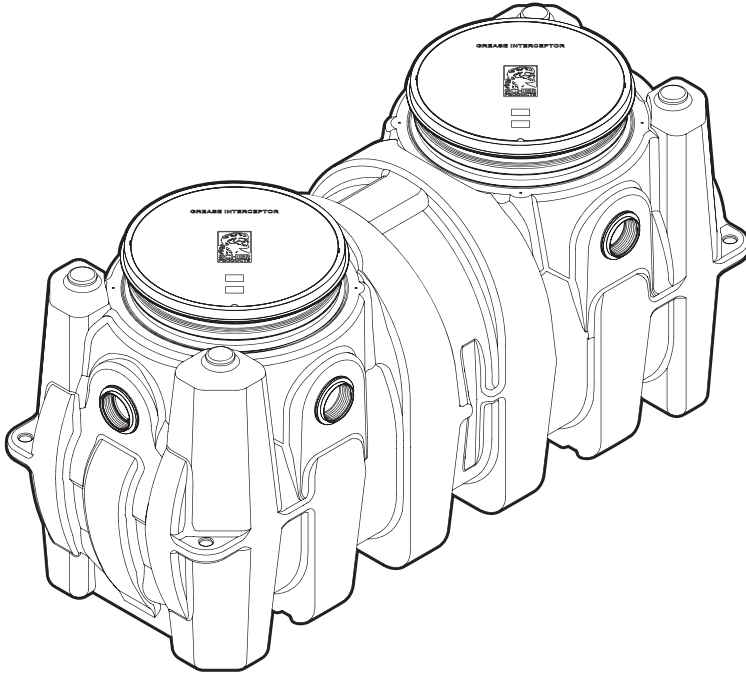

### Contents

---

Special Precautions .....	2
Getting to Know the GB-250-B .....	4
Buried Installation .....	5-8
On the Floor Installation .....	9-11
Installation Options .....	12



# SCHIER



# SPECIAL PRECAUTIONS


For Schier Grease Interceptor Installations – Failure to follow this guidance voids your warranty

**WARNING!** DO NOT AIR TEST UNIT OR RISER SYSTEM!  
Doing so may result in property damage, personal injury or death.

**CAUTION!** Do not install this unit in any manner except as described in these instructions.

## Installation Instructions


Installation instructions and additional components are included with the interceptor. Read all instructions prior to installation. This interceptor is intended to be installed by a licensed plumber in conformance with all local codes.

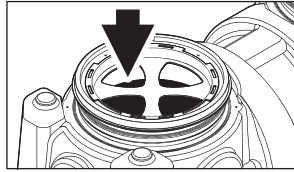


## When Installing Interceptor Inside

If your dishwashing sink(s) discharges into a floor drain/sink (drain), you must regulate the flow into the drain to avoid an overflow of water onto the kitchen floor. This can be done by installing a valve or flow restriction cap on the sink piping that discharges into the drain.

See drawing for guidance. For detailed guidance on indirect connections, go to: [webtools.schierproducts.com/Technical\\_Data/Indirect\\_Connections.pdf](http://webtools.schierproducts.com/Technical_Data/Indirect_Connections.pdf)

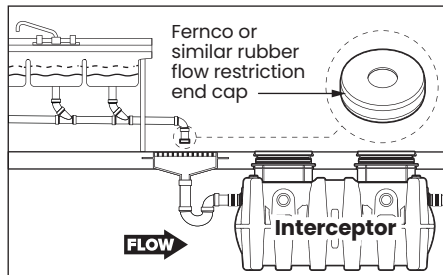


## High Temperature Kitchen Water

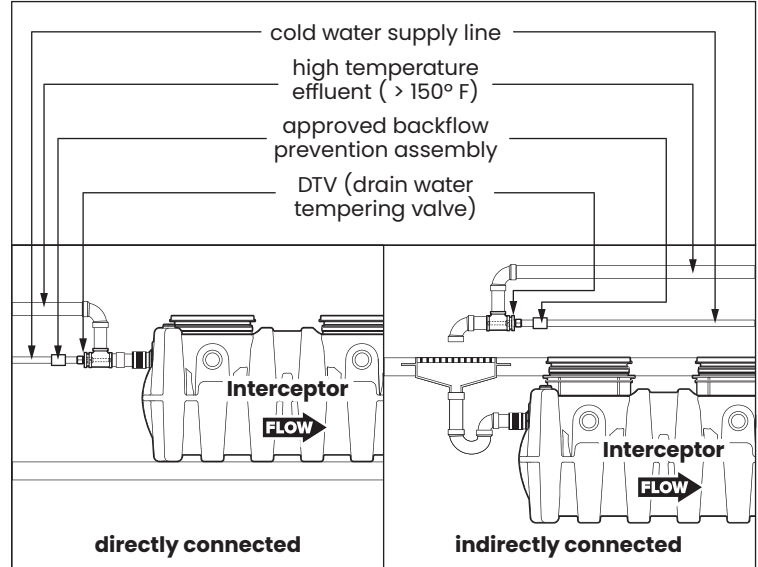

If water is entering the interceptor at excessive temperature (over 150° F), a drain water tempering valve (DTV) and approved backflow prevention assembly must be installed. Most state and local plumbing codes prohibit water above 150° F being discharged into the sanitary sewer. Water above 150° F will weaken or deform PVC Schedule 40 pipe, poly drainage fixtures like interceptors and erode the coating of cast iron (leading to eventual failure).


## Hydrostatic Slabs (or Pressure Slabs)

When installed under a hydrostatic slab (slab designed to withstand upward lift, usually caused by hydrostatic pressure) interceptor must be enclosed in a watertight concrete vault.

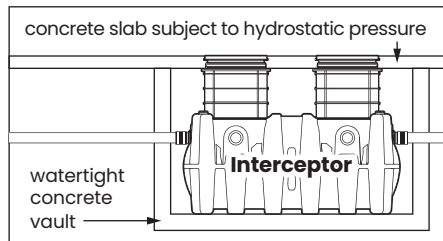

## Below Grade Installation Slab Requirements

A concrete slab to finished grade with rebar is required when installing interceptor below grade.

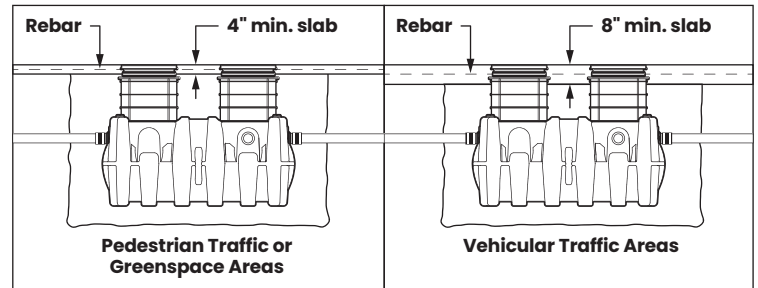




# SPECIAL PRECAUTIONS

For Schier Grease Interceptor Installations – Failure to follow this guidance voids your warranty


## High Water Table Installations

Interceptors and risers are not designed to withstand water table height in excess of the top of the unit when buried (see figure). If it is possible for this to occur, install the interceptor and risers in a water-tight concrete vault or backfill with concrete or flowable fill (wet concrete and flowable backfill should be poured in stages to avoid crushing the interceptor). At risk areas include but are not limited to tidal surge areas, floodplains and areas that receive storm water. Great Basin™ models that are direct buried in high water table scenarios must be installed with an anchor kit. Model GB-250 uses model AK1 anchor kit.

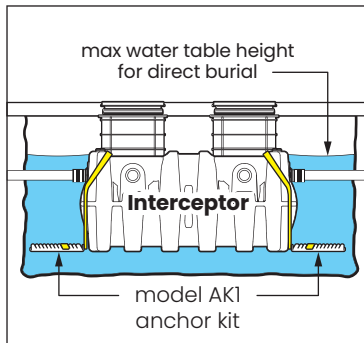


## Fully Support Base of Unit

Install unit on solid, level surface in contact with the entire footprint of unit base; for suspended installations design trapeze to support the wet weight of the unit. Do not partially support unit or suspend unit using metal U-channel to create a trapeze.

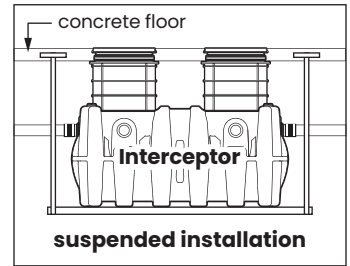


## Support Inlet and Outlet Piping


For above grade installations ensure heavy inlet and outlet piping (such as cast iron or long runs) is properly supported or suspended during the entire installation process to prevent connection failure or damage to bulkhead fittings.

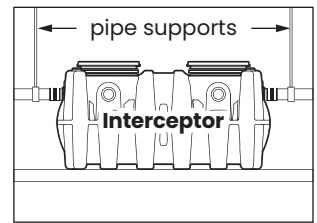

**DO NOT  
COMPACT  
BACKFILL**

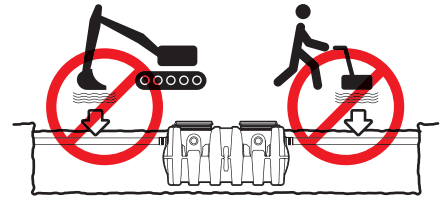

# GETTING TO KNOW THE GB-250-B

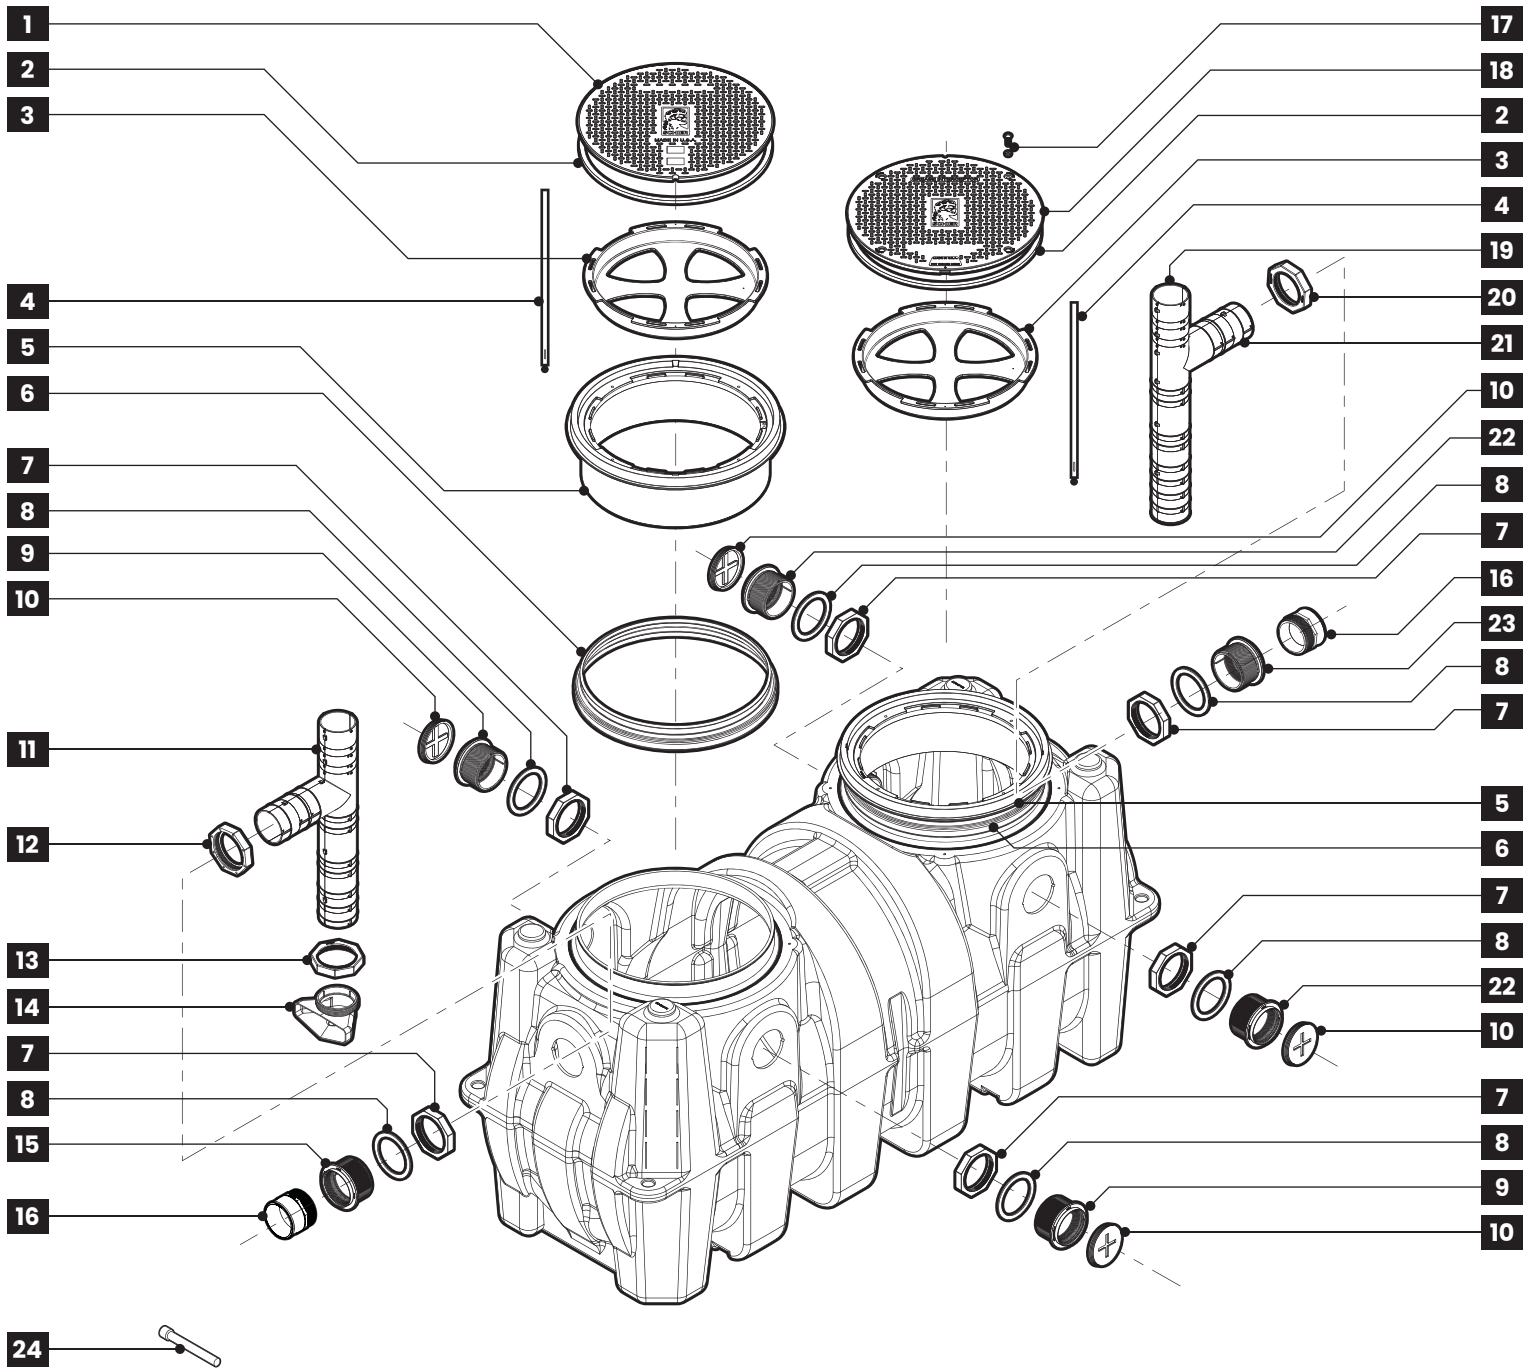

1. Pickable Cast Iron Cover (standard)
2. Cover Gasket
3. Safety Star (x2)
4. Safety Star Tether (x2)
5. Cover Adapter (x2)
6. Cover Adapter Gasket Assembly(x2) with Upper and Lower Stainless Steel Band Clamps
7. Bulkhead Connection Retaining Nut
8. Bulkhead Connection Gasket
9. Inlet Bulkhead Connection (optional) 4" FPT (x2)

10. 4" Cleanout Plug (x4)
11. Inlet Diffuser
12. Inlet Diffuser Retaining Nut
13. Inlet Diffuser Foot Retaining Nut
14. Inlet Diffuser (Foot)
15. Inlet Bulkhead Connection (standard) 4" FPT
16. 4" Plain End Fitting (x2)
17. Composite Cover Bolts and Washers (x8)
18. Bolted Composite Cover (optional)





19. Air Relief/Visual Access
20. Outlet Diffuser Retaining Nut
21. Outlet Diffuser
22. Outlet Bulkhead Connection (optional) 4" FPT (x2)
23. Outlet Bulkhead Connection (standard) 4" FPT
24. 7/16" Nut Driver Bit

# BURIED INSTALLATION


## Special Precautions

**1** Install interceptor as close as possible to fixtures being served


**2** Provide at least 16" clearance above unit for routine maintenance.

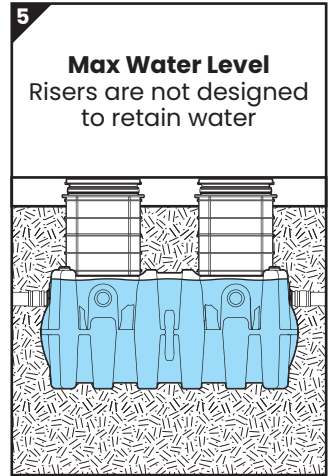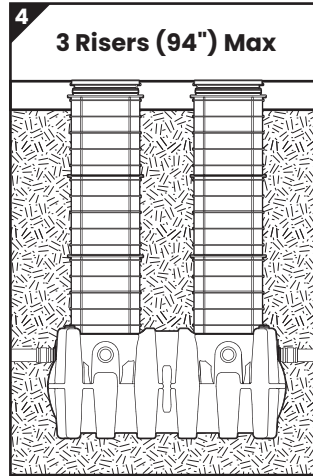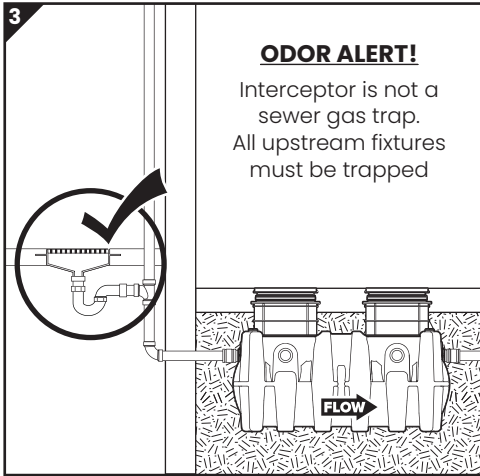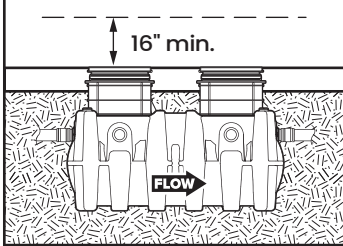

## 1 Test tank for water tightness

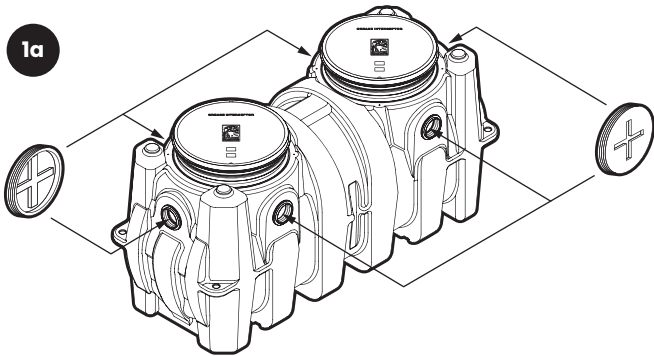


Cap all connection points with 4" cleanout plugs using pipe thread sealant or tape approved for use with plastics.

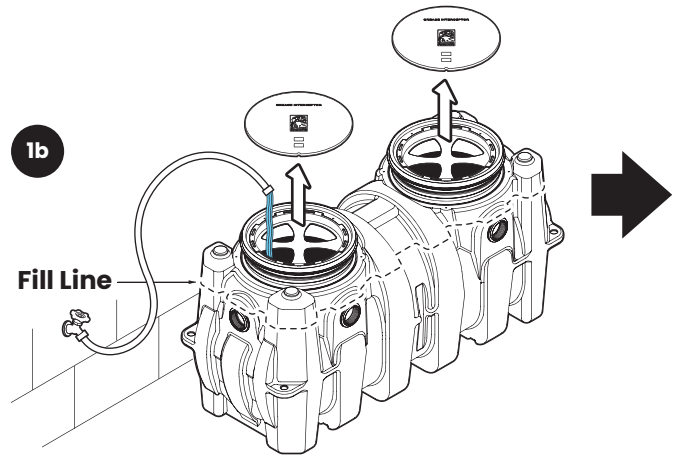

Remove covers. For base unit testing fill with water to just above the highest connection.

Inspect unit, connections and gaskets for leaks. Check water level at specific time intervals per local code.

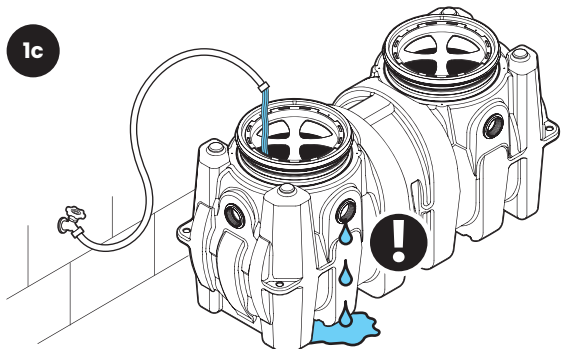

## Have a Leak?


Call customer care at 913-951-3300

Hours 8am-5pm CST, M-F

# BURIED INSTALLATION


## 2 Set Up Inlet Diffuser

**2a Choose inlet location.**

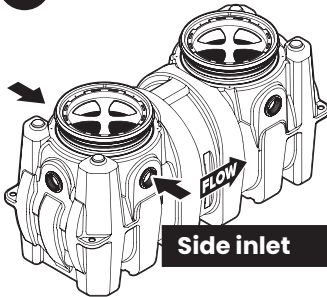


**Side inlet**


**2b** Remove safety star insert, leave tethered to unit.

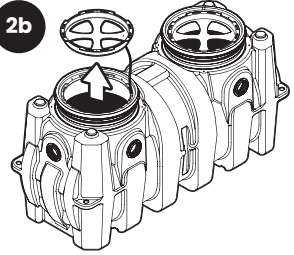

**2c** Unscrew diffuser retaining nut and remove inlet diffuser.

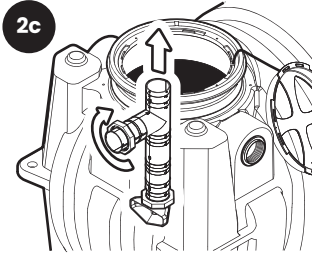


**2d** Unscrew foot retaining nut and remove inlet diffuser foot.

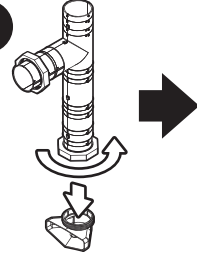


**OR**

**2e** Rotate diffuser top toward chosen inlet and replace foot, ensure it points toward unit front wall. Hand tighten foot retaining nut.

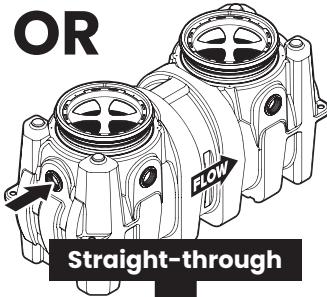


**Straight-through**

**2f** Insert diffuser into chosen inlet and hand tighten retaining nut.

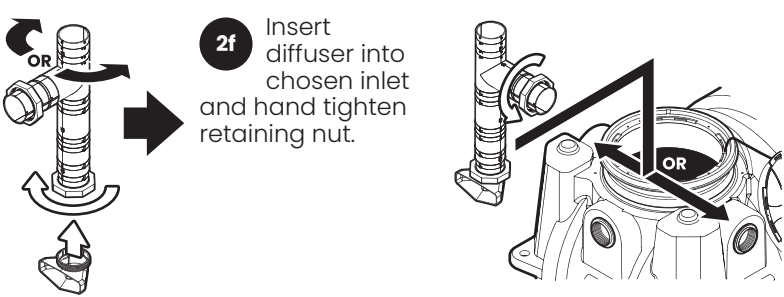


## 3 Set Up Outlet Diffuser and Install Cleanout Plugs

**3a Choose outlet location.**

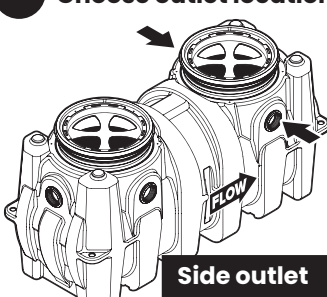


**Side outlet**


**3b** Remove safety star insert, leave tethered to unit.

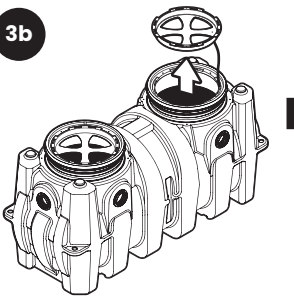

**3c** Unscrew diffuser retaining nut and remove outlet diffuser.

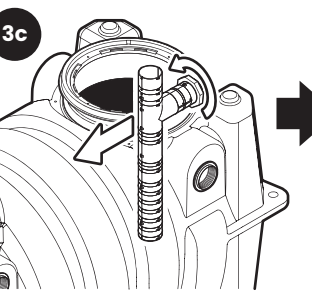


**3d** Rotate diffuser toward chosen outlet, insert and hand tighten retaining nut.

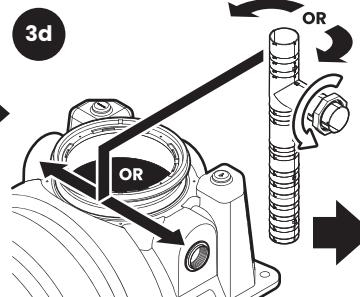


**OR**

**3e** Cap all unused connection points with 4" cleanout plugs using pipe thread sealant or tape approved for use with plastics.

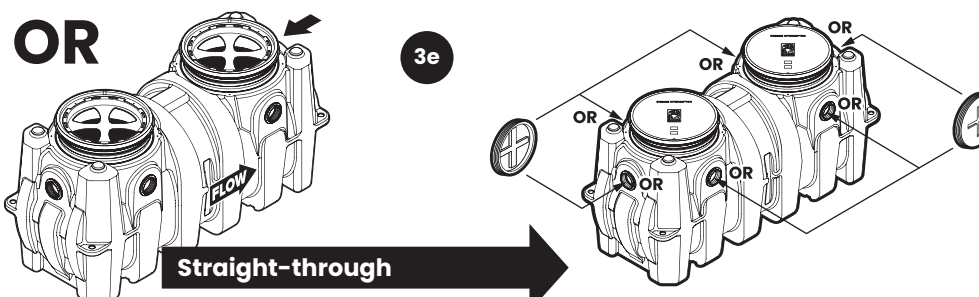


# BURIED INSTALLATION

## 4 Excavate Burial Pit

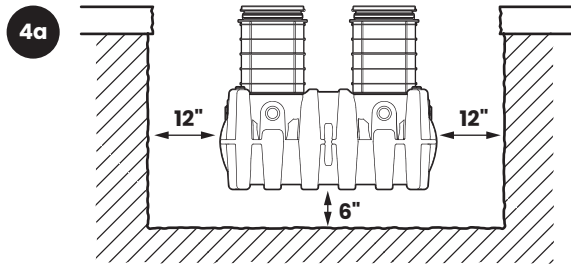


Excavate hole at least 12" larger than interceptor on all sides and 6" deeper than tank bottom.

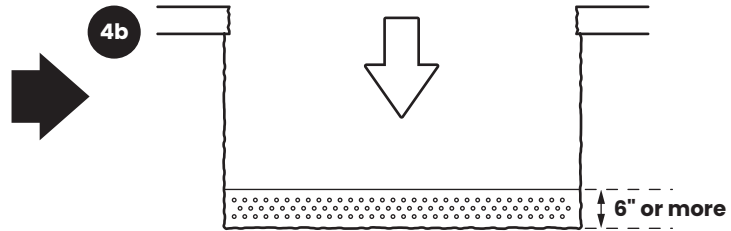


Lay a level bed of well-packed, crushed aggregate (approximately 3/4" size rock or sand, with no fines) in the base of hole.


## 5 Connect Piping

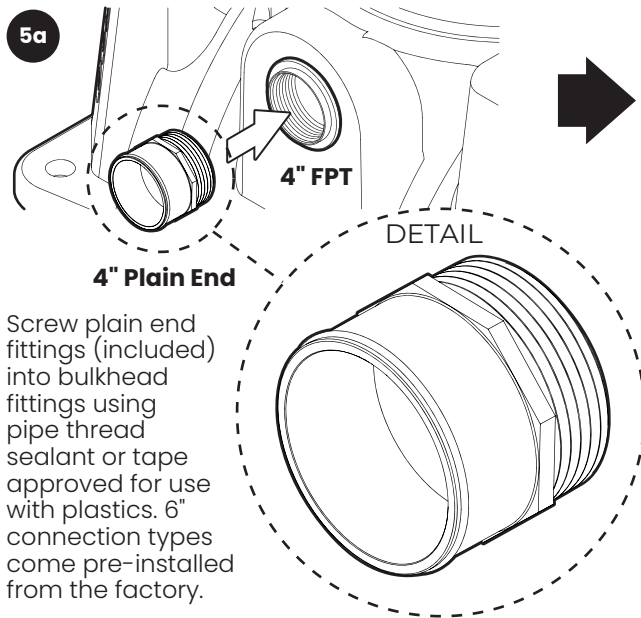

Screw plain end fittings (included) into bulkhead fittings using pipe thread sealant or tape approved for use with plastics. 6" connection types come pre-installed from the factory.

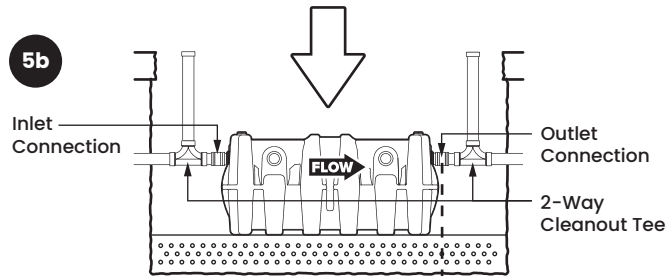

Lower unit into pit and set level. Mechanically couple inlet and outlet drainage lines to unit. **Do not solvent weld.** Ensure all upstream fixtures are trapped. Vent per local code. Installation of 2-way cleanout tees to grade (by others) is recommended.

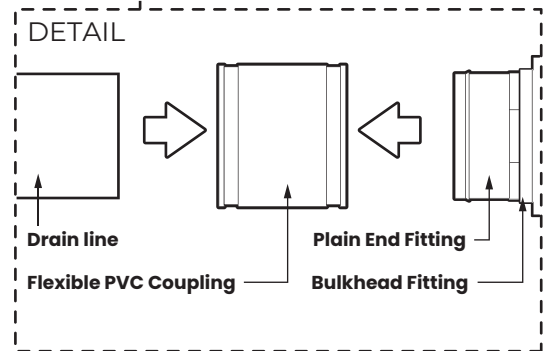

## 6 Wet or Air Test Piping Per Local Code

**⚠ WARNING!** DO NOT AIR TEST UNIT OR RISER SYSTEM!  
Doing so may result in property damage, personal injury or death.




**Have a Leak?** Call customer care at 913-951-3300  
Hours 8am-5pm CST, M-F

# BURIED INSTALLATION


## 7 Bring Covers Flush-to-Grade

The GB-250-B is ready for burial depth of 44" from finished grade to bottom of tank (or 13-1/2" to centerline of inlet). Deeper burials will require extending the Cover Adapters and possibly adding risers.


**7a** Measure dimension X to determine riser height needed.

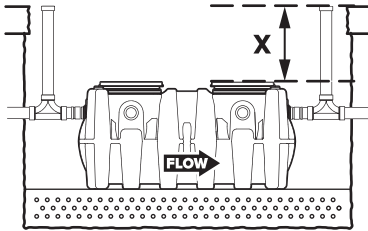


Riser Height Needed	Risers Required
0" - 4"	None (use adapter)
>4" - 34"	FCR2 (x2)
>34" - 64"	FCR2 (x4)
>64" - 94"	FCR2 (x6)

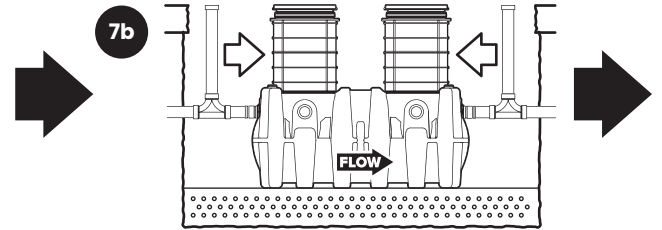


Install risers if required (see instructions included with FCR2).

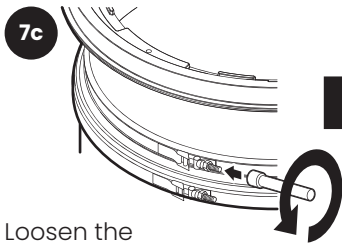


Loosen the Cover Adapter Upper Band Clamp using 7/16" Nut Driver Bit.

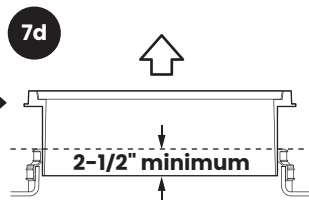

Adjust Cover Adapter heights as needed. **Maintain a minimum 2-1/2" insertion depth.**

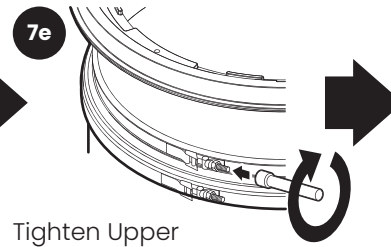


Tighten Upper Band Clamp to 5 -8 ft. lbs. of torque using 7/16" Nut Driver Bit.

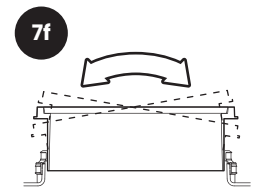


If required, Cover Adapters may now be tilted up to 10° in any direction using gasket flexibility.


## 8 Backfill and Finished Grade

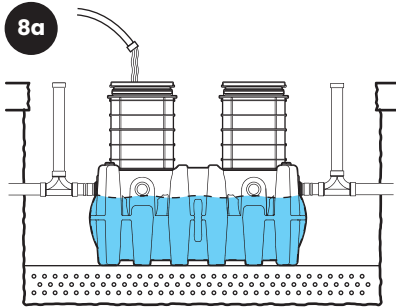

Fill unit with water for stabilization and float-out prevention.

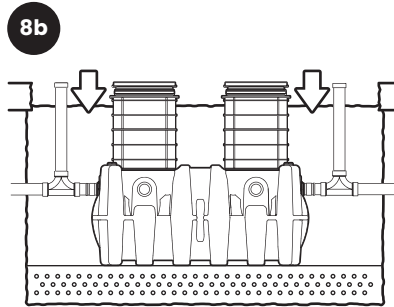

Backfill evenly around tank using crushed aggregate (approximately 3/4" size rock or sand with no fines) or flowable fill. **Do not compact backfill around unit.**

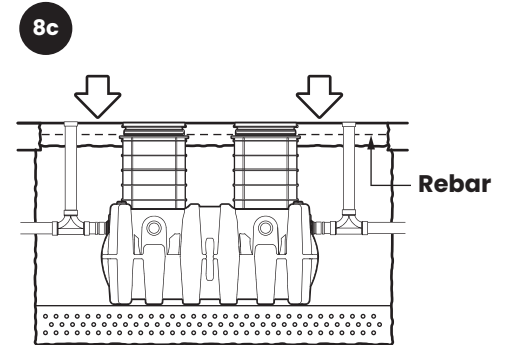

Pour concrete slab to finished grade.


**8c1**

### Vehicular Traffic Areas:

Minimum 8" thick concrete slab with rebar required. Thickness of concrete around covers to be determined by specifying engineer. If traffic loading is required the concrete slab dimensions shown are for guideline purposes only. Concrete to be 28 day compressive strength to 4,000 PSI. Use No. 4 rebar (ø 1/2") grade 60 steel per ASTM A615: connected with tie wire. Rebar to be 2-1/2" from edge of concrete and spaced in a 12" grid with 4" spacing around access openings.

### Pedestrian Traffic or Greenspace Areas:

Minimum 4" thick concrete slab with rebar required.

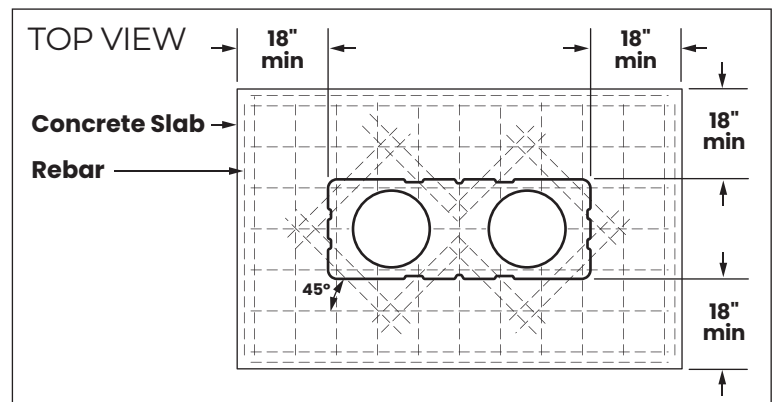





# ON THE FLOOR INSTALLATION

## Special Precautions

**1** **ODOR ALERT!**  
Do not install air gap on outlet side of interceptor.

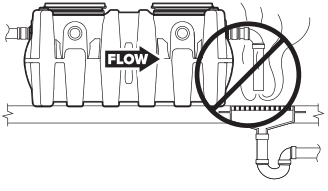


**2** **ODOR ALERT!**  
Interceptor is not a sewer gas trap. All upstream fixtures must be trapped.

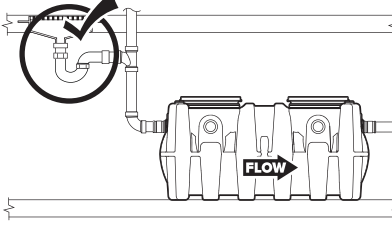


**3** **Install interceptor as close as possible to fixtures being served**


**4** **Provide at least 16" clearance above unit for routine maintenance.**

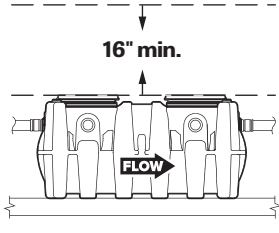

## 1 Test tank for water tightness

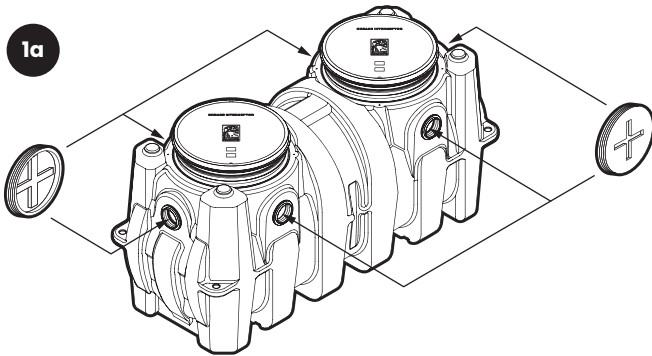


Cap all connection points with 4" cleanout plugs using pipe thread sealant or tape approved for use with plastics.

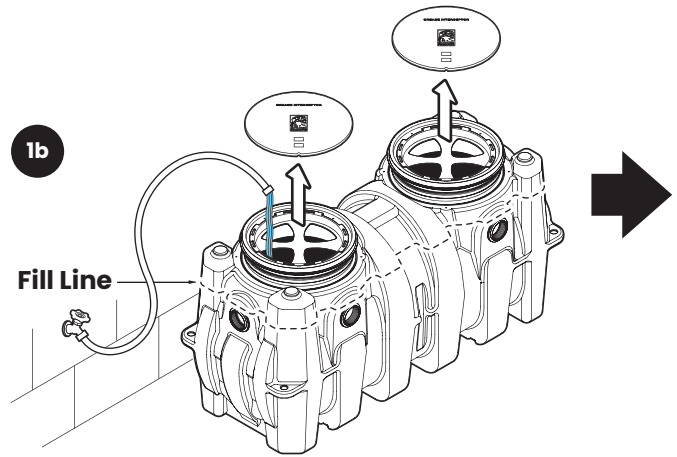

Remove covers. For base unit testing fill with water to just above the highest connection.

Inspect unit, connections and gaskets for leaks. Check water level at specific time intervals per local code.

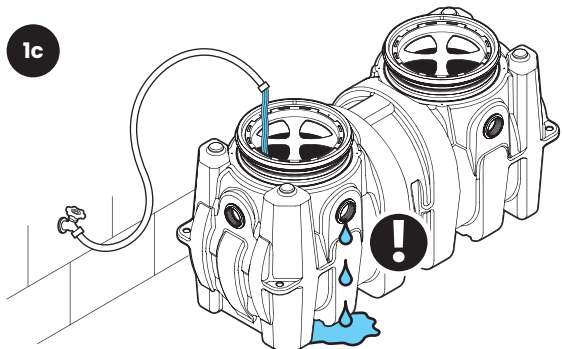

## Have a Leak?


Call customer care at 913-951-3300

Hours 8am-5pm CST, M-F

# ON THE FLOOR INSTALLATION


## 2 Set Up Inlet Diffuser

**2a Choose inlet location.**

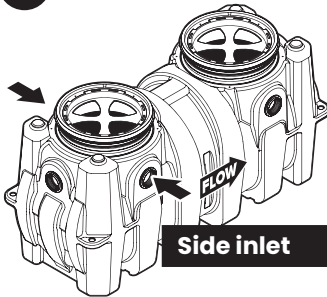


**Side inlet**


**2b** Remove safety star insert, leave tethered to unit.

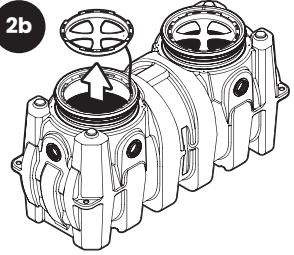

**2c** Unscrew diffuser retaining nut and remove inlet diffuser.

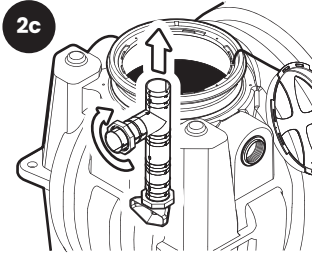


**2d** Unscrew foot retaining nut and remove inlet diffuser foot.

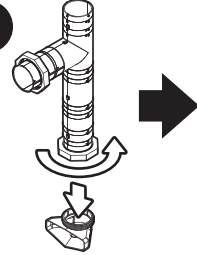



**OR**

**2e** Rotate diffuser top toward chosen inlet and replace foot, ensure it points toward unit front wall. Hand tighten foot retaining nut.

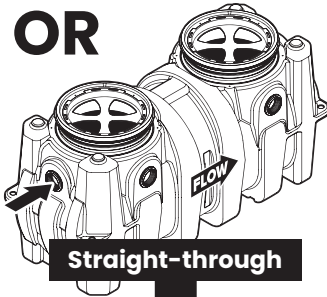


**Straight-through**

**2f** Insert diffuser into chosen inlet and hand tighten retaining nut.

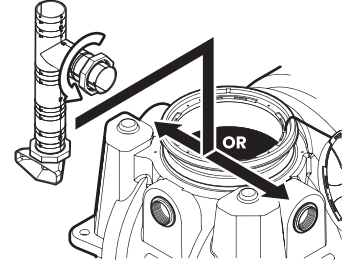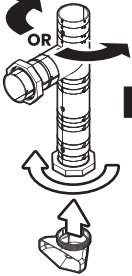


## 3 Set Up Outlet Diffuser and Install Cleanout Plugs

**3a Choose outlet location.**

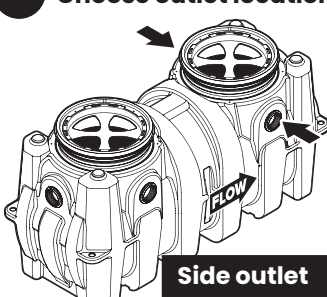


**Side outlet**


**3b** Remove safety star insert, leave tethered to unit.

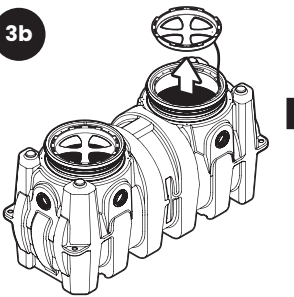

**3c** Unscrew diffuser retaining nut and remove outlet diffuser.

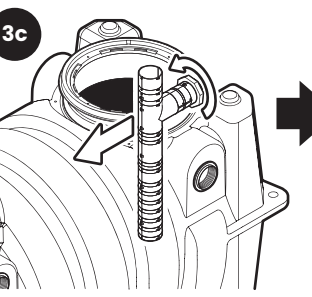


**3d** Rotate diffuser toward chosen outlet, insert and hand tighten retaining nut.

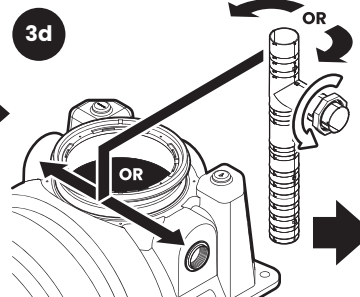



**OR**

**3e** Cap all unused connection points with 4" cleanout plugs using pipe thread sealant or tape approved for use with plastics.

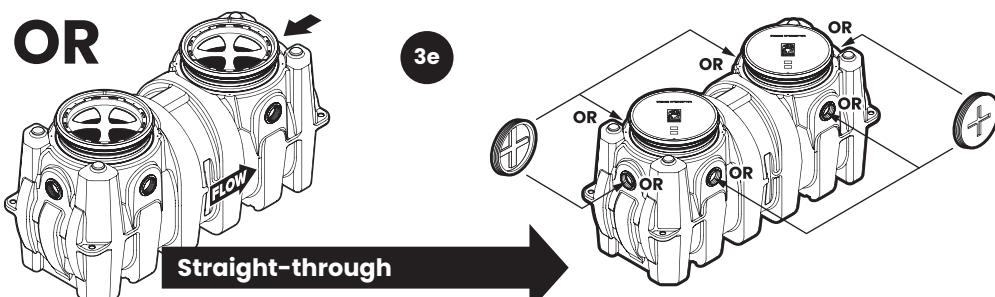


# ON THE FLOOR INSTALLATION

## 4 Connect Piping

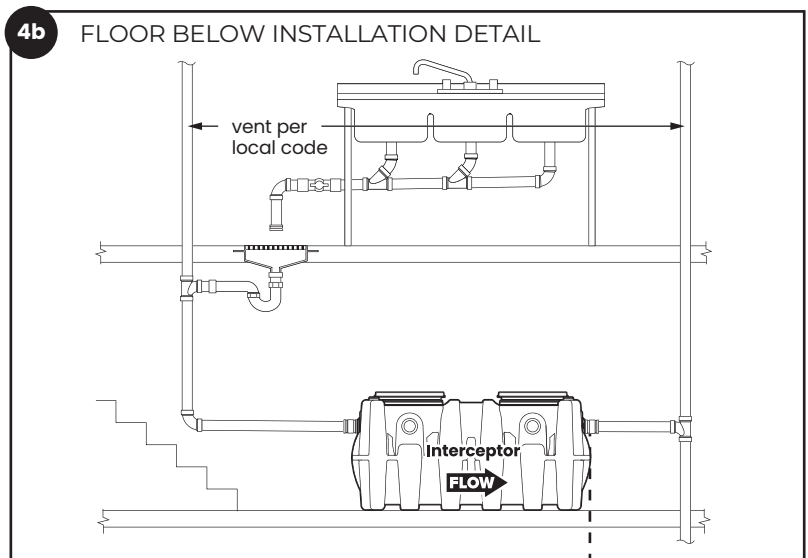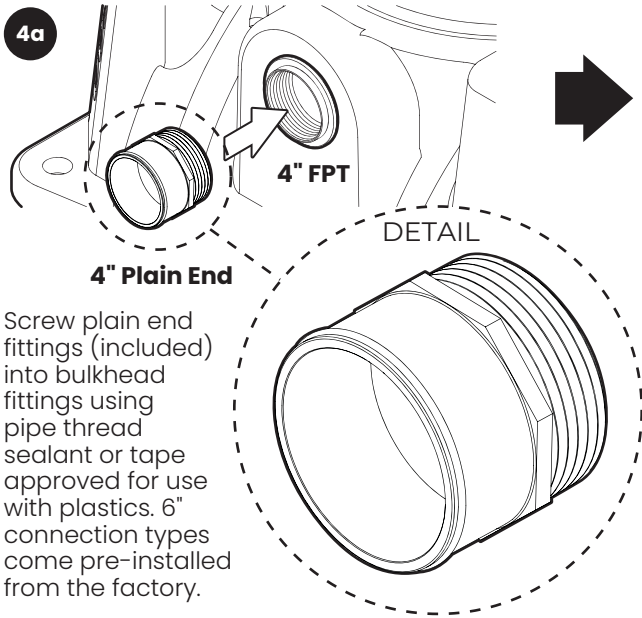

Mechanically couple inlet and outlet drainage lines to unit. **Do not solvent weld.** Ensure all upstream fixtures are trapped. Vent per local code.

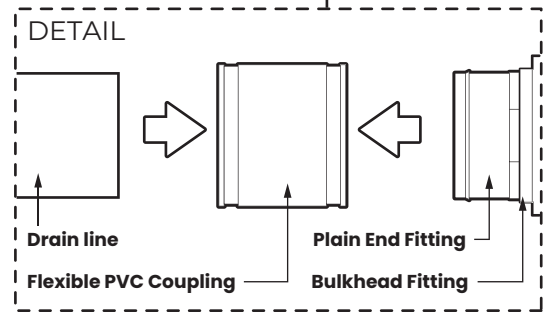

## 5 Wet or Air Test Piping Per Local Code

**⚠ WARNING!** DO NOT AIR TEST UNIT OR RISER SYSTEM!  
Doing so may result in property damage, personal injury or death.



**Leak?** Call customer care at  
913-951-3300  
8a - 5p M - F CST

# INSTALLATION OPTIONS

## 1 High Water Table Installations, See Anchor Kit Model AK1

If the installation location is in a high water table area or at risk are (including but not limited to tidal surge areas, floodplains and areas that receive storm water) the GB-250-B must be installed with Schier model AK1 anchor kit.

