

H382820 WILT CHANDELIER

ASSEMBLY AND MOUNTING INSTRUCTIONS

GENERAL

- WARNING-DISCONNECT POWER BEFORE RELAMPING OR WIRING THE FIXTURE. TURN OFF THE ENTIRE ELECTRICAL CIRCUIT TO WHICH THE LIGHTING FIXTURE IS ATTACHED
- INSTALLATION AND MAINTENANCE OF THIS FIXTURE SHOULD BE COMPLETED BY A LICENSED ELECTRICAN
- FAILURE TO INSTALL FIXTURE CORRECTLY COULD RESULT IN SERIOUS INJURY OR DEATH
- READ ALL INSTRUCTIONS BEFORE STARTING INSTALLATION.

- IF AN EXISTING FIXTURE IS BEING REPLACED, REMOVE IT AND NOTE TO WHICH WIRE IN THE OUTLET BOX THE ORIGINAL FIXTURE WAS ATTACHED.
- BEFORE DISCARDING THE CARTON DOUBLE CHECK THE PACKAGING TO MAKE SURE ALL PARTS HAVE BEEN FOUND.
- THIS FIXTURE WAS DESIGNED TO BE MOUNTED TO AN OCTAGON OUTLET BOX. THE BOX MUST BE SECURELY MOUNTED TO THE STRUCTURE OF THE BUILDING.

INSTALLATION

STEP 1.	Pull the wires out from the outlet box, and install mounting
	plate onto the outlet box using the (2) mounting screws.
	Strip the fixture wires ½" long at the ends.

STEP 2. Push the button on the canopy and adjust the cable length what you want. make sure you put the stop cable on the end of the cable and fasten the screws.

STEP 3. Fasten green ground wire to ground wire from the wall outlet box (usually green or copper color) or connect ground wire to green screw on the mounting plate.

STEP 4. Connect the neutral (white) fixture wire coming from the fixture base to neutral (usually white) outlet wire. Fasten both wires together with a plastic wire nut and tightly wrap the wire nut with electrical tape.

STEP 5. Repeat the previous step with the hot (black wires). Make

sure there are no exposed wires or strands that could cause a dangerous short circuit.

FAILURE TO CONNECT THE APPROPRIATE WIRES CORRECTLY COULD RESULT IN SEROIUS INJURY OR DEATH!

STEP 6. Carefully place connections back into the outlet box.

STEP 7. Mount the canopy to the mounting plate and secure with end nut.

STEP 8. Install the lamps. The fixture is rated for 25 watt type G16.5 lamp.

DO NOT EXCEED RECOMMENDED WATTAGE!

STEP 9. Restore power to the circuit at breaker or fusebox.

DIMMING

The fixture can be controlled by a wall dimming device. Only use triac/electronic dimmer. Make sure carton is marked for use with LED compact fluorescent-incandescent light source only. These can be

provided by your local electrical distributor, home center, or hardware store


CLEANING

Please clean with a soft, dry cloth ONLY! Do not use cleaning products.





ASSEMBLYANDMOUNTINGDIAGRAM

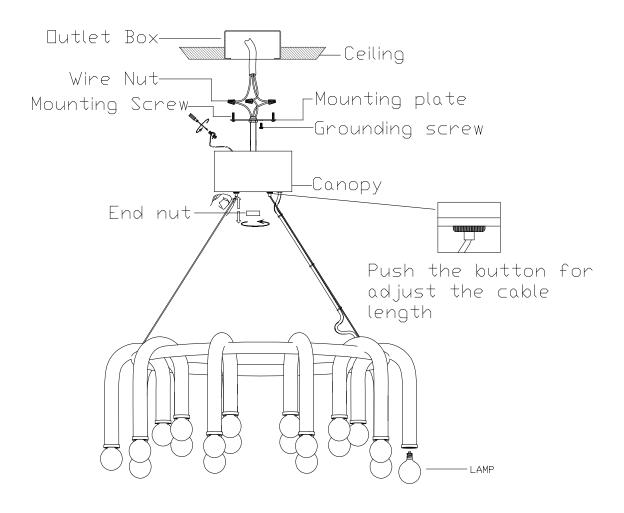

WIRE NUT/TAPINGDIAGRAM

