



**Technical Assistance:** (800)257-5911 or (215)766-2670

**Email:** info@scaletonscales.com

## **Model 4042ECO™ Spill Containment Scale Base with bladder**

[PN: **4042ECO-** ( enter size of base ) – ( enter net capacity in LB or KG )]:

The Model 4042ECO™ Spill Containment Scale is assembled and calibrated to the digital controller at the factory, then partially disassembled for shipment. **Depending on size of containment basin, sometimes they are shipped direct from the manufacturer and will arrive separate from scale base and controller.**

### **Set up and Wiring:**

**Step 1:** Remove all parts from box and inspect for damage – bent metal, broken wires, cracks in indicator, etc. **Any shipping damage must be reported to carrier!**

**Parts Bag Contains:** (Tie wrapped to scale base)

- 1) leveling foot w/ jam nut

**Step 2:** Place the scale base on solid, dry, and even surface. Clear the area of all debris where the scale base will be set up.

**STEP 4:** Position pivot plates on the floor so the base is in the desired position. Floor must be close to level, but if the base is out of level from side to side, shim pivot plates to level scale from side to side and prepare anchor bolts. Mark and drill (3) holes per pivot plate into concrete and anchor with lag bolts.

**STEP 5: This leveling adjustment is critical to accurate operation of the scale.** Place level on top of scale base from front to back and adjust leveling foot to level scale base. Tighten the nut on the load cell leveling foot stud so that foot does not twist off of level. Nut should be a little more than hand tightened.

**Step 6:** Make sure the anti-tipping side bolts are not touching the floor, but are capable of stopping the base from tipping.

**Step 7:** Place Containment basin under scale base making sure it isn't rubbing on scale base.

**Step 8:** If conduit is to be used, we recommend at least 2 feet of horizontally mounted, FLEXIBLE conduit as to not interfere with free movement of the base for accurate measurement. Feed the wire up through the conduit, and apply a fitting.

**Step 9:** Connect the wires into the connector using the following code:

### **Wire Color Code:**

Green = + Signal  
White = - Signal  
Black = - Supply Voltage  
Red = + Supply Voltage  
Violet = Shield

**\*\*\*See controller manual for rest of set-up and operating instructions.\*\*\***

### **Replacement Parts:**

PN: **SB/SS-** ( enter load cell value ) – **LC** : replacement load cell & shim

PN: **4042ECOLF** : leveling foot & jam nut for Model 4042ECO scale base

PN: **4042-CB26** : 26" Replacement Spill Containment Basin (11 gal)

PN: **4042-CB26x52** : 26"x52" Replacement Spill Containment Basin (22 gal)