

# MAINTENANCE

## Care and cleaning of chrome and special finishes

DO NOT use steel wool or cleansing agents containing alcohol, acid, abrasives, or the like. Use of any prohibited cleaning or maintenance products or substances could damage the surface of the soap dispenser. For surface cleaning use ONLY soap and water, then wipe dry with a clean cloth or towel. When cleaning bathroom tiles, the soap dispenser should be protected from any splattering of harsh cleansers.

## Disassemble of the soap pipe from the pump

The soap pipe can be disconnected from the soap pump by a simple slide & pull action. The sliding ring of the quick connection fixation nipple on the pump should be pulled down. It releases the open end of the soap pipe which can then be easily pulled out.

## Clean the soap tank

Clean out the tank prior to refill by flushing warm water through the hoses and pump until clean water is released from the spout. TIP: Keeping a spare tank will enable this process to be completed in a speedy and hygienic manner with minimal downtime.

## SPARE PARTS LIST

Seals and screws kit	SD011
Sensor kit (single)	SD012
Sensor kit (10 pack)	SD013
Pump assembly	SD004
Soap bottle 1L (single)	SD005
Soap bottle 1L (6 pack)	SD006
Soap bottle support kit (single)	SD007
Soap bottle support kit (6 pack)	SD008
Battery box (batteries excluded)	SD009
12V switching transformer	SD010
Remote control for SD	RC6960SDL