
Rain Collars - How To Use

Slip the collar over the vent stack and push until the base of the collar will go no further.
No caulking is necessary!