Installation, Operating and Service Instructions for

MPO-IQTM

Models:

- MPO-IQ84B
- MPO-IQ115B
- MPO-IQ147B
- MPO-IQ189B
- MPO-IQ231B

Manual Contents Page
1. Pre-installation8
2. Packaged Boiler Assy Trim & Controls. 11
3. Water Boiler Piping20
4. Natural Draft Venting24
5. Direct Venting/ Air Intake Piping28
6. Electrical35
7. Oil Piping
8. System Start-up41
9. Operating46
10. Maintenance and Service51
11. Boiler Cleaning
12. Troubleshooting56
13. Service Parts
14. Burner Specifications74
Appendix A: Oil Burner IQ Control System 76
Appendix B: Blocked Vent Safety Switch80

As an ENERGY STAR® Partner, U.S. Boiler Company has determined that the MPO-IQ series meets the ENERGY STAR® guidelines for energy efficiency established by the United States Environmental Protection Agency (EPA).

• High Efficiency

- Oil-Fired, 3-Pass
- Water Boiler
- Natural Draft or Direct Vent (147B thru 231B)
- B20 Ready



TO THE INSTALLER:

Affix these instructions adjacent to boiler.

TO THE CONSUMER:

Retain these instructions for future reference.





Boiler Company



For service or repairs to boiler, call your heating contractor. When seeking information on boiler, provide Boiler Model Number and Serial Number as shown on Rating Label.

Intertek

9700609

IMPORTANT INFORMATION - READ CAREFULLY

All boilers must be installed in accordance with National, State and Local Plumbing, Heating and Electrical Codes and the regulations of the serving utilities. These Codes and Regulations may differ from this instruction manual. Authorities having jurisdiction should be consulted before installations are made. In all cases, reference should be made to the following Standards:

USA BOILERS

- A. Current Edition of American National Standard ANSI/NFPA 31, "Installation of Oil Burning Equipment", for recommended installation practices.
- B. Current Edition of American National Standard ANSI/NFPA 211, "Chimneys, Fire places, Vents, and Solid Fuel Burning Appliances", For Venting requirements.
- C. Current Edition of American Society of Mechanical Engineers ASME CSD-1, "Controls and Safety Devices for Automatically Fired Boilers", for assembly and operations of controls and safety devices.
- D. All wiring on boilers installed in the USA shall be made in accordance with the National Electrical Code and/or Local Regulations.

CANADIAN BOILERS

- A. Current Edition of Canadian Standards Association CSA B139, "Installation Code for Oil Burning Equipment", for recommended Installation Practices.
- B. All wiring on boilers installed in Canada shall be made in accordance with the Canadian Electrical Code and/or Local Regulations.

The following terms are used throughout this manual to bring attention to the presence of hazards of various risk levels, or to important information concerning product life.

A DANGER

Indicates an imminently hazardous situation which, if not avoided, will result in death, serious injury or substantial property damage.

A CAUTION

Indicates a potentially hazardous situation which, if not avoided, may result in moderate or minor injury or property damage.

WARNING

Indicates a potentially hazardous situation which, if not avoided, may result in moderate or minor injury or property damage.

NOTICE: Indicates special instructions on installation, operation, or maintenance which are important but not related to personal injury hazards.

NOTICE: This boiler has a limited warranty, a copy of which is included with this boiler.

- The warranty for this boiler is valid only if the boiler has been installed, maintained and operated in accordance
 with these instructions.
- Surface rust on cast iron sections may be attributed to the manufacturing process as well as condensation during storage. Surface rust is normal and does not affect the performance or longevity of a boiler.

A DANGER

DO NOT store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.

WARNING

Improper installation, adjustment, alteration, service or maintenance can cause property damage, personal injury or loss of life. Failure to follow all instructions in the proper order can cause personal injury or death. Read and understand all instructions, including all those contained in component manufacturers manuals which are provided with the boiler before installing, starting-up, operating, maintaining or servicing this boiler. Keep this manual and literature in legible condition and posted near boiler for reference by owner and service technician.

- This boiler requires regular maintenance and service to operate safely. Follow the instructions contained in this manual.
- Installation, maintenance, and service must be performed only by an experienced, skilled and knowledgeable installer or service agency.
- All heating systems should be designed by competent contractors and only persons knowledgeable in the layout and installation of hydronic heating systems should attempt installation of any boiler.
- Installation is not complete unless a pressure relief valve is installed into the 3/4 in. tapping located on return injector assembly that was installed into boss on top of rear section See "Packaged Boiler Assy Trim & Controls", and "Water Boiler Piping" Sections of this manual for details.
- It is the responsibility of the installing contractor to see that all controls are correctly installed and are operating properly when the installation is completed.
- This boiler is suitable for installation on combustible flooring. Do not install boiler on carpeting.
- Do not tamper with or alter the boiler or controls.
- Inspect flueways at least once a year preferably at the start of the heating season. The inside of the combustion chamber, the vent system and boiler flueways should be cleaned if soot or scale has accumulated. When cleaning this boiler, take precaution to avoid damage to burner swing door insulation. If damaged, or if there is evidence of previous damage, burner swing door insulation must be replaced immediately.
- Oil Burner and Controls must be checked at least once a year or as may be necessitated.
- Do not operate boiler with jumpered or absent controls or safety devices.
- Do not operate boiler if any control, switch, component, or device has been subject to water.
- Boiler construction materials, products of combustion and the fuel contain alumina, silica, heavy metals, carbon monoxide, nitrogen oxides, aldehydes and/or other toxic or harmful substances which can cause death or serious injury and which are known to the state of California to cause cancer, birth defects and other reproductive harm. Always use proper safety clothing, respirators and equipment when servicing or working nearby the appliance.
- This boiler contains very hot water under high pressure. Do not unscrew any pipe fittings nor attempt to disconnect any components of this boiler without positively assuring the water is cool and has no pressure. Always wear protective clothing and equipment when installing, starting up or servicing this boiler to prevent scald injuries. Do not rely on the pressure and temperature gauges to determine the temperature and pressure of the boiler. This boiler contains components which become very hot when the boiler is operating. Do not touch any components unless they are cool.

WARNING

This boiler must be properly vented. The chimney must be inspected for any obstructions and cleaned prior to each heating season. A clean and unobstructed chimney flue is necessary to produce the minimum draft required to safely evacuate noxious fumes that could cause personal injury or loss of life. Evidence of loose debris and or condensate induced stains at the base of the chimney flue, connector or smokepipe joints may be signs of condensing flue gases. Flue gas condensate is corrosive, which requires special consideration and must be addressed immediately. Refer to Section 4, "Venting" or Section 5 "Direct Venting / Air Intake Piping".

- This boiler needs fresh air for safe operation and must be installed so there are provisions for adequate combustion and ventilation air.
- This boiler is supplied with controls which may cause the boiler to shut down and not re-start without service. If damage due to frozen pipes is a possibility, the heating system should not be left unattended in cold weather; or appropriate safeguards and alarms should be installed on the heating system to prevent damage if the boiler is inoperative.
- This boiler is designed to burn No. 2 fuel oil including bio blends not exceeding 20% Bio Diesel (ASTM D396) only.
 - DO NOT USE with Flammable Liquids, Gasoline, Crankcase drainings, charcoal lighter fluid, or any oil containing gasoline.
 - DO NOT convert to any solid fuel (i.e., wood, coal).
 - DO NOT convert to any gaseous fuel (i.e., natural gas, LP).
 - DO NOT USE Raw Vegetable Oil (RVO) or any fuel blended with RVO
 - Use of untested/uncertified fuels could result in explosion, fire, personal injury, or death, and/or damage to equipment and property.
 - Never burn garbage or paper in this boiler.
- All flammable debris, rags, paper, woodscraps, etc., should be kept clear of the boiler at all times. Keep the boiler area clean and free of fire hazards.
- **Asphyxiation Hazard.** The interior of the venting system must be inspected and cleaned before the start of the heating season and should be inspected periodically throughout the heating season for any obstructions. A clean and unobstructed venting system is necessary to allow noxious fumes that could cause injury or loss of life to vent safely and will contribute toward maintaining the boiler's efficiency.
- All boilers equipped with burner swing door have a potential hazard which, if ignored, can cause severe
 property damage, personal injury or loss of life. Before opening swing door, unplug burner power cord
 from receptacle located in lower right corner of jacket front panel and turn off service switch to boiler to
 prevent accidental firing of burner outside the combustion chamber. Be sure to tighten swing door fasteners
 completely when service is completed.

Congratulations on your purchase of a new MPO-IQ[™] boiler—designed and constructed to provide you with years of reliable service.

- Cast iron heat exchanger for reliability and durability, nothing beats a cast iron heat exchanger.
- *IQ Control™ System the most advanced and easiest to use controls available.
- *System-friendly* built-in protection from condensation and thermal shock.

*IQ Control System Overview

MPO-IQ Boiler uses a microprocessor based control system called the "IQ Control System". This "IQ Control System" consists of an IQ Oil Boiler Control (Boiler Control) in conjunction with an Oil Primary Control (Oil Primary) and an IQ Option Panel (Option Panel) with optional "plug-in" IQ Option Cards (Option Card). The IQ Control System fully integrates both factory and field installed components, simplifying installation and troubleshooting. The IQ Control System is designed to efficiently operate the entire boiler system to save energy and installation and setup time, while ensuring adequate supply of heat and domestic hot water.

What's in the crate?

	Content Check List	
1.	MPO-IQ Boiler Assembly on Shipping Skid: MPO-IQ84B MPO-IQ115B MPO-IQ147B MPO-IQ189B MPO-IQ231B	
2.	Circulator & Gasket Kit: Taco 007-e - P/N 107710-01 Grundfos 15-55FC - P/N 112241-01 Parts Carton:	
	MPO-IQ84B - P/N 109984-01 MPO-IQ115B - P/N 109984-02 MPO-IQ147B/231B - P/N 103088-03	
4.	Barometric Draft Regulator Carton 5 in. Dia P/N 8116287 6 in. Dia P/N 8116288 7 in. Dia P/N 8116289	
5.	Instruction Envelope - P/N 103858-02 Installation & Operation Manual Boiler Warranty Sheet - P/N 103203-06	

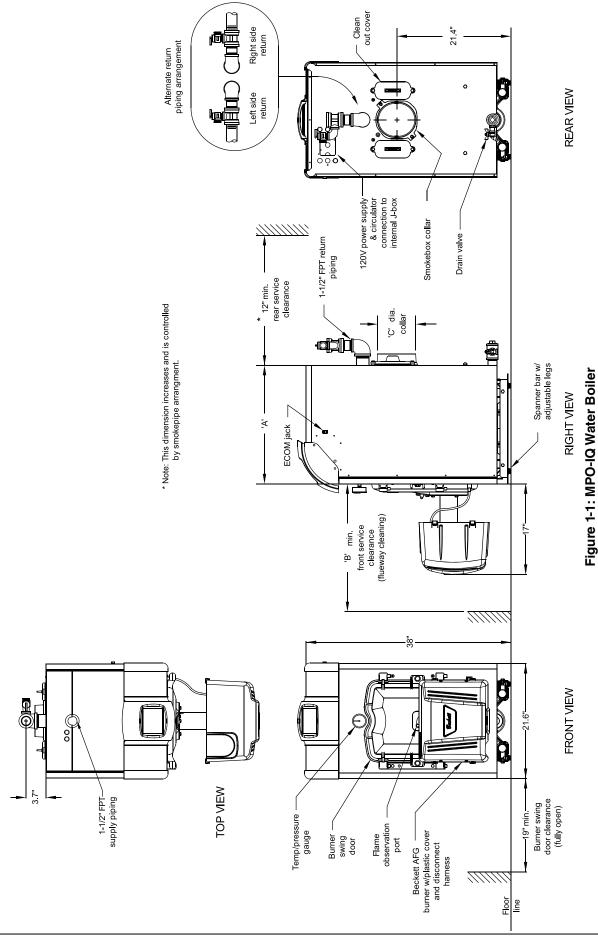


Table 1-2: Dimensional Data (See Figure 1-1)

	Dimensions See Figure 1-1			Water Content	Heat Transfer	Actual
Boiler Model No.	"A"	"B"	"C"	- Gallons	Surface Area - Sq. Ft.	Shipping Weight (LB.)
MPO-IQ84B/115B	16-5/8 in.	24 in.	5 in.	7.70	13.29	430
MPO-IQ147B	22-5/8 in.	24 in.	6 in.	11.08	20.29	545
MPO-IQ189B	28-5/8 in.	30 in.	6 in.	14.46	27.29	658
MPO-IQ231B	34-5/8 in.	36 in.	7 in.	17.84	34.29	771

Note: 1. Maximum Working Pressure: Water: 30 PSI Shipped From Factory (Standard), 40 PSI Optional, 50 PSI Optional

MAWP is 50psi. Shipped with 30 psi pressure relief valve.



Table 1-3: Rating Data

Doilor Model	Burner DOE Capacity Heating		NET AHRI Ratings	AFUE	Minimum Chimney Recommendation			Direct Vent System		
Boiler Model No.	GPH	MBH (1)	Capacity MBH (2)	Water MBH (3)	%	Round In. Dia.	Rectangle In. x In.	Height Ft.	Model	Vent Connector Dia. Inch
MPO-IQ84B	0.60	84	74	64	87.0	6	8 x 8	15	N/A	N/A
MPO-IQ115B	0.80	115	101	88	87.0	6	8 x 8	15	N/A	N/A
MPO-IQ147B	1.00	140	123	107	87.0	6	8 x 8	15	FDVS-56	5
MPO-IQI89B	1.30	182	160	139	87.0	7	8 x 8	15	FDVS-56	5
MPO-IQ231B	1.60	221	197	171	87.0	7	8 x 8	15	FDVS-67	6

- (1) MBH refers to thousands of BTU per hour.
- (2) Based on Standard Test prescribed by the United States Department of Energy at combustion conditions of 13.0% CO₂.
- (3) Net AHRI water ratings based on a piping and pickup allowance of 1.15. Consult with manufacturer before selecting a boiler having unusual piping and pickup requirements, such as intermittent system operation, extensive piping systems, etc.

Note: The rating shown are based on the use of #2 Heating Oil.

1 Pre-Installation

- A. <u>INSPECT SHIPMENT</u> carefully for any signs of damage.
 - 1. All equipment is carefully manufactured, inspected and packed. Our responsibility ceases upon delivery of crated boiler to the carrier in good condition.
 - 2. Any claims for damage or shortage in shipment must be filed immediately against the carrier by the consignee. No claims for variances from, or shortage in orders, will be allowed by the manufacturer unless presented within sixty (60) days after receipt of goods.
- B. LOCATE BOILER in front of final position before removing crate. See Figure 1-1.
 - 1. LOCATE so that vent pipe connection to chimney will be short and direct.
 - 2. BOILER IS SUITABLE FOR INSTALLATION ON COMBUSTIBLE FLOOR. Boiler cannot be installed on carpeting.
 - 3. FOR BASEMENT INSTALLATION, provide a solid elevated base, such as concrete, if floor is not level, or if water may be encountered on floor around boiler.
 - 4. PROVIDE RECOMMENDED SERVICE CLEARANCE, if applicable, as follows:
 - a. Clearance from Jacket Front Panel -
 - 24 in. for servicing burner
 - 24 in. for flueway cleaning (MPO-IQ84B thru 147B)

- b. Clearance from Jacket Side Panels -
 - 19 in. for burner swing door, if opened fully with burner mounted, otherwise 1 in. with burner removed.
 - 12 in. access clearance to service rear of boiler if other side clearance is less than 12 in.
 - 3 in, minimum if other side clearance is 12 in. or larger to access and service rear of boiler.
- c. Clearance from Jacket Rear Panel -
 - 12 in. minimum for rear smokebox cleaning (Note: This dimension will also be controlled by horizontal to vertical to horizontal smokepipe arrangement - Chimney Vent (see Figures 1-4 and 4-1).
 - 24 in. for rear smokebox cleaning and disconnecting vent pipe from appliance adapter for servicing (if required) - Direct Vent (see Figure 1-5).
- 5. For minimum clearances to combustible materials. See Figures 1-4 and 1-5.

NOTICE: Clearance to venting is for single wall vent pipe. If Type L vent is used, clearance may be reduced to the minimum required by the vent pipe manufacturer.

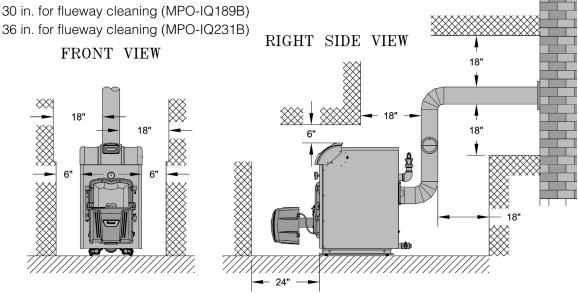


Figure 1-4: Chimney Vented Boiler - Minimum Installation Clearances To Combustible Materials (Inches)

Notes:

- 1. Listed clearances comply with American National Standard ANSI/NFPA 31, Installation of Oil Burning Equipment.
- 2. MPO-IQ boilers can be installed in rooms with clearances from combustible material as listed above. Listed clearances cannot be reduced for alcove or closet installations.
- 3. For reduced clearances to combustible material, protection must be provided as described in the above ANSI/NFPA 31 standard.

1 Pre-Installation (continued)

C. PROVIDE COMBUSTION AND VENTILATION

<u>AIR.</u> Local and National Codes may apply and should be referenced.

WARNING

Adequate combustion and ventilation air must be provided to assure proper combustion and to maintain safe ambient air temperatures.

Do not install boiler where gasoline or other flammable vapors or liquids, or sources of hydrocarbons (i.e. bleaches, fabric softeners, etc.) are used or stored.

 Determine volume of space (boiler room). Rooms communicating directly with the space in which the appliances are installed, through openings not furnished with doors, are considered a part of the space.

 $Volume(ft.^3) = Length(ft.) \times Width(ft.) \times Height(ft.)$

- 2. Determine total input of all appliances in the space. Add inputs of all appliances in the space and round the result to the nearest 1,000 BTU per hour.
- 3. Determine type of space. Divide Volume by total input of all appliances in space. If the result is greater than or equal to 50 ft.³/1,000 BTU per hour, then it is considered an unconfined space. If the result is less than 50 ft.³/1,000 BTU per hour then the space is considered a *confined space*.
- 4. For boiler located in an *unconfined space of a conventionally constructed building*, the fresh air infiltration through cracks around windows and doors normally provides adequate air for combustion and ventilation.
- 5. For boiler located in a confined space or an unconfined space in a building of *unusually tight* construction, provide outdoor air.

a. Outdoor air for combustion may be provided with an optional Fresh Air Accessory Kit (ONLY AVAILABLEWITH BECKETT BURNER). Plastic cover applications, P/N 102119-01. Refer to Fresh Air Accessory Kit instructions for installation and air intake piping details. See Section 5 for installation details.

or

- b. Outdoor air may be provided with the use of two permanent openings which communicate directly or by duct with the outdoors or spaces (crawl or attic) freely communicating with the outdoors. Locate one opening within 12 inches of top of space. Locate remaining opening within 12 inches of bottom of space. Minimum dimension of air opening is 3 inches. Size each opening per following:
 - Direct communication with outdoors.
 Minimum free area of 1 square inch per 4,000 BTU per hour input of all equipment in space.
 - ii. Vertical ducts. Minimum free area of 1 square inch per 4,000 BTU per hour input of all equipment in space. Duct cross-sectional area shall be same as opening free area.
 - iii. Horizontal ducts. Minimum free area of 1 square inch per 2,000 BTU per hour input of all equipment in space. Duct cross-sectional area shall be same as opening free area.

 Alternate method for boiler located within confined space. Use indoor air if two permanent openings communicate directly with additional space(s) of sufficient volume such that combined volume of all spaces meet criteria for unconfined space. Size each opening for minimum free area of 1 square inch per 1,000 BTU per hour input of all equipment in spaces, but not less than 100 square inches.

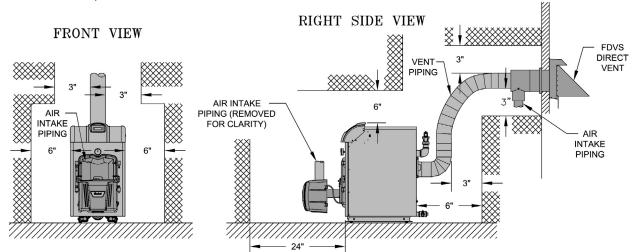


Figure 1-5: Direct Vent Boiler - Minimum Installation Clearances To Combustible Materials (Inches)

1 Pre-Installation (continued)

- 6. Louvers and Grilles of Ventilation Ducts
 - a. All outside openings should be screened and louvered. Screens used should not be smaller than 1/4 inch mesh. Louvers will prevent the entrance of rain and snow.
 - b. Free area requirements need to consider the blocking effect of louvers, grilles, or screens protecting the openings. If the free area of the louver or grille is not known, assume wood louvers have 20-25 percent free area and metal louvers and grilles have 60-75 percent free area.
 - c. Louvers and grilles must be fixed in the open position, or interlocked with the equipment to open automatically during equipment operation.
- D. <u>DIRECT VENT CONFIGURATIONS</u> requires:
 - 1. Beckett NX Burner
 - 2. Direct Vent Conversion Kit
 - 3. Double Wall Flex Oil Vent Pipe (FOVP)

Table 1-6: Direct Vent Configuration Components

Boiler Model No.	Beckett NX Oil Burner Part No.	Direct Vent Conversion Kit Part No.	FOVP Cart Part No.
MPO-IQ147B	112207-01	100100 00	100212-02 - 10 ft.
MPO-IQ189B	112208-01	102130-02	100214-02 - 20 ft.
MPO IO221B	MPO-IQ231B 112209-01 102130-03	12209-01 102130-03	100212-03 - 10 ft.
IVIF O-IQ23 IB			100214-03 - 10 ft.

2 Packaged Boiler Assembly - Trim & Controls

A. REMOVE CRATE.

- 1. Remove all fasteners at crate skid.
- Lift outside container and remove all other inside protective spacers and bracing. Remove miscellaneous parts carton.

B. REMOVE BOILER FROM SKID.

- To reduce the risk of damage to boiler jacket, use the following procedure to remove from skid, see Figure 2-1:
 - **Step 1**. Boiler is secured to base with (4) 5/16 in. cap screws, (2) in front and (2) in rear of shipping skid, see Figure 2-1. Remove all securing hardware.
 - **Step 2.** Place wooden block(s) 12 in. from rear of skid as shown (one piece 4 in. x 4 in. x 16 in. lg. or two pieces of 2 in. x 4 in. x 16 in. lg.)
 - **Step 3.** Insert 1 in. Sch. 40 pipe handles through leg hole in front and rear legs. Center end of pipe on wooden blocks as shown in Figure 2-1.
 - **NOTE:** Pipe handles should extend a minimum of 48 in. beyond jacket front panel for best leverage.
 - **Step 4.** Using the pipe handles, lift boiler until adjustable legs are elevated above the deck boards.
 - Step 5. Remove skid from underneath the boiler.
 - **Step 6.** Lower pipe handles until front adjustable legs touch floor. If necessary, place wooden blocks under front legs before lowering to provide hand clearance.
 - Step 7. To lower rear of boiler, tilt boiler slightly forward by pushing on smokebox collar or lift

pipes protruding through rear legs until wooden blocks can be removed (see Figure 2-1). Slowly allow the weight of the boiler to tilt backward until rear legs rest on floor.

Step 8. If wood block was placed under front legs, lift pipe handles, remove wooden block and lower front legs to floor. Remove pipe handles.


A CAUTION


Do not drop boiler. Do not bump boiler jacket against floor.

- C. <u>MOVE BOILER TO PERMANENT POSITION</u> by sliding or walking.
- D. <u>PROCEDURE TO OPEN, CLOSE AND SECURE BURNER SWING DOOR</u>

Throughout this manual you will be instructed to open and close the burner swing door for various reasons. There is a proper and improper method to closing and securing the burner swing door opened for inspection, cleaning or field service.

- TO OPEN BURNER SWING DOOR (see Figures 2-2 and 2-3).
 - **Step 1.** Loosen but do not remove left side latching hardware (3/8 in. x 1-3/4 in. lg. tap bolt).
 - **Step 2.** Loosen and remove right side latching hardware (3/8 in. x 1-3/4 in. lg. tap bolt and washer).
 - **Step 3.** Remove left side latching hardware (3/8 in. x 1-3/4 in. lg. tap bolt and washer).

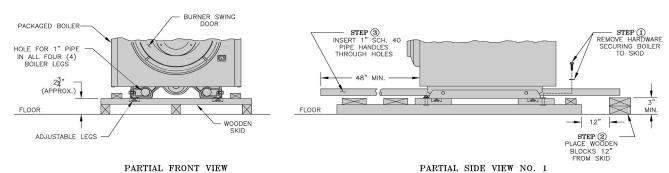

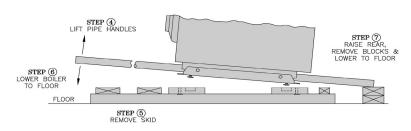

PARTIAL SIDE VIEW NO. 2

Figure 2-1: Packaged Boiler Removal from Skid

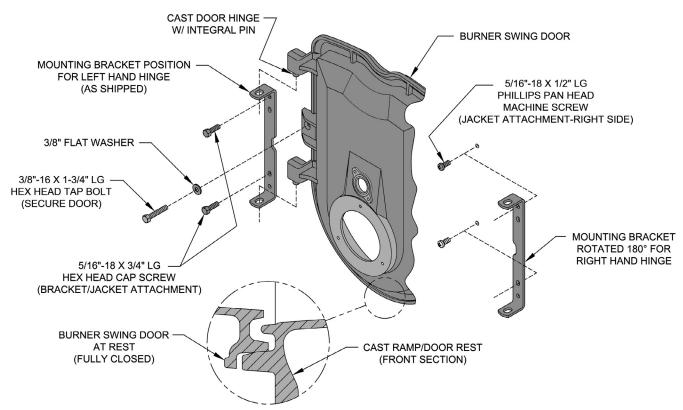


Figure 2-2: Partial Front View - Burner Swing Door Mounted to Boiler - Fully Closed and Secured

- **Step 4.** Disconnect burner power cord from receptacle located in lower right corner of jacket front panel.
- **Step 5.** Door can be swung to the fully open position, approximately 90° to 120°, with the burner mounted providing that there is 19 in. of clearance to the adjacent wall, see Figures 1-1 and 2-3.


NOTE: If reduced clearance prevents the door from opening fully, one of the following can provide full access:

- a. Burner can be removed to allow full rotation of door.
- b. Door with burner mounted can be lifted off mounting bracket and set aside during servicing.
- c. The door mounting hardware is reversible from left side hinge (as shipped) to right side hinge.

To reverse hinge arrangement (see Figure 2-2):

- Lift door off mounting bracket and set aside.
- Remove mounting bracket and hardware from left side.

- Remove upper jacket front panel retaining screw (5/16 in. x 1/2 in. lg. Phillip Pan head machine screw) from right side of door and re-install in vacated upper mounting bracket tapping. Do not tighten.
- Move lower jacket panel retaining screw from right side to left tapping. Do not tighten.
- Rotate door mounting bracket 180°.
 Insert 5/16 in. cap screw through top hole in bracket and install in upper vacated jacket hole on right side of door.
- Install second 5/16 in. cap through bracket hole into lower vacated tapping on right side.
- Tighten both sets of hardware to secure jacket and mounting bracket.
- Lift door and place integral cast hinge pins on door into slotted mounting bracket holes.
- Perform routine inspection, service or cleaning as necessary.
- To close Burner Swing Door (see Figures 2-2 and 2-3):

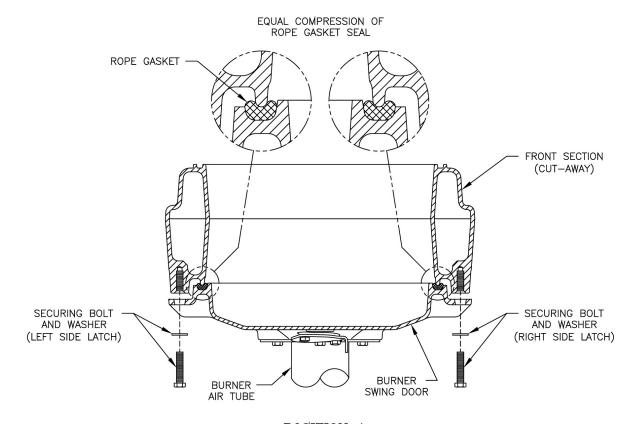

POSITION 1 (PROPERLY CLOSED AND SECURED)

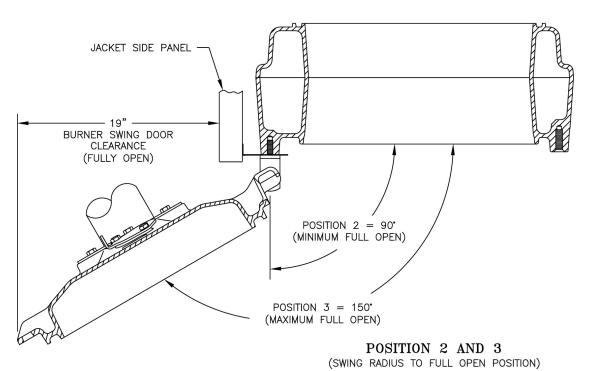


Figure 2-3: Top View - Burner Swing Door Mounted to Cast Iron Block Assembly (Jacket Removed for Clarity)

- **Step 1.** From the fully open position, rotate Burner Swing Door to the closed position.
- **Step 2.** If necessary, place your right hand under the burner air tube to lift upward. Lift the door up unto the built-in cast ramp/door rest (protruding from the bottom of the front section casting see Figure 2-2).
- Step 3. Use one hand to help hold door in position by lifting up on rear burner housing or applying pressure directly to the door while re-installing the securing hardware with your opposite hand. Always install right side latching hardware (3/8-16 in. x 1-3/4 in. lg. tap bolt and flat washer) first, then install left side hinge hardware (3/8-16 in. x 1-3/4 in. lg. tap bolt and flat washer) second. Apply additional pressure while hand tightening the hardware as far as possible, then release the pressure.

NOTICE: When securing burner swing door make sure door is drawn-in equally on both sides.

Step 4. Use a hand wrench to tighten door hardware and always start with the right side cap screw first. Use an alternating tightening method from right side tap bolt to left side tap bolt to tighten door equally until sealed without applying excessive torque. Never tighten left side flange bolt first or tighten either piece of hardware 100% without using the alternating tightening method described above.

Failure to follow the prescribed procedure could cause thread damage to casting or a leak in the door seal. If left side tap bolt is tightened before right side tap bolt, right side of door can <u>not</u> be drawn-in to provide an air tight seal, as shown in


Figure 2-4. Applying excessive torque will only cause thread damage.

E. <u>INSPECT SWING DOOR INSULATION AND ROPE</u> GASKET.

- 1. Open burner swing door using procedure previously outlined in Paragraph D of this section.
- Inspect fiberglass rope located on the swing door.
 The rope must be evenly distributed around the
 perimeter of the door groove and cannot bunch or
 overhang. There must not be a gap where the two
 ends of the rope meet. Repair or replace if the rope
 is damaged or if there is a gap between the ends.
- 3. Inspect burner swing door insulation for damage and proper type, refer to Figure 2-5.
 - a. By design, cast bars on front section between the combustion chamber and between the left and right side 2nd and 3rd pass flueway should make an impression in door insulation to seal the chambers.
 - b. By design, door insulation on model MPO-IQ231B will have two (2) by-pass pockets cast into the insulation centered on the bar between the combustion chamber and 3rd pass flueways. On models MPO-IQ84B thru MPO-IQ189B these pockets should not be present. If insulation is damaged or not of proper type regarding pockets, it must be replaced.
- 4. Do not close and secure door at this time, proceed to Field Assembly Details, Paragraph F.

F. FIELD ASSEMBLY OF BOILER

Open miscellaneous parts carton and remove contents. Identify the components using the illustrations (Figures 2-6 thru 2-11) throughout the assembly sequence outlined below as it applies to your installation.

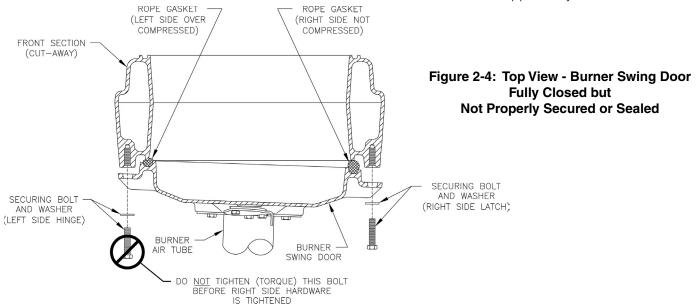

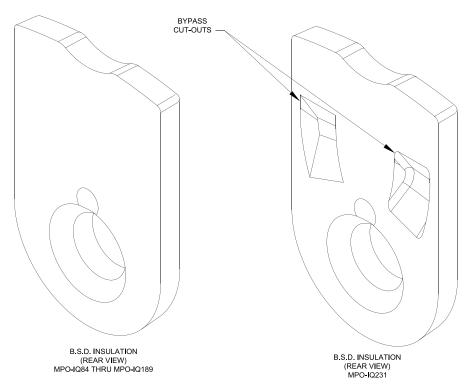


Figure 2-5: Burner Swing Door Insulation

1. Install return injector piping and pressure relief valve, refer to Figure 2-6.

Step a. Locate the return pipe fittings and injector. Apply sealant to the 2 in. NPT injector threads. Insert injector into 2 in. NPT upper rear tapping on rear section. Thread 2 in. NPT x 1-1/2 in. Reducing Elbow onto 2 in. NPT injector. Apply thread sealant to the 1-1/2 in. NPT nipple. Thread 1-1/2 in. NPT nipple into 1-1/2 in. NPT end of reducing elbow. Thread 1-1/2 in. NPT x 1-1/2 in. NPT x 3/4 in. NPT Tee onto 1-1/2 in. NPT nipple. Tighten pipe fittings until pressure relief valve orientation is correct for your installation and joints are watertight.

Note: Based on system return piping and access to service boiler, see Figures 1-1, 3-2 and 3-3, predetermine if injector piping orientation is to be positioned for vertical, horizontal left or horizontal right side return piping as shown in Figure 2-6.

Step b. Install pressure relief valve using 3/4 in. NPT tapping on tee. Pressure relief valve must be installed in vertical position. If orientation of return injector piping is for:

 1-1/2 in. NPT vertical return piping - Install 3/4 in. NPT x 90° street ell (not furnished) into 3/4 in. NPT tapping on tee. Install pressure relief valve vertically into street ell. See Figure 2-6.

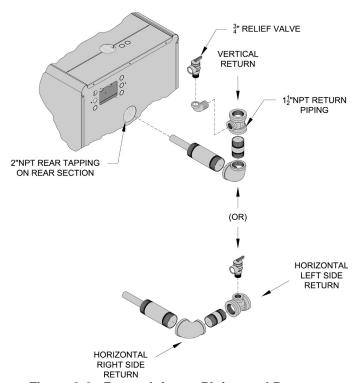


Figure 2-6: Return Injector Piping and Pressure Relief Valve Assembly Details

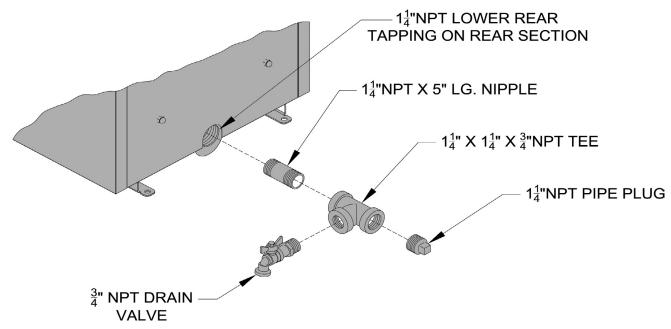


Figure 2-7: Piping Arrangement for Drain Valve and Indirect Water Heating Return

- 1-1/2 in. NPT horizontal left or right side return piping - Install pressure relief valve vertically in 3/4 in. NPT tapping on tee. See Figure 2-6.
- **Step c.** Pipe discharge of pressure relief valve as shown in Figures 3-2 and 3-3. Installation of the pressure relief valve must be consistent with ANSI/ASME Boiler and Pressure Vessel Code, Section IV.

WARNING

Pressure relief valve discharge piping must be piped near floor to eliminate potential of severe burns. Do not pipe in any area where freezing could occur. Do not install any shut-off valves, plugs or caps.

- 2. Install drain valve, see Figure 2-7.
 - **Step a.** Apply pipe sealant to both ends of 1-1/4 in. NPT x 5 in. lg. nipple. Thread nipple into 1-1/4 in. NPT lower rear tapping on rear section.
 - **Step b.** Thread 1-1/4 in. x 1-1/4 in. x 3/4 in. NPT tee on opposite end of 5" lg. nipple installed in Step a.

Note: Based on access for servicing and location of sewer or floor drain, when tightening these fittings, determine if drain valve is to be located on the left or right side.

Tighten nipple and tee into 1-1/4 in. NPT lower rear tapping on rear section until joints are water tight for desired position.

- **Step c.** Apply sealant to 3/4 in. NPT thread on drain valve. Thread into 3/4 in. NPT tapping on side outlet of tee. Use hex nut portion to tighten valve until water tight.
- 3. Connecting field wiring, refer to Figure 2-9 and 6-1.
 - **Step a.** Locate the black, white and green harness wires labeled "120V Power Supply" inside internal junction box, see Figure 2-9. Using wire nuts, connect the 120 volt power supply field wires to the harness wires.
 - **Step b.** Locate the yellow and white wires labeled "System Circulator" inside internal junction box, see Figure 2-9. Using wire nuts, connect the 120 volt field wires to the harness wires.
 - **Step c.** If applicable, locate the violet and white wires labeled "DHW Circulator" inside internal junction box, see Figure 2-9. Using wire nuts, connect the 120 volt field wires to the harness wires.
 - **Step d.** If applicable, locate the brown wire labeled "DHW Demand" inside internal junction box, see Figure 2-9. Using wire nut, connect the 120 volt field wire to the harness wire.
 - **Step e.** 24V thermostat field wiring will enter through 5/16 in. snap bushing located on either the right side or left side jacket panel. Connect the 24V wiring from the thermostat to the "T-T" terminals on the Option Control Panel.

WARNING

Wire an additional safety limit such as a low water cut-off or temperature limit device, other than an IQ Control device, in series with the 120V circuit used to power the boiler. Do Not alter the boiler's factory wiring when adding additional limit.

Step f. To connect other external devices, refer to the instructions included with these devices.

4. Installing stainless steel flueway baffles. Baffle requirements differ from model to model, see Table 2-8.

Note: Read caution statement before proceeding.

Table 2-8: Baffle Usage

Boiler Model	Boiler Usage					
No.	2nd Pass	3rd Pass	Combustion Chamber			
MPO-IQ84B	[2] P/N 102066-01	None	None			
MPO-IQ115B	[2] P/N 109902-01	[2] 100081-01	[2] 111752-01			
MPO-IQ147B						
MP0-IQ189B	[2] P/N 100042-01	None	None			
MPO-IQ231B						

A CAUTION

These baffles will generate higher efficiencies and lower stack temperatures. Under certain conditions, a lower gross stack temperature entering the chimney has the potential to be cooled below the dew point and create condensate on interior surfaces. Flue gas condensate is corrosive, which requires special consideration and must be addressed immediately.

<u>DO NOT</u> install baffles until you have read Section 4, "Venting" completely.


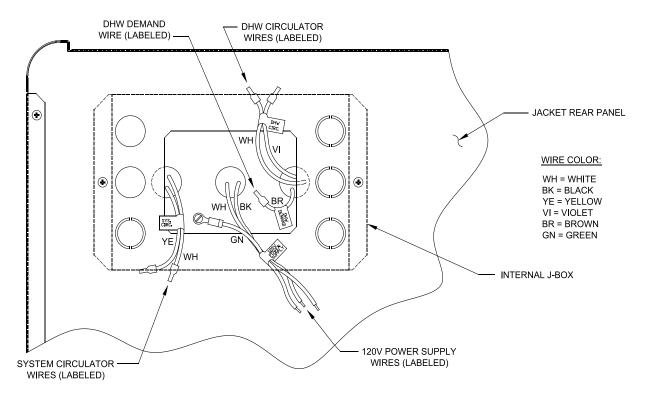


Figure 2-9: Internal Junction Box and Wiring Harness Details

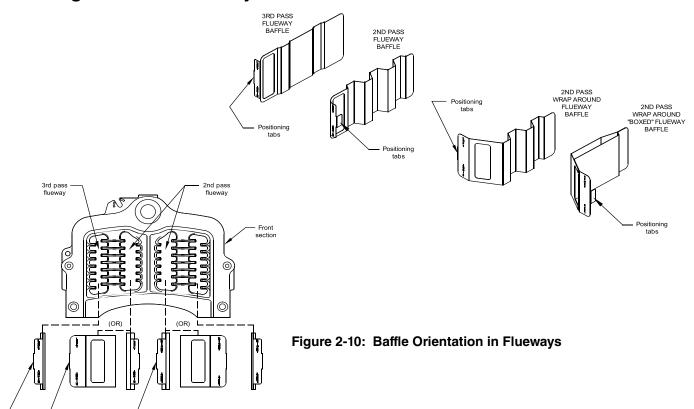

Step a. Install stainless steel baffles provided in miscellaneous parts carton as follows, refer to Table 2-8 and Figure 2-10:

- Model MPO-IQ84B To install flueway baffle in 2nd pass on left side of boiler, hold baffle with word "Left" readable at the top. Slide baffle in flueway until position tab touches fins on left side of 2nd pass flueway. To install flueway baffle in 2nd pass flueway on right side of boiler, hold baffle with word "Right" readable at the top. Slide baffle in flueway until position tab touches fins on right side of 2nd pass flueway.
- Model MPO-IQ115B-To install flueway baffle in 3rd pass on left side of boiler, hold baffle with word "Left" readable at the top. Slide baffle in flueway until position tab touches fins on left side of 3rd pass flueway. To install flueway baffle in 3rd pass flueway on right side of boiler, hold baffle with word "Right" readable at the top. Slide baffle in flueway until position tab touches fins on right side of 3rd pass flueway. To install flueway baffle in 2nd pass on left side of boiler, hold baffle with word "Left" readable at the top. Slide baffle in flueway until position tab touches fins on left side of 3rd pass flueway. To install flueway baffle in 2nd pass flueway on right

- side of boiler, hold baffle with word "Right" readable at the top. Slide baffle in flueway until position tab touches fins on right side of 3rd pass flueway.
- To install the combustion chamber ring, place in the center of the combustion chamber. The positive stop will meet the front of the front section, positioning the Combustion Chamber Ring towards the front. See Figure 2-11.
- Models MPO-IQ147B thru MPO-IQ231B-To install flueway baffle in 2nd pass flueway on left side of boiler, hold baffle with word "Left" readable at the top. Slide baffle in flueway until position tab touches fins on right side of 2nd pass flueway. To install flueway baffle in 2nd pass flueway on right side of boiler, hold baffle with word "Right" readable at the top. Slide baffle in flueway until position tab touches fins on left side of 2nd pass flueway.

Note: 2nd and 3rd pass flueway baffle are not interchangeable.


NOTICE: When securing burner swing door make sure door is drawn-in equally on both sides.

5. Close the burner swing door and securely seal the door to the boiler front section by reinstalling the hardware and securing the door using procedure previously outlined in Paragraph D of this section.

6. Install oil burner. (See Figure 2-12)

Step a. Open burner carton and remove contents.

Step b. Place oil burner gasket on burner and align holes.

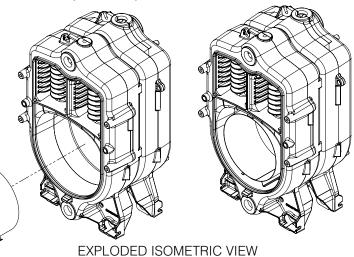

1. Jacket and Burner Swing Door have been removed for clarity.

Figure 2-11: Combustion Chamber Ring Installation

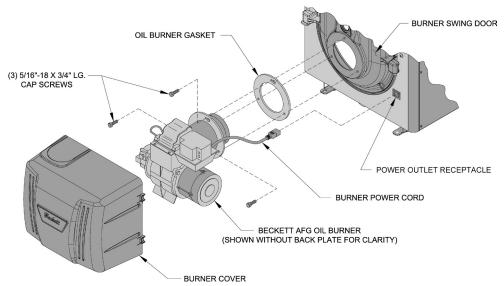


Figure 2-12: Oil Burner Installation (Beckett shown)

A CAUTION

Do not install burner without gasket.

- **Step c.** Remove three (3) 5/16-18 x 3/4 lg. cap screw from burner swing door used for mounting burner.
- **Step d.** Thread (1) 5/16-18 x 3/4 lg. cap screw, approximately three (3) full turns, into tapping located at 12:00 o'clock on burner swing door.
- **Step e.** Insert oil burner into the opening of burner swing door. Align and engage keyhole slot in burner flange over head of protruding cap screw installed in previous Step. Rotate burner to the right to lock flange behind head of cap screw.

- **Step f.** Align holes and install two (2) remaining cap screws. Level burner and fully tighten all three (3) screws.
- **Step g.** Plug burner power cord into power outlet receptacle located in lower right corner of front panel.
- **Step h.** Check oil nozzle in burner for size, angle and spray type; inspect electrode settings and head/air plate setting. Refer to Tables 14-1 thru 14-3 and 14-4 and Section 8. Refer to Burner Manufacturer's Manual for detail instructions.

3 Water Boiler Piping

NOTICE: Failure to pipe boiler as specified in this manual may result in excessive system noise.

A. EVALUATE THE EXISTING WATER SYSTEM.

Design a piping system and install boiler which will prevent oxygen contamination of boiler water and frequent water additions.

- 1. There are many possible causes of oxygen contamination such as:
 - Addition of excessive make-up water as a result of system leaks.
 - b. Absorption through open tanks and fittings.
 - Oxygen permeable materials in the distribution system.
- 2. In order to insure long product life, oxygen sources must be eliminated. This can be accomplished by taking the following measures:
 - Repairing system leaks to eliminate the need for addition of make-up water.
 - b. Eliminating open tanks from the system.
 - c. Eliminating and/or repairing fittings which allow oxygen absorption.
 - d. Use of non-permeable materials in the distribution system.
 - e. Isolating the boiler from the system water by installing a heat exchanger.

WARNING

System supply and return piping must be connected to correct boiler piping.

U.S. Boiler Company recommends sizing the system circulator to supply sufficient flow (GPM) to allow a 20°F temperature differential in the system. When sizing the system circulator, the most restrictive single zone should be used to determine maximum pressure drop.

CAUTION

Maintain minimum ½ inch clearance from hot water piping to combustible materials.

WARNING

Do not operate boiler below minimum volumetric flow rates.

- In order to insure long product life, operate boiler at appropriate flow rate to minimize areas of overheating.
 - a. Design system to ensure that the flow is above the limit called for in Table 3-1.
 - b. Maintain a constant boiler pressure of 12 PSI.

Table 3-1: Minimum Flow Rate

Boiler Model No.	Flow Rate (Gal / Min)
MPO-IQ84B	4.5
MPO-IQ115B	6.0
MPO-IQ147B	8.0
MPO-IQ189B	10.0
MPO-IQ231B	12.0

- B. CONNECT SYSTEM SUPPLY AND RETURN PIPING
 TO BOILER. See Figures 3-2 and 3-3. Also, consult
 Residential Hydronic Heating Installation and Design
 I=B=R Guide.
 - If this boiler is used in connection with refrigeration systems, the boiler must be installed so that the chilled medium is piped in parallel with the heating boiler using appropriate valves to prevent the chilled medium from entering the boiler. Also, consult Residential Hydronic Heating Installation and Design I=B=R Guide.
 - If this boiler is connected to heating coils located in air handling units where they may be exposed to refrigerated air, the boiler piping must be equipped with flow control valves to prevent gravity circulation of boiler water during the operation of the cooling system.
 - If an indirect water heater is used, priority zoning can be used. Do not use priority zoning for Hydro-Air Systems. Refer to the Indirect Water Heater Installation, Operating, and Service Instructions for additional information.
 - 4. The MPO-IQ is designed to withstand thermal shock from return water temperatures as low as 100°F, but prolonged return temperatures of below 135°F can cause excessive flue gas condensation and damage the boiler and/or venting system.

Use a boiler bypass if the boiler is to be operated in a system which has a large volume or excessive radiation where low boiler water temperatures may be encountered (i.e. converted gravity circulation system, etc.) The bypass should be the same size as the supply and return lines with valves located in the bypass and return line as illustrated in Figures 3-2 and 3-3 in order to regulate water flow for maintenance of higher boiler water temperature.

3 Water Boiler Piping (continued)

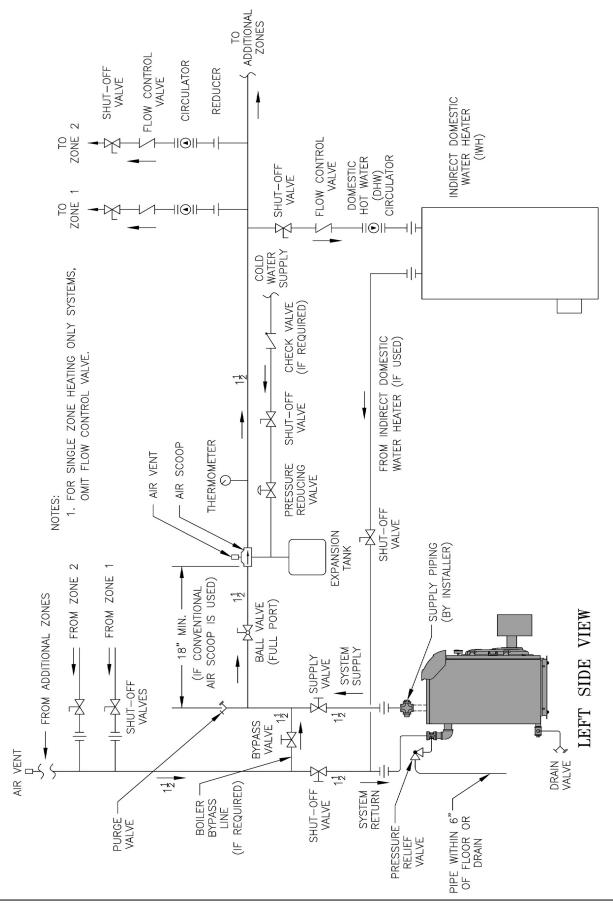


Figure 3-2: Recommended Water Piping for Circulator Zoned Heating Systems

3 Water Boiler Piping (continued)

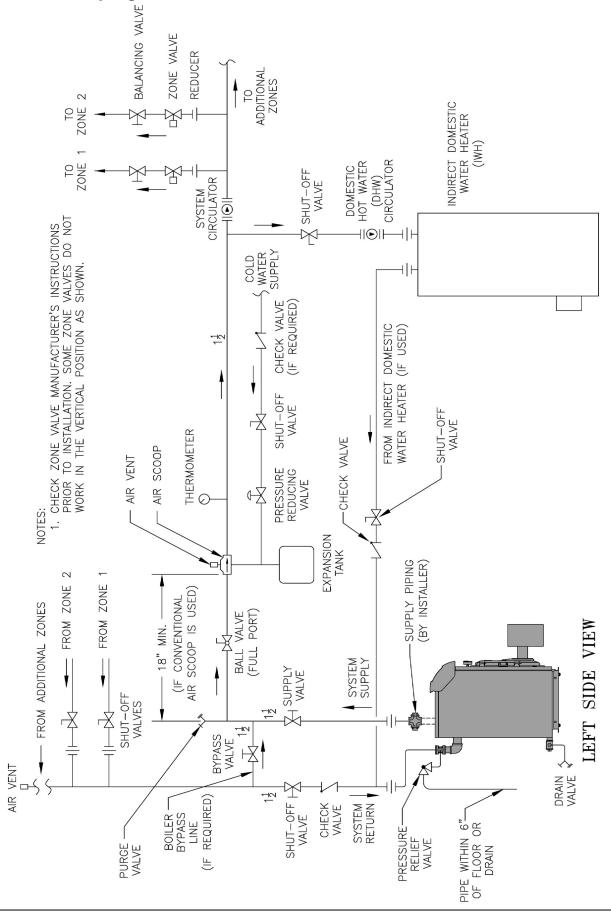


Figure 3-3: Recommended Water Piping for Zone Valve Zoned Heating Systems

3 Water Boiler Piping (continued)

5. See Figure 3-4 for suggested near boiler piping of Option Card Controls.

⚠ WARNING

The use of a low water cut-off device, while not required unless radiation level is below the boiler, is highly recommended.

If a low water cut-off is required, it must be mounted in the supply piping above the boiler (see Figure 3-4). The minimum safe water level of a hot water boiler is just above the highest water containing cavity of the boiler; that is, a hot water boiler must be full of water to operate safely.

It is recommended that the LWCO control is installed above the boiler to provide the highest level of protection. However, where the LWCO control is approved by the LWCO control manufacturer for installation in a high boiler tapping of a water boiler, the use of the listed LWCO control is permitted when it is installed according to the LWCO manufacturer's instructions.

6. If it is required to perform a long term pressure test of the hydronic system, the boiler should first be isolated to avoid a pressure loss due to the escape of trapped air.

To perform a long term pressure test including the boiler, ALL trapped air must first be removed from the boiler.

A loss of pressure during such a test, with no visible water leakage, is an indication that the boiler contained trapped air.

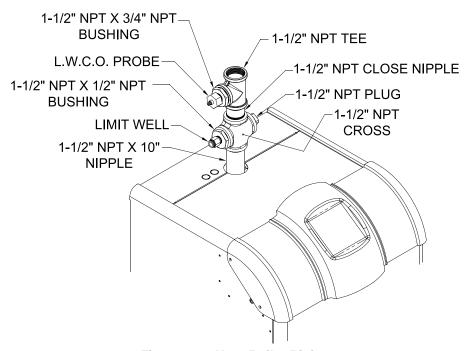


Figure 3-4: Near Boiler Piping

4 Natural Draft Venting (All Boiler Models)

WARNING

- Vent this boiler according to these supplemental instructions. Failure to do so may cause products of combustion to enter the home resulting in severe property damage, personal injury or death.
- Insufficient Combustion Air Supply may result in the production and release of deadly carbon monoxide (CO) into the home which can cause severe personal injury or death.
 Improper venting may result in property damage and the release of flue gases which contain deadly carbon monoxide (CO) into the home, which can cause severe personal injury, death, or substantial property damage.
- Inspect existing chimney and vent connector for obstructions and deterioration before installing boiler. Failure
 to clean or replace perforated pipe or chimney liner will cause severe injury or death.
 Do not de-rate the appliance. Failure to fire the boiler at it's designed input may cause excessive condensation
 upon the interior walls of the chimney. In addition, the lower input may not create enough draft to adequately
 evacuate the by-products of combustion.

A. CHIMNEY VENTING

- Chimney venting is an important part of a safe and efficient oil fired appliance system. Contact your local fire and building officials on specific requirements for restrictions and the installation of fuel oil burning equipment. In addition, consult with a professional knowledgeable on the requirements of NFPA 31 Standard for the Installation of Oil-Burning Equipment and NFPA 211 Standard for Chimneys, Fireplaces, Vents, and Solid Fuel-Burning Appliances for installations in the United States. Installations in Canada must be reviewed with a professional knowledgeable on the requirements of CSA B139 Installation Code for Oil-burning Equipment.
- 2. The safe venting of oil fired boilers is dependant on many factors. Some of these factors include:
 - a. sufficient draft during the entire heating season to allow for the safe discharge of combustion by-products and;
 - b. suitable corrosion protection in the event of condensing flue gases. Only a trained and qualified contractor may install this product.
- 3. The MPO-IQ shall be vented into any of the following:
 - a. Masonry or metal chimney. Build and install in accordance with local buildings codes; or local authority having jurisdiction; or Standards for Chimney, Fireplace, Vents, and Solid Fuel Burning Appliances, ANSI/NFPA 211 and/or National Building Code of Canada. Masonry chimney must be lined with listed chimney system. Listed clay flue lined masonry chimneys meet venting requirements.
 - External chimneys are more susceptible to flue gas condensation due to colder outside air temperatures. To prevent corrosion due to flue gas condensation, use a listed corrosion-resistant metal liner in chimney.

- Oversized chimneys are more susceptible to flue gas condensation. To reduce the likelihood of flue gas condensation and ensure proper draft, use a properly sized listed metal liner in oversized chimney.
- 4. Chimney Inspection Prior to the installation of any new or replacement fuel burning equipment the chimney shall be inspected by a qualified installer. The chimney shall be inspected for integrity as well as for proper draft and condensate control. Some jurisdictions require the use of a liner when changing fuel types. Some jurisdictions require the use of a liner even when the same fuel is used. At a minimum, the chimney shall be examined by a qualified person in accordance with the requirements of Chapter 11 of NFPA 211, Standard for Chimneys, Fireplaces, Vents, and Solid Fuel-Burning Appliances.
 - a. Loose Mortar Loose mortar could be an indication of a prior history of condensing flue gases upon the inside walls of the chimney. Colder climates are more susceptible to this condition. Under no circumstances shall a chimney of this condition be used until it meets the requirements of NFPA 211 or CSA B139.
 - b. Unlined Chimney Under no circumstances shall a chimney constructed of brick only be used.
 Only approved clay liners or listed chimney lining systems shall be used as specified in NFPA 31 or CSA B139.
 - c. Abandoned Openings Openings through the chimney wall that are no longer used shall be sealed in accordance to NFPA 211. Often abandoned openings are improperly sealed and usually covered by a gypsum wall covering.
 - d. Clean Chimney Chimney shall be free of all loose debris.
- 5. Draft Regulator the draft regulator supplied with the boiler (or equivalent) must be used with this appliance. Refer to Figures 4-1 and 4-2.

4 Natural Draft Venting (continued)

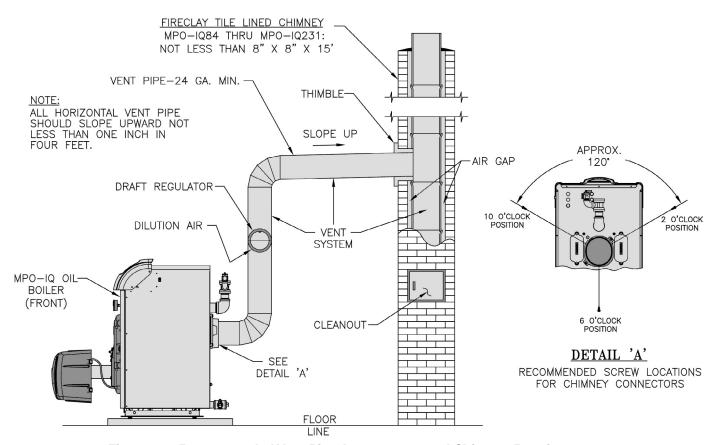


Figure 4-1: Recommended Vent Pipe Arrangement and Chimney Requirements

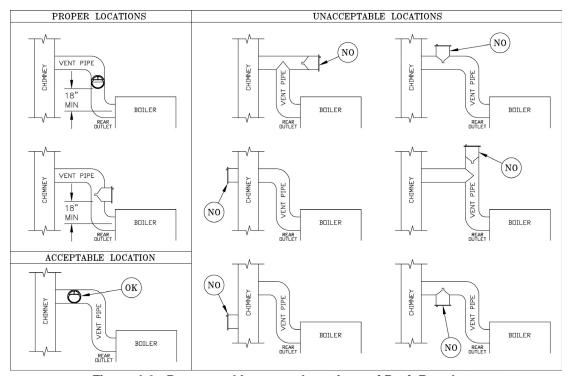


Figure 4-2: Proper and Improper Locations of Draft Regulator

4 Natural Draft Venting (continued)

B. CHIMNEY CONNECTOR

 A chimney connector (vent pipe) is used to connect the boiler to the base of the chimney. The chimney connector should be kept as short as possible. The horizontal length of the chimney connector shall not be greater than 10 feet.

Note: Secure chimney connector to cast iron smokebox collar with three (3) #10 x ½ in. self drilling hex head TEK screws provided in miscellaneous parts carton. Locate screws around perimeter of connector as shown in Figure 4-3 and approximately ½ in. in from edge. Use drill with 5/16 in. hex bit to drive screws through connector and smokebox collar.

A DANGER

The chimney and connector shall be inspected annually for signs of debris and corrosion. Loose mortar at the base of the chimney may be a sign of condensate damage to the chimney. A chimney professional shall be contacted immediately to examine the damage and recommend a solution. Long term operation while in this condition may cause a venting failure and force flue gases into the living space. If the chimney is to be re-lined use the recommendations in NFPA 31, Appendix E or CSA B139.

- 2. Vent Connector shall be any of the following and of the same size as the outlet of boiler.
 - a. Type L or a factory built chimney material that complies with the Type HT requirements of ANSI/UL 103. Install in accordance with listing and manufacturer's instructions.
 - Steel pipe having resistance to corrosion and heat with a minimum wall thickness of 24 Gauge (0.024 in.).

DANGER

Any signs of condensate seepage at the base of the chimney shall be inspected immediately. The discoloration may be a sign of chimney damage and must be remedied immediately.

C. DRAFT

- The natural draft generated through a chimney is dependent on several factors including, chimney height, temperature of flue gases, cross section area of chimney, chimney wall insulation value, dilution air and total volume of flue gases, to name a few. Make sure that the boiler has been running for at least 5 minutes before measuring the draft.
- 2. Minimum Draft at Breech (Canopy) The draft induced by a chimney must create at least a pressure of 0 (zero) inches water column ("w.c.) at the pressure tapping on the canopy mounted on rear of boiler (see Figure 4-3). The pressure at the canopy cannot be positive since this could create a condition that allows flue gas by-products to escape from the draft regulator. A negative pressure reading up to -.03 inches water column is acceptable for proper operation. (See Tables 14-1 thru 14-4) Burner Specifications at the rear of this manual for more details)
- 3. Minimum Overfire Pressure The overfire pressure is another piece of information that is often measured, however this should be done for observation purposes only! The breech pressure must be used to qualify the draft condition. See Tables 14-1 thru 14-4 for more details as a guide. Actual draft and temperature measurements may be different then those values in the table.

D. STACK TEMPERATURE

- 1. The temperature of the flue gases has a significant effect on the amount of draft created in a vertical chimney as well as the propensity to create condensate. The higher the stack temperature, the greater the amount of draft that can be generated. A lower stack temperature not only reduces the amount of draft that can be created but it also increases the possibility that the flue gases could condense in the chimney connector or stack.
- 2. NFPA 31 and CSA B139 have information to help the installer make an appropriate choice of venting materials. In some cases a chimney may have to be lined to create sufficient draft. In other cases, the chimney may have to be lined to prevent the corrosion of a masonry chimney. Consult with a chimney specialist knowledgeable on the requirements for chimney requirements in your area.

4 Natural Draft Venting (continued)

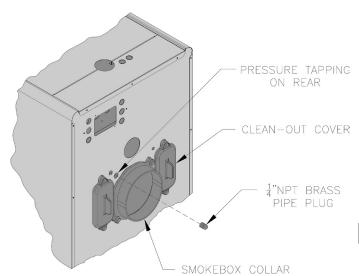


Figure 4-3: Smokebox Pressure Tapping for Checking Draft at Breech

A CAUTION

Any doubt on the condition of a chimney or it's ability to prevent the generation and accumulation of flue gas condensate, must be relined according to NFPA 31 (United States) or CSA B139 (Canada).

CAUTION

Any doubt on the condition of a chimney or it's ability to prevent the generation and accumulation of flue gas condensate, must be relined according to NFPA 31 (United States) or CSA B139 (Canada).

3. Baffles – The efficiency of the boiler is based on the insertion of flue baffles supplied with your product. Under no circumstances are other baffles to be used on this product. Refer to Section 2, Item F, Paragraph 5 for baffle installation. If there is any doubt on the application of this boiler on the intended chimney, consult with your local code officials. At a minimum, remove the baffles to increase the stack temperature. See Tables 14-1 thru 14-4 for temperature differential (ΔT) with baffles IN and OUT. In addition, the lower the CO₂ level the higher the stack temperature.

WARNING

Remove the baffles if there are any signs of condensation in the chimney or chimney connector. Consult with your local chimney professional for recommendations.

E. MINIMUM CLEARANCES

See Figure 1-4 for details regarding clearances to combustibles for the boiler.

F. OPTIONAL AIR INTAKE PIPING INSTALLATION
- All air for combustion can be supplied directly to the burner from outdoors providing that the criteria for chimney, vent connector and minimum stack temperature outlined in this section can be maintained.

(ONLY AVAILABLE WITH BECKETT BURNER). Refer to Section 1, Paragraph C, Steps 5 and 6 for optional air intake piping installation information.

⚠ WARNING

Using outdoor air in the middle of winter may result in lower stack temperatures and chimney degradation. Any signs of condensate seepage or discoloration at the base of chimney must be remedied immediately per the details outlined in this section.

- Do not reduce size of air intake pipe.
- Read, understand and follow combustion air instruction restrictions contained in the Pre-Installation Section of this manual.

103859-16 - 8/24 27

5 Direct Venting / Air Intake Piping (Boiler Models MPO-IQ140E thru 231 ONLY)

A. GENERAL GUIDELINES

- 1. Direct Vent system must be installed in accordance with these instructions and applicable provisions of local building codes. Contact your local fire and building officials on specific requirements for restrictions and the installation of fuel oil burning equipment. In addition, for boiler installation in United States, consult with a professional knowledgeable on requirements of NFPA 31- Standard for the Installation of Oil-Burning Equipment and NFPA211-Standard for Chimney, Fireplaces, Vents and Solid Fuel-Burning Appliances, latest editions. Installations in Canada must be reviewed with a professional knowledgeable on requirements of CSA B139 – Installation Code for Oil-Burning Equipment, latest edition.
- 2. In the Direct Vent configuration, all air for combustion is supplied directly to the burner from outdoors. and, flue gases are vented directly outdoors (thru wall), via Direct Vent System (FDVS), which is a nonpositive pressure vent system termination for oil-fired appliances, that provides an outlet for products of combustion, and, an intake for combustion air in a single concentric terminal.
- 3. Direct Vent Hood Assembly minimum clearance to combustible material is 0 in.
- 4. Maximum wall thickness that FDVS vent termination may be installed through is 12 in.

WARNING

This venting system must be installed by a qualified installer (an individual who has been properly trained) or a licensed installer.

DO NOT locate vent termination where exposed to prevailing wind. Moisture and ice may form on surfaces around vent termination. To prevent deterioration, surface must be in good repair (sealed, painted etc.).

DO NOT locate vent termination where petroleum distillates, CFC's, detergents, volatile vapors or any other chemicals are present. Severe boiler corrosion and failure will result.

DO NOT locate vent termination under a deck.

- 5. Locate the vent terminal so vent pipe is short and direct, and, at the place on exterior wall that complies with the minimum distances as specified in Figure 5-1 and listed as follows. The vent termination must be located (as measured to the bottom of vent terminal):
 - a. Not less than 12 in. above finished grade or expected snow accumulation line whichever is
 - b. Not less than 3 ft. above any forced air inlet located within 10 ft.
 - c. Not less than 1 ft. from any door, window or gravity air inlet.
 - d. Not less than 7 ft. above grade when located
 - e. Not less than 3 ft. (as measured to side of vent termination) from an inside corner of an L-shaped

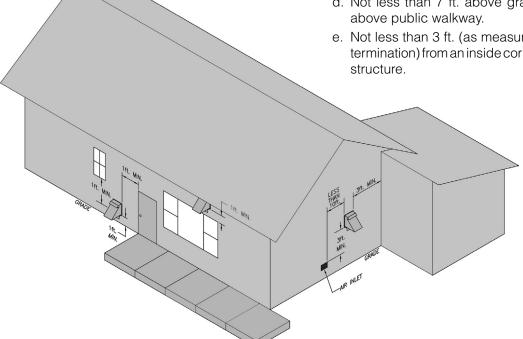


Figure 5-1: Vent Terminal Location

- f. Not less than 1 ft. from the nearest surface of the terminal to a roof soffit.
- g. Not directly above, or, not less than 5 ft. horizontally from an oil tank vent.
- h. Not less than 2 ft. from nearest surface of terminal to an adjacent building.

B. INSTALLATION OF THE VENT HOOD TERMINAL

- 1. Inspect Direct Vent Conversion Kit Carton for damage. DO NOT install if any damage is evident.
- 2. Direct Vent Conversion Kit Carton includes (see Figures 5-4, 5-5 and 5-6):
 - Direct Vent Hood Assembly (consists of Vent Hood Body and Vent Hood Tee) – 1 pc
 - Backing Plate 1 pc
 - Vacuum Relief Valve VRV-4 1 pc
 - Hardware Bag (includes high temperature sealant, fasteners and inner pipe clamps) – 1 pc
 - Appliance (Boiler Flue Outlet) Adapter 1 pc
 - Appliance Clamp Halves 2 pcs
 - Cover Sleeve Assemblies 2 pcs
 - Cover Ring Assemblies 2 pcs
- 3. Remove vent system components from carton and set aside.
- 4. Separate the vent hood tee from the vent hood body and set aside for later use.
- 5. After determining the location of the venting system termination, cut the square hole in the wall sized according to "L" dimension in Table 5-2, see Figure 5-3.
- 6. Wood or vinyl siding should be cut, so that vent hood base plate mounts directly on the wallboard to provide stable support. If siding thickness exceeds ½ in., use a spacer bar or board behind the vent hood mounting (base) plate. See Figure 5-4.
 - a. Seal the backside of the vent hood base plate around the outer pipe of the vent hood with a bead of high-temperature silicone sealant (provided in Bagged Hardware).
 - b. Mount the vent hood body from outside, through the wall, keeping the outer pipe centered in the hole.
 - c. Fasten the vent hood body to the outside wall with appropriate fasteners (installer provided).
 - d. Seal the edges of the vent hood base plate to the wall with a high-temperature silicone sealant (provided in Bagged Hardware).
 - e. While inside, position the backing plate over the outer pipe and fasten to inside wall with appropriate fasteners (installer provided).

Table 5-2: Wall Cutout Dimensions

Boiler Model No.	Direct Vent Conversion Kit Part No.	"L" Dimension (Inch)
MPO-IQ147B MPO-IQ189B	102130-02	81/4
MPO-IQ231B	102130-03	91/4

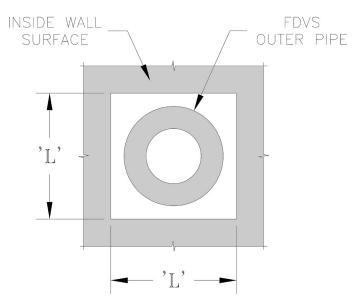


Figure 5-3: Wall Cutout Dimensions

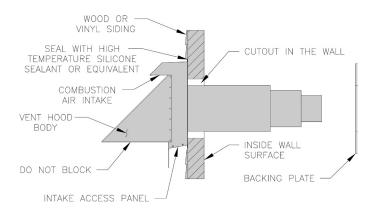


Figure 5-4: Vent Hood Body Installation

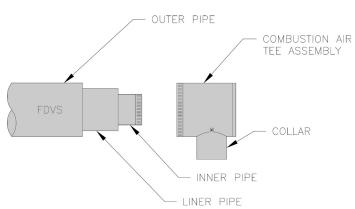


Figure 5-5: Combustion Air Tee Assembly Installation

C. INSTALLATION OF VENT HOOD TEE

- 1. Assemble the vent hood tee body to the vent hood outer pipe, and, rotate the tee, so air intake inlet collar is in the desired position. See Figure 5-5.
- 2. Attach the vent hood tee body to the vent hood outer pipe with at least three sheet metal screws (installer provided).

Note: The tee may be rotated into any position so that the collar is in a convenient orientation.

3. After completing assembly of the flexible double wall insulated vent pipe to the vent termination inner pipe (see Figure 5-6 and the following Steps), apply the supplied high temperature sealant to seal around the inner pipe protrusion thru the vent tee cover pan, around the joint between the vent tee collar and the vent tee body, and, seal or tape the joint between the vent termination outer pipe and the vent tee body.

D. <u>INSTALLING THE FLEX OIL VENT PIPE FROM THE</u> VENT TERMINATION TO THE BOILER FLUE OUTLET

- The venting system (vent pipe and all connectors) shall be installed in accordance with the applicable provisions of any local codes, and, in United States, requirements of NFPA 31- Standard for the Installation of Oil-Burning Equipment and NFPA211-Standard for Chimney, Fireplaces, Vents and Solid Fuel-Burning Appliances, latest editions. For installations in Canada, follow requirements of CSA B139-Installation Code for Oil-Burning Equipment, latest edition.
- Avent pipe connector, designed for positive pressure venting, shall be supported for the design and weight of material employed, to maintain clearances, prevent physical damage and separation of joints. All joints MUST BE sealed, for positive vent pressure, to prevent flue gas leakage into the structure.
- 3. Support the vent pipe at intervals no greater than three (3) feet apart using perforated metal strap or other non-combustible supports.
- Allow sealant to cure at least one hour before firing boiler.
- 5. Route the vent pipe from the vent termination to the boiler using the minimum number of bends possible. The last horizontal section of the vent pipe should have a slight downward slope from the boiler to the vent termination. For clearances to combustible materials refer to Figure 1-5.
- 6. Maximum length of flexible oil vent pipe is 20 ft. The vent pipe is also in 10 ft. length.
- Verify that flex vent pipe diameter and vent termination inner pipe diameter correspond to a particular direct vent configuration MPO-IQ boiler model (see Table 5-7).

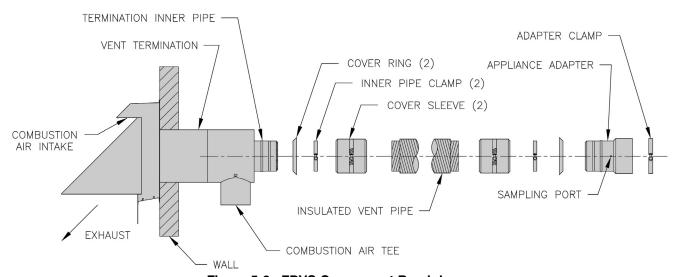


Figure 5-6: FDVS Component Breakdown

Table 5-7: Flex Vent / Vent Termination Pipe Diameters

Boiler Model No.	Boiler Flue Outlet Collar OD (Inch)	Vent Hood Inner Pipe Diameter (Inch)	Flex Oil Vent Pipe Inner Pipe Diameter (Inch)	* Flue Outlet Collar to Vent Pipe Adapter (Inch)	
MPO-IQ147B	6	5 6		6 to 5	
MPO-IQ189B	0			0 10 5	
MPO-IQ231B	7			7 to 6	

Note: * The model specific Direct Vent (FDVS) Kit Cartons contain adapters (reducers) (see Table 5-7) to connect boiler flue outlet collar to vent pipe.

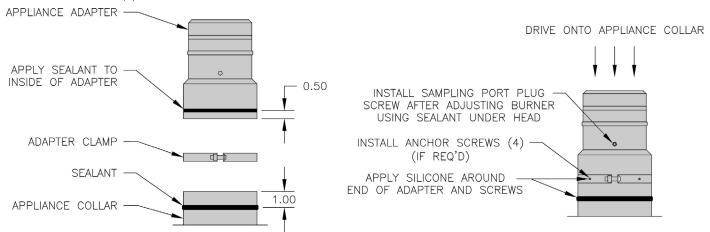


Figure 5-8: Appliance Adapter Installation

E. CONNECTING APPLIANCE ADAPTER TO BOILER FLUE OUTLET COLLAR (See Figure 5-8)

- 1. Apply a bead of supplied high temperature sealant to boiler flue outlet collar approximately 1 in. from collar end.
- Remove any oil and grease from inside of supplied Appliance (Boiler Flue Outlet) Adapter, and, apply a bead of high temperature sealant to inside of the adapter, ½ in. from end.
- 3. With twisting motion, assemble the appliance adapter onto boiler flue outlet collar.
- 4. Using a mallet and a block of wood, carefully tap the adapter onto the outlet collar. Insure no damage is done to the adapter and the flue outlet collar.
- Assemble supplied adapter clamp halves with 5/16-18 bolts and square nuts; install the adapter clamp onto the appliance adapter and tighten securely.
- 6. If required, install anchoring screws (installer provided) thru four holes in the clamp into the flue outlet collar.

- 7. Apply sealant around the adapter end mated to the flue outlet collar.
- 8. Install supplied 3/8 in. sampling port plug screw hand tight into the adapter sampling port.
- After initial boiler start-up and burner testing/ adjustment are completed, apply high temperature sealant under the head of sampling port plug screw, and, install the screw in the sampling port tightening securely.

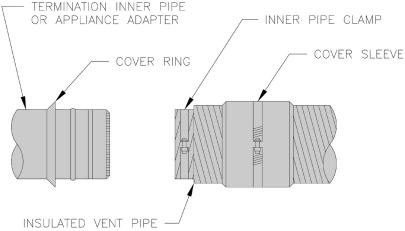


Figure 5-9: Vent Pipe Assembly to Vent Termination Inner Pipe and Appliance Adapter

103859-16 - 8/24 31

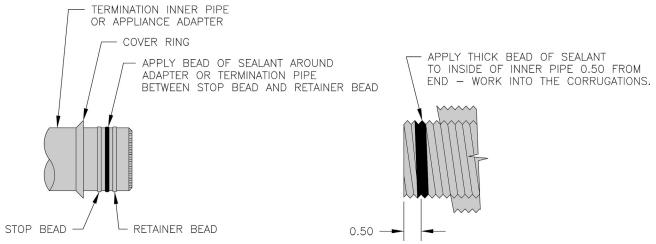


Figure 5-10: Vent Pipe Ends, Vent Termination and Appliance Adapter Sealing

- F. CONNECTING FLEX OIL VENT PIPE TO APPLIANCE ADAPTER AND DIRECT VENT TERMINATION
 - Flexible double wall oil vent pipe is available precut from 10 ft. and 20 ft. long. If necessary, the vent pipe may be cut to required length with a hacksaw or cutoff saw.

A CAUTION

Use safety glasses and other appropriated safety gear when cutting the vent pipe.


2. The double wall flexible vent pipe consists of the smaller inner corrugated stainless steel pipe and larger corrugated aluminum pipe, separated by fiberglass insulation layer.

A CAUTION

The inner and outer pipe ends may have sharp burrs. Use gloves, while handling, compressing or expanding the vent pipe.

- Pull outer vent pipe back 1 in. to 2 in. from end of inner vent pipe and remove insulation; firstly, at vent pipe side to be connected to the vent termination; secondly, at vent pipe side to be connected to the appliance adapter. See Figure 5-9.
- 4. Install supplied Cover Sleeve Assembly onto each end of outer vent pipe, and, move the assembly a few inches back from the end; firstly, at vent pipe side to be connected to the vent termination; secondly, at vent pipe side to be connected to the appliance (boiler outlet collar) adapter. See Figure 5-9.
- 5. Slide supplied Cover Rings; firstly, over stop bead on vent termination inner pipe; secondly, over stop bead on appliance adapter. See Figure 5-9.
- Remove any oil and grease from the end of vent termination inner pipe, and, from the end of the appliance adapter.

- Apply sealant; firstly, between the stop bead and retainer bead at the end of the vent termination inner pipe; secondly, between the stop bead and retainer bead at the end of the appliance adapter. See Figure 5-10.
- Assemble supplied inner pipe clamp halves with 1/4-20 bolts and square nuts; position the inner pipe clamps ¼ in. from the end of inner vent pipe, on vent pipe opposite ends.
- 9. Remove any oil and grease from inside of each end of the inner vent pipe.
- 10. Apply a thick bead of sealant to inside of each end of the inner vent pipe, ½ in. from pipe end, working the sealant into the inner vent pipe corrugations. See Figure 5-10.
- 11. Firstly, push one end of the inner vent pipe onto the vent termination inner pipe, all the way up to the stop bead. Secondly, push the opposite end of the inner vent pipe onto the appliance adapter, all the way up to the stop bead.
- 12. Tighten the inner pipe clamp bolts at both vent pipe ends, until clamp halves are within 1/8 in. apart. See Figure 5-11.
- 13. Starting with vent termination end, slide the cover sleeve assembly and the cover ring together to engage the ring in the groove of the sleeve, then, tighten the built-in cover sleeve clamp. Repeat above steps at the boiler end. See Figure 5-11.
- If the appliance collar is within less than 18 in. of combustible material, wrap minimum 1-1/2 in. thick fiberglass insulation (installer provided).
- 15. To maintain vent pipe 1 in. clearance to combustible material, wrap minimum 1-1/2 in. thick fiberglass insulation (installer provided) around the exposed portion of the vent termination inner pipe and secure with adhesive-backed aluminum foil tape (installer provided).

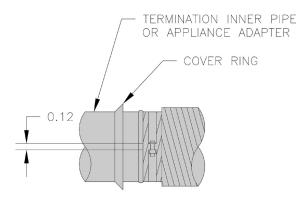

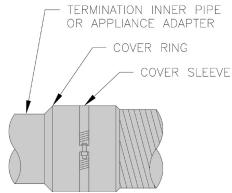


Figure 5-11: Vent Pipe Assembly to Vent Termination **Inner Pipe & Appliance Adapter**

- G. INSTALLING THE AIR INTAKE PIPING FROM DIRECT VENT TERMINATION TO BURNER OUTSIDE AIR **ADAPTER**
 - 1. Use 4 in. diameter galvanized single wall vent pipe and fittings, available at most heating distributors, to connect burner outside air adapter to Direct Vent Termination air intake collar.

feet.

WARNING

DO NOT reduce size of air intake pipe.

- 3. Start at burner and work towards Direct Vent termination air intake.
- 4. Remove burner cover. Loosen two screws securing outside air duct bracket to burner cover mounting plate. See Figure 5-12.
- 5. Procure a 2-ft. section of 4 in. diameter galvanized single wall vent pipe, cut off the crimped pipe end below stop bead.
- 6. Insert one end of the vent pipe thru the outside air duct bracket opening and firmly push onto the outside air adapter collar.
- 7. Secure the pipe to collar with at least (3) sheet metal screws (installer provided) evenly spaced around the collar.

NOTICE: It is essential to ensure reliable operation that combustion air joints are air tight and that VRV is located as close to the burner as possible.

- 8. Re-tighten the screws securing outside air duct bracket to burner cover mounting plate.
- 9. Install supplied vacuum relief valve tee assembly, crimped end down, into the opposite end of vent pipe.
- 10. Secure the tee to the pipe with at least (3) sheet metal screws (installer provided) evenly spaced.
- 11. Remove the vacuum relief valve gate assembly from the tee.
- 12. Assemble the vacuum relief valve balance weight onto the gate. Refer to the vacuum relief valve manufacturer's instructions for details.

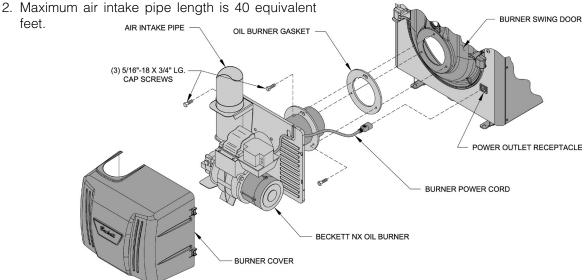


Figure 5-12: Oil Burner Installation (Beckett shown)

- 13. Mount the assembled vacuum relief valve gate with balance weight into the tee and fasten with a screw and nut in collar tabs. To insure proper operation, the gate must be level across the pivot point and plumb. Refer to the vacuum relief valve manufacturer's instructions for details.
- 14. Install remainder of air intake piping to Direct Vent Termination air intake collar, securing each joint with at least (3) sheet metal screws (installer provided) evenly spaced.
- 15. Maintain ¼ in. per foot slope in horizontal run to air intake of Direct Vent Termination.
- 16. Support the air intake piping, as required, using perforated metal strap or other supports.
- 17. Refer to Burner Manufacturer's Manual for addition information.

6 Electrical

A DANGER

Positively assure all electrical connections are unpowered before attempting installation or service of electrical components or connections of the boiler or building. Lock out all electrical boxes with padlock once power is turned off.

A WARNING

Failure to properly wire electrical connections to the boiler may result in serious physical harm.

- Electrical power may be from more than one source. Make sure all power is off before attempting any electrical work.
- Each boiler must be protected with a properly sized fused disconnect.
- Never jump out or make inoperative any safety or operating controls.

A. GENERAL

- Install wiring and electrically ground boiler in accordance with requirements of the authority having jurisdiction, or in absence of such requirements the National Electrical Code, ANSI/ NFPA 70, and/or the CSA C22.1 Electric Code.
- 2. Refer to National Electric Code or Local Electric Codes for proper size and type of wire required. Follow Code.
- A separate electrical circuit must be run from the main electrical service with an over-current device/disconnect in the circuit. A 15 amp circuit breaker is recommended. A service switch is recommended and may be required by some local jurisdictions.
- 4. Use anti-short bushings on all wiring passing through boiler jacket, junction boxes and/or control boxes.
- 5. Use armored cable (BX) over all exposed line voltage wiring.
- 6. Wiring should conform to Figures 6-1 and 6-2.

B. <u>INSTALL A ROOM THERMOSTAT</u> on an inside wall about four feet above floor. Never install thermostat on an outside wall or where it will be influenced by drafts, hot or cold water pipes, lighting fixtures, television, rays of the sun or near a fireplace. Keep large furniture away from thermostat so there will be free movement of room air around this control.

Heat Anticipator in Thermostat should be set to .1 amps.

If system tends to overheat above the thermostat's temperature setting, reduce heat anticipator setting by .1 or .2 amps. If system tends to short cycle without reaching desired room temperature, increase heat anticipator setting by .1 or .2 amps.

WARNING

The maximum allowable current for each circulator is 5 amps at 120 VAC. For circulators with higher amp ratings, you must install a circulator relay or starter coil to provide line voltage to the circulator and connect only the relay or starter coil to boiler terminals. The combined boiler and circulator amperage must not exceed 15 amps.

Install over-current protection in accordance with authority having jurisdiction or, in the absence of such requirements, follow the National Electric Code, NFPA 70, and/or CSA C22.1 Electrical Code. Do not provide over-current protection greater than 15 amperes.

103859-16 - 8/24 35

6 Electrical (continued)

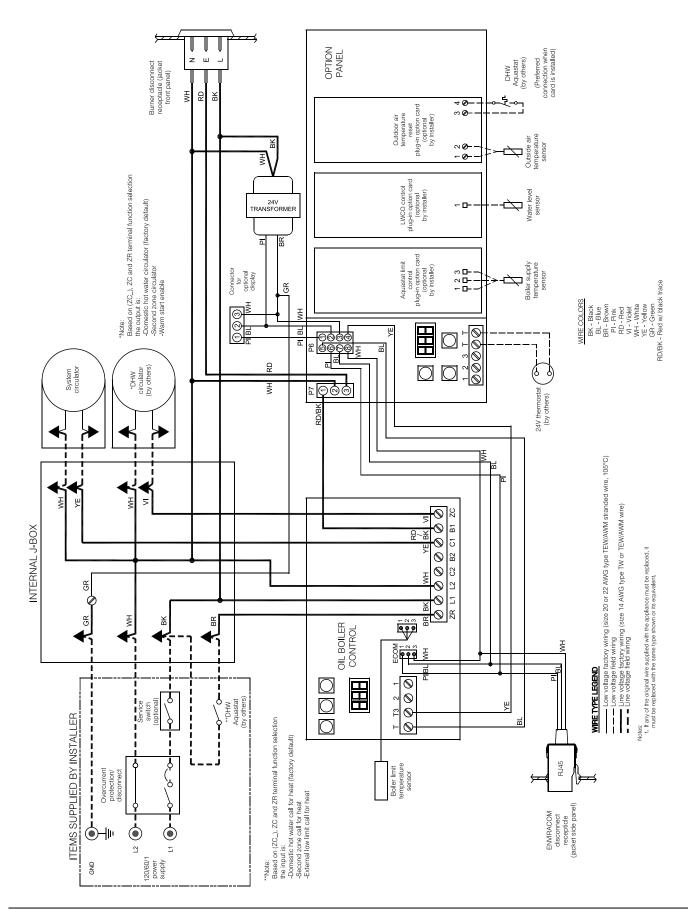


Figure 6-1: Schematic Wiring Diagram

6 Electrical (continued)

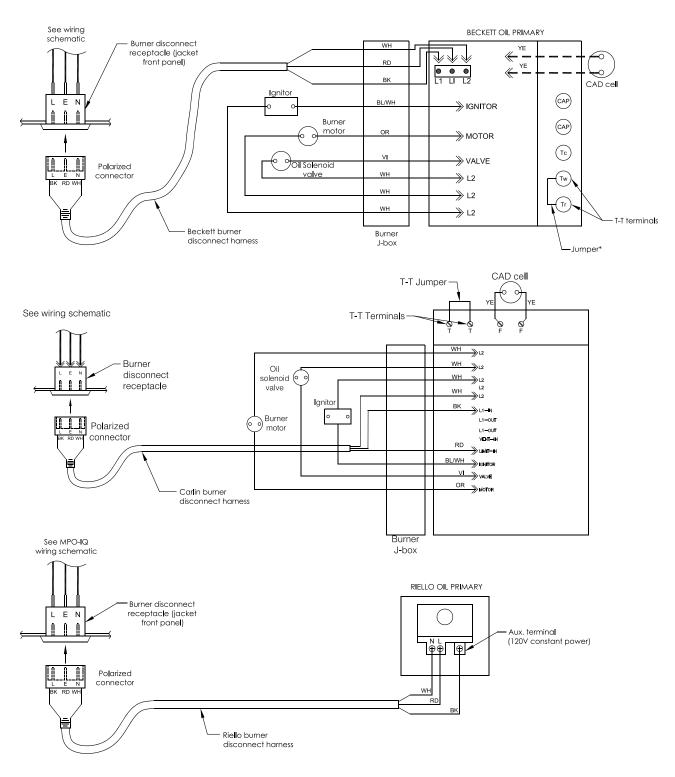


Figure 6-2: Schematic Wiring Diagram, All Burner Options

103859-16 - 8/24

6 Electrical (continued)

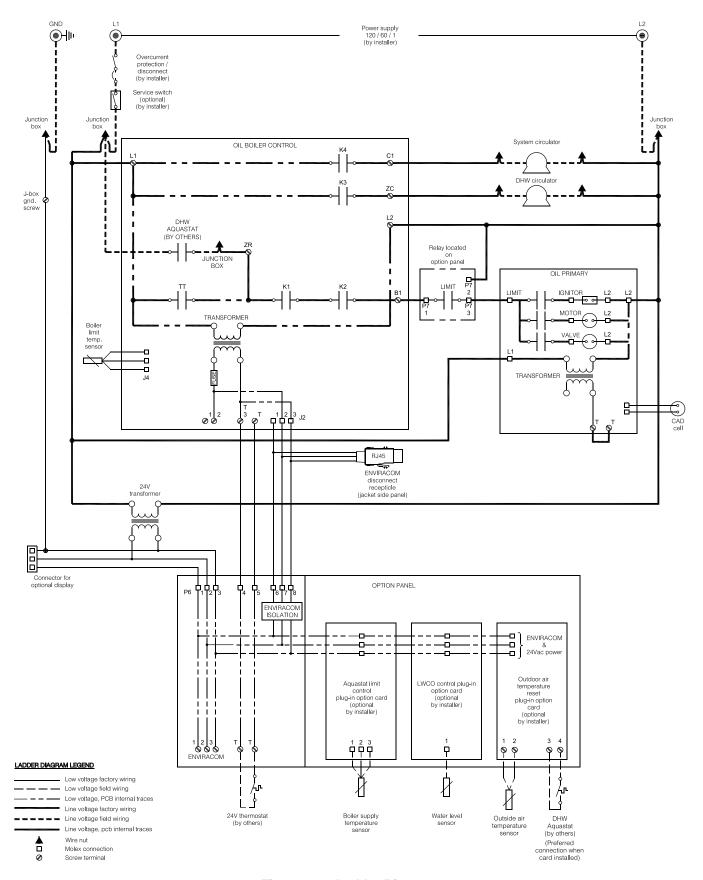


Figure 6-3: Ladder Diagram

7 Oil Piping

NOTICE: The National Oilheat Research Alliance (NORA) recommends single pipe oil systems and high-quality filtration for all fuel types. This should include at least a 10-micron Spin-on filter. Double filtration provides even greater assurance clean fuel will get to the pump. Contaminants in the tank that enter the fuel supply to the burner can cause pump sticking/seizing. These contaminants may increase in the early stages of transitioning to modern fuels (Ultra Low Sulfur and Bio Blends). High quality filtration adds protection against pump sticking.

A. GENERAL

- Use flexible oil line(s) so the burner swing door can be opened without disconnecting the oil supply piping.
- 2. A supply line fuel oil filter is recommended as a minimum for all firing rates but a pleated paper fuel oil filter is recommended for the firing rates below 1.0 GPH to prevent nozzle fouling.

NOTICE: Do not use compression fittings.

Oil piping must be absolutely airtight or leaks or loss of prime may result. Bleed line and fuel unit completely.

Refer to your local jurisdictions regarding any special considerations for fuel supply requirements. In addition, refer to NFPA 31, Standard for the Installation of Oil-Burning Equipment for Installations in the United States and CSA B139 for Installation in Canada.

 Use of a high efficiency micron filter (Garber or equivalent) in addition to a conventional filter is highly recommended. 4. Piping used to connect the oil burner to the oil supply tank shall not be smaller than 3/8 in. iron pipe or 3/8 in. OD copper tubing. Copper tubing shall have a .032 in. minimum wall thickness.

WARNING

Under no circumstances can copper with sweat style connectors be used.

NOTICE: Some jurisdictions require the use of a fusible shutoff valve at the tank and/or the burner. In addition, some jurisdictions require the use of a fusible electrical interlock with the burner circuit. Check your local Codes for special requirements.

B. SINGLE PIPE OIL LINES

- 1. Standard burners are provided with single-stage 3450 RPM fuel units with the bypass plug removed for single-pipe installations.
- 2. The single-stage fuel unit may be installed single-pipe with gravity feed or lift. Maximum allowable lift is 8 feet. See Figure 7-1.
- 3. Fuel Oil Line Deaerator On many occasions a leaky oil delivery line can introduce air into the fuel oil supply system. This often creates a rough starting condition and can create a burner lockout state. In addition to fixing the leak, a fuel line deaerator can be installed to eliminate air. The single line from the fuel tank is connected to the deaerator. The burner pump must be connected to the deaerator as a two pipe system. Follow the oil pump manufacturer's recommendations for conversion to a two pipe system.

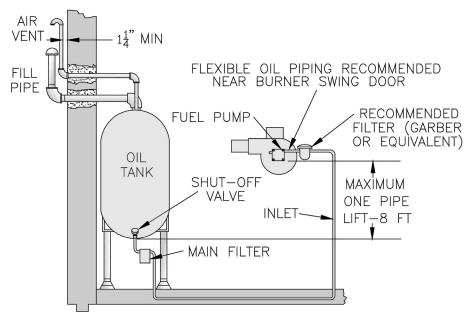


Figure 7-1: Single Pipe Oil Line

103859-16 - 8/24

7 Oil Piping (continued)

C. TWO PIPE OIL LINES

- For two piped systems, where more lift is required, the two-stage fuel unit is recommended. Table 7-2 (two-stage) and Table 7-3 (single-stage) show allowable lift and lengths of 3/8 inch and 1/2 inch OD tubing for both suction and return lines. Refer to Figure 7-4.
- 2. Follow the oil pump manufacturer's recommendations on the proper connections for a two pipe system. Some manufacturers require the insertion of a bypass plug.

Table 7-2: Two-Stage Units (3450 RPM) - Two Pipe Systems (See Figure 5-12)

1 :44 11 11	Maximum Length of Tubing "H" + "R"		
Lift "H"	3/8 in. OD Tubing (3 GPH)	1/2 in. OD Tubing (3 GPH)	
0 ft.	93 ft.	100 ft.	
2 ft.	85 ft.	100 ft.	
4 ft.	77 ft.	100 ft.	
6 ft.	69 ft.	100 ft.	
8 ft.	69 ft.	100 ft.	
10 ft.	52 ft.	100 ft.	
12 ft.	44 ft.	100 ft.	
14 ft.	36 ft.	100 ft.	
16 ft.	27 ft.	100 ft.	
18 ft.		76 ft.	

3. Under no circumstances is a manual shutoff valve to be located on the return line of a two pipe system. Accidental closure of the return line will rupture the oil pump seals.

Table 7-3: Single-Stage Units (3450 RPM) - Two Pipe Systems (See Figure 5-12)

Lift "H"	Maximum Length of Tubing "H" + "R"		
	3/8 in. OD Tubing (3 GPH)	1/2 in. OD Tubing (3 GPH)	
0 ft.	84 ft.	100 ft.	
1 ft.	78 ft.	100 ft.	
2 ft.	73 ft.	100 ft.	
3 ft.	68 ft.	100 ft.	
4 ft.	63 ft.	100 ft.	
5 ft.	57 ft.	100 ft.	
6 ft.	52 ft.	100 ft.	
7 ft.	47 ft.	100 ft.	
8 ft.	42 ft.	100 ft.	
9 ft.	36 ft.	100 ft.	
10 ft.	31 ft.	76 ft.	
11 ft.	26 ft.	100 ft.	
12 ft.	21 ft.	83 ft.	
13 ft.		62 ft.	
14 ft.		41 ft.	

OUTSIDE TANK FUEL PUMP ABOVE BOTTOM OF TANK

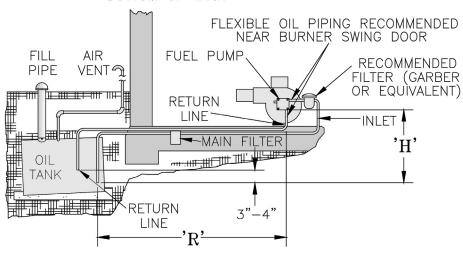


Figure 7-4: Two Pipe Oil Lines

8 System Start-up

WARNING

All boilers equipped with burner swing door have a potential hazard which can cause severe property damage, personal injury or loss of life if ignored. Before opening swing door, turn off service switch to boiler to prevent accidental firing of burner outside the combustion chamber. Be sure to tighten swing door fastener completely when service is completed. In addition, the burner power cord will have to be disconnected from the receptacle in the front jacket.

A. <u>ALWAYS INSPECT INSTALLATION BEFORE</u> <u>STARTING BURNER.</u>

- Verify that the venting system is properly installed and free of obstructions prior to start-up of the boiler. Refer to Section 4 "Natural Draft Venting" or Section 6 "Direct Venting / Air Intake Piping" in this manual.
- 2. Inspect electrical system to ensure proper electrical connections are made and fuses are installed. Refer to Section 11 "Electrical" in this manual.
- 3. Verify that the oil piping is properly installed, the oil tank is filled with #2 fuel oil and oil lines have been tested. Refer to Section 7 "Oil Piping" in this manual.
- 4. Confirm all electrical and oil supplies are turned off at the source.

WARNING

Completely read, understand and follow all instructions in this manual before attempting start up.

B. FILL HEATING SYSTEM WITH WATER.

NOTICE: It is important to properly remove the oil and dirt from the system. Failure to clean the system can result in clogged air vents, circulator damage and seized zone valves. Refer to Maintenance and Service Instructions Section of this manual for proper cleaning instructions.

CLEAN HEATING SYSTEM if boiler water is dirty.

- HOT WATER BOILERS. Fill entire heating system with water and vent air from system. Use the following procedure on a series loop or multi-zoned system installed as per Figures 3-2 and 3-3, to remove air from system when filling:
 - a. Close full port ball valve in boiler system piping.
 - b. Isolate all zones by closing zone valves or shutoff valves in supply and return of each zone(s).
 - c. Attach a hose to vertical purge valve in boiler system supply piping up stream from the full port ball valve.

(**Note** - Terminate hose in five gallon bucket at a suitable floor drain or outdoor area).

- d. Starting with one zone at a time, open zone valve or shut-off valve in boiler supply and return piping.
- e. Open purge valve.
- f. Open shut-off valve in cold water supply piping located between the air scoop and expansion tank.

- g. Allow water to overflow from bucket until discharge from hose is bubble free for 30 seconds.
- h. When zone valve is completely purged of air, close zone valve or shut-off valve. Open zone valve to the next zone to be purged. Repeat this step until all zones have been purged. At completion, open all zone valves.
- i. Close purge valve, continue filling the system until the pressure gauge reads 12 psi. Close shut-off valve in cold water supply piping.

WARNING

The maximum operating pressure of this boiler is posted on the ASME Data Label located on the top of the boiler. Never exceed this pressure. Do not plug pressure relief valve.

NOTICE: If make-up water line is equipped with pressure reducing valve, system will automatically fill to 12 psi. Follow fill valve manufacturer's instructions.

- j. Open full port ball valve in boiler system piping.
- k. Remove hose from purge valve.
- Confirm that the boiler and system have no water leaks.
- m. It may be necessary to clean the air vent assembly after a few days of operation.

C. CHECK OIL BURNER BEFORE STARTING.

- 1. Ensure that burner is tightly secured to the burner swing door creating an airtight seal.
- 2. CHECK BURNER AIR AND HEAD SETTINGS, readjust if necessary, see Table 14-1 thru 14-4 at rear of manual. Refer to Burner Manufacturer's Manual.
- 3. Adjust system thermostat(s) to highest setting.

D. START OIL BURNER.

- 1. Open oil supply to burner and vent fitting on fuel pump.
- 2. Turn 'On' electrical service switch to boiler.
- Press and Hold the ACTION Button on the front of Primary Control for fifteen (15) seconds until the yellow light turns on and release to reset Primary Control.

4. Allow burner to run until oil flows from vent fitting is a SOLID stream without air bubbles for approximately 10 seconds.

Note: For Primary Control "Pump Priming Cycle" details, see Paragraph J, No. 1., Step b.

- 5. Close vent fitting and burner flame should start immediately after pre-purge is completed. Prepurge prevents burner flame until 15 seconds has elapsed after initial power is applied to burner. During pre-purge the motor and igniter will operate but the oil valve will remain closed. Refer to Oil Primary Control Instructions for more details.
- 6. Adjust oil pressure.
 - a. When checking a fuel unit's operating pressure, a reliable pressure gauge may be installed in either the bleeder port or the nozzle port. Refer to Burner Manufacturer's Manual for more details.
 - b. Locate oil pressure adjusting screw and turn screw to obtain proper pump pressure, refer to Tables 14-1 thru 14-4 at rear of manual.
 - c. To check the cut-off pressure, deadhead a reliable pressure gauge onto the copper connector tube attached to the nozzle port. Run the burner for a short period of time. Shut the burner off. The pressure should drop and hold.
 - d. Remove the gauge and install bleeder port and/ or reconnect the nozzle port line.

E. <u>ADJUST OIL BURNER WHILE OPERATING.</u> (flame present)

- ADJUST DRAFT REGULATOR for a draft of zero inches (water gauge) in the canopy (see Figure 5-3) after chimney has reached operating temperature and while burner is running. (At least five minutes) See Tables 14-1 thru 14-4 at rear of manual for details.
- 2. READJUST THE AIR SETTING on burner for a light orange colored flame while the draft in the canopy is zero inches water column ("w.c.). Use a smoke tester and adjust air for minimum smoke (not to exceed #1) with a minimum of excess air. Make final check using suitable instrumentation to obtain a CO₂ of 11.5 to 13.0% with draft of zero inches water column ("w.c.) (water gauge) in canopy. These settings will assure a safe and efficient operating condition. If the flame appears stringy instead of a solid fire, try another nozzle of the same type. Flame should be solid and compact. After all adjustments are made recheck for a draft of zero inches water column ("w.c.) in the canopy. Replace plug at completion. See Tables 14-1 thru 14-4 (at rear of this manual) for details regarding the overfire pressure when baffles are both installed and removed.

- 3. READJUST THE HEAD SETTING.
 - It might be necessary to move the head forward or back one position at a time to optimize the smoke and CO₂ readings. Refer to Burner Manufacturer's Manual for details.
- 4. TURN "OFF" BURNER and remove pressure gauge. Install gauge port/bleeder plug and tighten. Start burner again.

WARNING

Do not loosen or remove any oil line fittings while burner is operating.

5. FLAME FAILURE

The Boiler Control operates the burner automatically. If for unknown reasons the burner ceases to fire and the reset button on the primary control has tripped, the burner has experienced ignition failure. Refer to Oil Primary Control Features, Paragraph J, Step 2 of this Section and Section 13, Trouble Shooting, Paragraph B.

F. CHECK FOR CLEAN CUT OFF OF BURNER.

- 1. AIR IN THE OIL LINE between fuel unit and nozzle will compress when burner is on and will expand when burner stops, causing oil to squirt from nozzle at low pressure as the burner slows down and causing nozzle to drip after burner stops. Usually, cycling the burner operation about 5 to 10 times will eliminate air from the oil line.
- 2. IF NOZZLE CONTINUES TO DRIP, repeat Paragraph F, No. 1. If this does not stop the dripping, remove cut-off valve and seat, and wipe both with a clean cloth until clean, then replace and readjust oil pressure. If dripping or after burn persist replace fuel pump.

G. ADJUST CONTROL SETTINGS

Program boiler control (high limit, etc.) to suit individual requirements for the installation. Refer to Section 9 "OPERATING" to locate and adjust the control.

H. SEQUENCE OF OPERATION

The Boiler Control display provides a status display, "STA", shown in Table 9-2. Refer to Section 9 "OPERATING" to locate and view the sequence.

I. CHECK THERMOSTAT OPERATION.

Raise and lower thermostat setting as required to start and stop burner.

WARNING

Before installation of the boiler is considered complete, the operation of all boiler controls must be checked, particularly the primary control and high limit control.

- J. Verify Oil Primary Control Features using procedures outlined in Instructions furnished with control or instructions as follows:
 - 1. Priming the pump.
 - a. Prepare the burner for priming by attaching a clear plastic hose over the bleed port fitting and fully opening the pump bleed port. Use a suitable container to collect purged oil.
 - b. Initiate a call for heat.
 - c. After the burner starts, press and hold the ACTION button for 15 seconds until the yellow light turns on. This indicates that the button has been held long enough.
 - d. Release the ACTION button. The yellow light will turn off and the burner will start up again.
 - e. At burner starts up, click the ACTION button while the igniter is still on. This will transition the control to a dedicated Pump Prime mode, during which the motor, igniter, and valve are powered for four minutes. The SYS light will be solid yellow for the duration of Pump Prime mode.
 - f. Bleed the pump until all froth and bubbles are purged. If desired, terminate the call for heat or hold the ACTION button for at least one second to exit Pump Prime mode and return to Standby.
 - g. At the end of 4 minutes, SYS light will turn from yellow to green and the control will automatically return to standby mode.
- DISPLAY

 THERMOSTAT
 TERMINALS

 ENVIRACOM
 TERMINALS

 ENVIRACOM
 DIAGNOSTIC
 PLUG

Figure 8-1: R7284 Oil Primary Terminals, Display and Function Buttons

- h. If prime is not established during the fourminute pump prime mode, return to step 5 to re-enter Pump Prime mode. Repeat steps 5 through 7 until the pump is fully primed and the oil is free of bubbles.
- i. Terminate the call for heat, and the control will resume normal operation.

2. SAFE START CHECK

- a. Place a jumper across the cad cell terminals.
- b. Initiate a call for heat.
- c. Burner must not start. Verify that the SYS light is green, FLM light is yellow, and that the control remains in Standby mode.
- d. End the call for heat and remove the cad cell jumper.

3. SIMULATE FLAME FAILURE AND IGNITION FAILURE

- a. Initiate a call for heat.
- b. After the flame is established and the burner igniter turns off, close the hand valve in the oil supply line.
- c. At flame loss, the control will enter Recycle mode. Verify that the SYS light is flashing yellow. The control will remain in Recycle for 60 seconds.
- d. After the 60 second recycle period, the control will try to restart the system.
- e. After the 15 second lockout time, the control will lock out the burner and the SYS light will flash red. Verify that the burner motor and igniter are off and that the burner oil solenoid valve (if used) is not energized.
- f. Open the hand valve in the oil line.
- g. Click the ACTION button and verify that the SYS light shows green and the burner lights.
- h. End the call for heat.

K. CHECK HIGH LIMIT

- 1. Adjust system thermostat(s) to highest setting.
- 2. Allow burner to run until boiler water temperature exceeds high limit setting. The burner should shut down and circulators continue running.
- 3. Allow the temperature to drop below control setting. The burner must restart.
- 4. Boiler installation is not considered complete until this check has been made.

- L. <u>IF CONTROLS MEET REQUIREMENT</u> outlined in Paragraphs I thru k.
 - 1. Allow boiler to operate for approximately 30 minute, confirm the boiler and system have no leaks.
 - 2. Reset thermostat(s) at desired setting.
- M. <u>IF CONTROLS DO NOT MEET</u>
 <u>REQUIREMENTS</u> outlined in Paragraphs I thru k, replace control and repeat checkout procedures.

M WARNING

Cad Cell Jumper must be removed after this check.

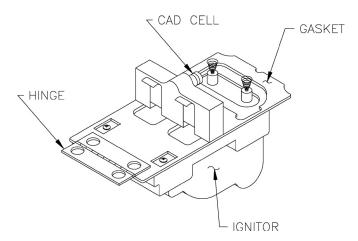


Figure 8-2: Cad Cell Location

Important Product Safety Information: Refractory Ceramic Fiber Product

M WARNING

Some boiler components use materials that contain refractory ceramic fibers (RCF). RCF has been classified as a possible human carcinogen. When exposed to elevated temperatures, RCF may change into crystalline silica, a known carcinogen. When disturbed as a result of servicing or repair, these substances become airborne and, if inhaled, may be hazardous to your health. Avoid breathing RCF particulates and dust.

Precautionary Measures:

- Do not handle RCF parts or attempt any service or repair work involving RCF without wearing the following protective gear:
 - A properly fitting National Institute for Occupational Safety and Health (NIOSH)-certified airpurifying respirator with a filter efficiency of at least 95%. Respirator should also include a full facepiece when handling used RCF. Other types of respirators may be required depending on site conditions. Current NIOSH recommendations may be found on the NIOSH website http://www.cdc.gov/niosh/homepage.html. NIOSH-approved manufacturers, respirators and associated user instructions are listed on the NIOSH website.
 - Long sleeved, loose fitting clothing that is sufficiently tight around potential entry points for RCF dust.
 - 3. Gloves.
 - 4. Eye protection, such as goggles, safety glasses with side shields, or full facepiece.
- Take steps to assure adequate ventilation.
- Handle RCF carefully to minimize airborne dust. Use hand tools whenever possible.
- Dampen used RCF with light water spray prior to removal to prevent airborne dust.
- Do not use compressed air or dry sweeping for clean-up. Frequently clean work area with a vacuum or by wet sweeping to minimize debris accumulation.
- Vacuum work clothes before leaving work area. Wash work clothes separately from other laundry and rinse washing machine after use to avoid contaminating other clothes.
- Wash all exposed body areas gently with soap and water after contact.
- Discard used RCF components by sealing in an airtight plastic bag or container. Refer to local, regional, state or provincial regulations to identify applicable disposal requirements.

First Aid Procedures:

- Eye contact: Flush with water for at least 15 minutes. **Do not rub eyes**. Seek immediate medical attention if irritation persists.
- Skin contact: Wash affected area gently with soap and water. Do not rub or scratch affected skin. Seek immediate medical attention if irritation persists.
- Nose and throat contact: If these become irritated, leave the area and move to a location with clean fresh air. Drink water and blow nose. Seek immediate medical attention if symptoms persist.

112645-01

9 Operating

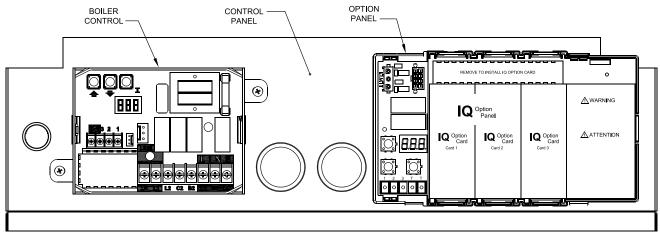


Figure 9-1: Boiler Control & Option Panel Orientation

A. BOILER SEQUENCE OF OPERATION

- 1. The boiler's sequence of operation is shown in Table 9-2.
- 2. When there is a call for heat the boiler control starts the system circulator and the thermal purge (circulator pre-purge time) begins. If the time is completed or boiler temperature is less than the Start Temperature (140°F default) the start sequence continues by energizing the oil primary to operate the following sequence: blower is started and operates for pre-purge time; spark is energized and fuel valve is opened for ignition trail time; burner fires until the thermostat is satisfied.
- 3. If the thermostat is not satisfied and the Operating Setpoint (SP) is reached the system circulator will continue to operate and the burner will stop. When the boiler water temperature drops below the setpoint less the differential setting the burner will restart.
- 4. After the thermostat is satisfied the burner and circulator are stopped.
- 5. When an indirect water heater aquastat call for heat is wired to the DHW input the control starts the Domestic Hot Water circulator and when boiler temperature is less than the operating setpoint energizes the oil primary to turn on the burner without circulator pre-purge delay.
- On water boilers equipped with a High Limit Option Card, if boiler water temperature exceeds the high limit setting, the system pump will continue to operate, and the burner will stop. When the boiler water temperature drops below the High Limit Card differential setting, (15°F), the burner will restart.

Table 9-2: Sequence Of Operation

	Status Cod	le Displayed in 5t8 Mode
SER	Status	Description
1	Standby (burner off, circulator off)	No call for Heat Detected.
1	Standby (burner off, circulator on)	 Either condition is true: a. Call for heat detected and boiler temperature higher than operating setpoint. b. Call for heat is detected and boiler temperature higher than start tempera ture (140°F default) and circulator prepurge time has not expired.
4 *	Pre-purge	The blower is turned on for a valve-on delay.
6 *	Trial For Ignition (TFI)	The igniter is turned on and the fuel valve is opened. A flame must be established within the trial for ignition time.
7*	Carryover	Once flame is established, the ignition remains on for 10 seconds to ensure flame stability and then turns off.
8	Running	The burner runs until the call for heat is satisfied. The burner is then sent to burner motor-off delay, as applicable, or it is shut down and sent to standby.
9*	Post-purge	The fuel valve is closed and the burner motor is kept on for an off delay time before the control returns the burner to standby.
10*	Retry / Recycle Delay	If the flame is lost while the burner is firing, the control shuts down the burner, enters a recycle delay, and then repeats the ignition steps outlined above. If the flame is lost three times in a row, the control locks out to prevent cycling with repetitious flame loss caused by poor combustion.
14*	Hard Lockout	If flame is not sensed by the end of the TFI, the control shuts down on safety lockout and must be manually reset. Press and hold reset button for 30 seconds to reset the restricted lockout.
15*	Waiting for Limit to Close	Heat request present and start sequence is halted due to an open limit. Open limits include high water temperature or low water detected by IQ Option Cards.
16*	Flame Present Out of Sequence	Flame signal is still present when expected to be 0 (no flame).
П	Self Test	Control internal checking.

- On water boilers equipped with a LWCO Option Card, if level probe senses a low water condition, the system pump will continue to operate and the burner will stop. When water level is replenished, the burner will restart.
- 8. On burner start, if the cad cell does not see flame during the trial for ignition, the oil primary control will shut the burner down and enter into a hard lockout. The Oil Primary must be reset manually before the burner can be restarted.

B. USING BOILER CONTROL

The Boiler Control is located under the Jacket Front Cover, to the left of the Option Panel (Refer to Figure 9-1).

The Boiler Control display, along with Up û, Down ♣, and "I" keys may be used to view boiler operating status (Figure 9-3). Please note that these keys look similar to the keys on the Option Panel but are in a different orientation, and they perform different functions.

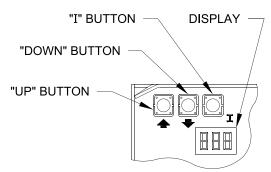


Figure 9-3: Boiler Control Key Function & Orientation

C. <u>VIEWING THE OPERATING MODE OPTIONS</u>

In operating mode the user may view (but not change) boiler operating status, settings and troubleshooting information. To view Boiler Control display information:

Press and release the "T" key on the Boiler Control to change from one parameter to the next. Each setting will alternately flash between the relevant display code and its corresponding value.

	Operating Mode Options
SER	Status (see Status Number in following Table)
ЬŁ	Boiler Temperature
5P	Operating Setpoint (Outdoor Reset)
HL	High Limit Setting
HdF	High Limit Differential
hr	Heat Request Status
dh	Zone Request Status
CAd*	CAD Cell Ohms
⊏∐ո*	Run Time Hours
EAE*	Boiler Cycles
Err	Boiler Error
ErP	External Device Error

^{*} Visible when Burner-ECOM Harness is connected to EnviraCOM primary equipped burner. Refer to Figure 6-3 for installation details.

	Status Number Displayed in 5th Mode
1	Standby
4*	Pre-purge
6*	Trial for Ignition
7*	Carry Over
8	Running
9*	Post-purge
10*	Retry/Recycle Delay
14*	Hard Lockout
15*	Waiting for Limit to Close
16*	Flame Present Out of Sequence
17	Self Test

For example, when the "\mathbb{T}" key is pressed on the Boiler Control until "b\mathbb{E}" is displayed, it will then flash a three digit number (such as "IBD") followed by either "F" (or "\mathbb{E}"). This indicates that the boiler water temperature is 180°F. Other operating parameters display the information in a similar fashion.



Please note that in operating mode to hold the display on the value the user can press and hold either the Up 1 or Down \$\mathcal{Q}\$ keys and the value will be continuously shown. This may be helpful in watching a value "live".

D. USING THE OPTION PANEL

Option Cards are available from distributors and are the simplest way to add functionality, safety and efficiency to your heating system. The Option Panel provides an easy and convenient means to "plug-in" an Auxiliary High Limit, Low Water Cut-off and/or Outdoor Reset function. For operating instructions, refer to the instructions supplied with those cards.

E. <u>USING THE OPTIONAL LCD DISPLAY KIT</u> (P/N 102728-01)

The LCD Display is an easy to use touch screen type display that allows a technician to monitor and adjust the Boiler Control and connected Option Cards. All boiler settings, status and error codes are displayed in full text. All Outdoor Reset Option Card parameters are adjustable with graphic and help information screens. The LCD Display Kit includes a mounting bracket and a simple plug-in wiring connection to allow mounting in the plastic hood above the burner door.

For installation instructions, refer to the instructions supplied with the display.

F. CHANGING THE ADJUSTABLE PARAMETERS

To adjust parameters such as the High Limit Setpoint and High Limit Differential:

- Using the Boiler Control display, access the adjustment mode by pressing and holding the Up ↑, Down ↓, and "I" keys simultaneously for three (3) seconds. This procedure is intended to discourage unauthorized changes or accidental changes to limit settings.
- 2. Press the 'T' key to display available Adjustment Mode options. Select an option.

	Adjustment Mode Options				
HL_	140-240°F	Adjust High Limit Setting			
HdF	10-30°F	Adjust High Limit Differential			
20_	dh, 2r or ELL	ZC and ZR Terminal Function			
0r_	0-10 minutes	Pump Overrun Time			
PP_	0-20 minutes	Pump Pre-purge Time			
5t_	140 - 180°F	Start Temperature			
Pt_	On or OFF	Priority Time			
F-E	F or [Select degrees F or C Mode			
ЬЯс		Back to Operating Mode			

- 3. Press the Up ↑ and Down ↓ keys to adjust the displayed setpoint to the desired value.
- 4. To return to the normal operating mode from the Adjustment Mode, when the "bAc" option is displayed, press either the Up ñ or Down ↓ key. If no keys are pressed, after five (5) minutes the Boiler Control will automatically return to the Operating Mode.

G. <u>MORE INFORMATION ABOUT ADJUSTABLE</u> PARAMETERS

1. High Limit (HL_)

The Boiler Control is factory programmed with a High Limit Setpoint of 180°F. The boiler turns "off" when the boiler water temperature (bt) is above this value. The High Limit setpoint is adjustable between 140° and 240°F. The Operating Setpoint (SP) will equal the High Limit Setpoint unless an Outdoor Reset Option Card is installed. The Outdoor Reset Option Card reduces the Operating Setpoint to regulate heat delivery, increase home comfort and save energy. Refer to Appendix A for additional information.

2. Differential (HdF)

The Boiler Control is factory programmed with a Differential of 15°F. The Differential is the number of degrees the boiler temperature must decrease below the Operating Setpoint before the boiler can restart. The differential is adjustable between 10° and 30°F.

3. Circulator Overrun Time (#r_)

Circulator Overrun Time (also called "circulator off delay" or "circulator post purge") continues circulator operation after a call for heat has ended, sending excess heat from the boiler into

Table 9-4: Circulator Pre-Purge Time Example,
Parameter PP = 2 Minutes

Call for Heat	ZC and ZR Terminal Function (₹£_)	Boiler Temp.	Boiler Status, (B1 Output)
TT= on		< 140	Start with no delay
TT = on		>140	Start after 2 minute delay
ZR = on	2C_ = 2r	<140	Start with no delay
ZR = on	2C_ = 2r	>140	Start after 2 minute delay
ZR = on	2C_ = dH	<140	Start with no delay
ZR = on	2C_ = dH	>140	Start with no delay

the priority zone. Ensure system piping and zone panel settings allow water flow to the priority zone after the call for heat ends. The Circulator Overrun Time has a factor setting of 0 minutes and is field adjustable between 0 and 10 minutes.

5. Circulator Pre-Purge Time (PP_)
When the boiler is warm [boiler water temperature higher than 140°F (adjustable using Start Temperature parameter)] and there is a thermostat call for heat, the system circulator

is started and boiler firing is delayed pre-purge minutes. If the temperature drops below 140°F or there is a DHW Call for Heat the boiler is started without delay. Additionally, the boiler is started without delay if the thermostat call for heat is initiated when the boiler water temperature is less than 140°F. This feature helps save energy by satisfying home heating needs with residual boiler heat rather than cycling the boiler. The Circulator Pre-purge time has a factory setting of 2 minutes and is field adjustable between 2 and 20 minutes. When reset card is installed pre-purge time may be adjusted down to zero (0) minutes. Refer to Table 9-4.

6. Start Temperature (5£_)

The amount of "Heat available" is calculated by taking the difference between measured boiler water temperature and the Start Temperature setting. Useful "Heat Available" is dependent on the type of heating emitter installed in the home. Heat emitters require a certain minimum temperature to operate effectively. Our default settings reflect cast iron radiators. Fan Coils may require a start temperature setting of 180°F or 160°F before providing heat to the home. The Start Temperature has a factory setting of 140°F and is field adjustable between 140°F and 180°F.

7. Priority Time (Pt_)

When the Priority Time parameter is set to "on" and Domestic Hot Water (DHW) call for heat is "on" the DHW demand will take "Priority" over home heating demand and the system circulator will be forced "off". Priority Time ends and the system circulator is released to service home heating demand when Domestic Hot Water call for heat is over. When Priority Time parameter is set to "Off" the DHW call for heat does not force "off" the system circulator. The Priority Time has a factory setting of "On" and is field adjustable between "On" and "Off" Refer to Table 9-5.

8. ZC and ZR Terminal Function

The boiler control allows configuration of the ZC output functionality to help the MPO-IQ integrate into each installation more effectively. The ZC output can be connected to a domestic hot water circulator or a second heating zone circulator or be used to enable pumps in a warm start application. These applications are selected as follows:

a. When 25_ is set equal to Domestic Hot Water Demand (dh)

When there is an Indirect Water Heater (IWH) the boiler control provides a "ZR" input terminal for the IWH Aquastat and "ZC" output

terminal for the DHW Circulator. When there is a DHW call for heat, the System Circulator is "forced off", the DHW Circulator terminal is energized and the circulator pre-purge time delay control logic is bypassed to allow the boiler to fire without delay. When DHW demand ends the System Circulator "force off" is removed, the circulator can respond normally, and the DHW Circulator is deenergized. The DHW call for heat is detected by a voltage on to the ZR terminal. When a Priority Time parameter is set to "off" the System Circulator is not forced off for a DHW call for heat. Refer to Table 9-5.

Table 9-5: Domestic Hot Water Demand, (Parameter 2€ = dH)

Call fo	r Heat	Priority	Circulate	or Status
T-T Input	ZR Input	Time (Pt_)	System Circulator Output	DHW Circulator ZC Output
on	off	On	on	off
on	on	On	off	on
off	on	On	off	on
on	off	OFF	on	off
on	on	OFF	on	on
off	on	OFF	off	on

Table 9-6: Domestic Hot Water Demand,

(Parameter 2*□* = *dH*)

outdoor air reset option card installed.

Call fo	Call for Heat		Outdoor Air Reset Option Card P/N 102294-01			ılator tus
T-T Input	ZR Input	DHW Priority Time Expired?		C1 Output	ZC Output	
off		off	> 0	no	off	off
on		off	> 0	no	on	off
on		on	> 0	no	off	on
on		on	> 0	yes	on	on
on		on	= 0	no	on	on
off		on	= 0	no	off	on

Table 9-7: Zone Request, Parameter $2c_{-}=2c_{-}$

Call for Heat		Circulator Status	
T-T Input	ZR Input	C1 Output	ZC Output
off	off	off	off
on	off	on	off
on	on	on	on
off	on	off	on

- When an Outdoor Air Reset Option Card is installed and there is a DHW call for heat there is an adjustable DHW Temperature Setpoint and Priority Timer included. Refer to Table 9-6.
- b. When 25_ is set equal to Zone Request (2-) When there is no IWH the "ZC" output may be configured to control a second heating zone. This is particularly helpful when the home uses only two heating zones. The boiler control replaces the need for a two circulator zone panel. When DHW Terminal Function (dh.) is set to "2" the boiler control's two circulator outputs are used to control two independent heating zones. Refer to Table 9-7. A "TT" input causes a call for heat and energizes the System Circulator output to service heating zone 1. A second zone's thermostat may be wired to the "ZR" input to energize heating zone 2 circulator wired to the "ZC" output. Both outputs function independently, "TT" input controls only the System Circulator output and the "ZR" input controls only the "ZC" output. Both inputs cause a boiler call for heat.
- c. External Low Limit, Parameter ₹€ = €££

 The boiler control is capable of functioning as a warm start control when external limit control is installed that closes a contact when boiler water temperature falls below a setpoint. When an external limit contact closes (boiler water is cold) the boiler is started and the ZC and C1 output terminals are de-energized. When the ZR terminal is de-energized (boiler water temperature is above setpoint) the call for heat is ended and the C1 terminal is released to operation and the ZC terminal is energized. An External Low Limit Request is detected by sensing a voltage on the ZR terminal. Refer to Table 9-8.

Table 9-8: External Low Limit, Parameter 2c_= ELL

Call for Heat		Circulator Status	
T-T Input	ZR Input	C1 Output	ZC Output
off	off	off	on
on	off	on	on
on	on	off	off
off	on	off	off

- H. BECKETT GENISYS 7565 PRIMARY CONTROL
 - 1. Sequence of Operation (See Figure 9-9)
 - a. Standby: The burner is idle, waiting for a call for heat.


- Validate Air: once the motor turns on and if configured, the control will prove air before pre-purge. This feature requires either a pressure switch or a spill switch.
- c. Valve-On Delay: Pre-Purge, the igniter and motor are on while the control delays turning on the oil solenoid valve for the programmed time. This feature requires either a Beckett Clean-Cut pump or an external valve.
- d. Trial For Ignition (TFI): If used, the oil solenoid valve is energized. A flame should be established within the factory set trial for ignition time ("lockout time").
- e. Ignition Carryover: Once flame is established, the igniter remains on for the configured carryover time delay to ensure flame stability.
- f. Run: The flame is sustained until the call for heat is satisfied. The burner is then sent to Motor-Off Delay, if applicable, or it is shut down and sent to Standby.
- g. Motor-Off Delay: Post-Purge, if applicable, the oil solenoid valve is turned off and the control delays turning the motor off for the set motoroff delay time before the control returns to standby.
- h. Recycle: If the flame is lost or if the pressure or spill switch (if used) open while the burner is firing, the control shuts down the burner, enters a 60 second recycle delay, and repeats the ignition sequence. The control will continue to Recycle each time the flame is lost, until it reaches the configured number 3 max of retries. The control will then go into Lockout instead of Recycle. This feature prevents excessive accumulation of oil in the appliance firing chamber.
- Lockout: The control has shut down for one of the following safety reasons:
 - *i.* The trial for ignition (lockout) time expired without flame being established.
 - ii. The cad cell detected flame at the end of the Valve-On Delay state. Flame is lost while the burner is firing and the pre-set time allotment is expired. See "Recycle".
- j. To reset the control from (soft) lockout click the button 1-second.

NOTE: A recurrence of the above failure modes or a failed welded relay check could cause the control to enter a Hard Lockout state that must be reset only by a qualified service technician.

To reset from Hard Lockout, hold the ACTION button for 15 seconds until the SYS light briefly turns from red to yellow.

k. Pump Prime: The igniter and motor are on with the oil solenoid valve energized for 4 minutes. During Pump Prime mode, the cad cell is disregarded, allowing the technician to prime the pump without having to jumper the cad cell.

- 2. ACTION Button (see Table 9-10)
- 3. Disable Function
 - a. Any time the burner is running, press and hold the ACTION button to disable the burner. The burner will remain off as long as the button is held.

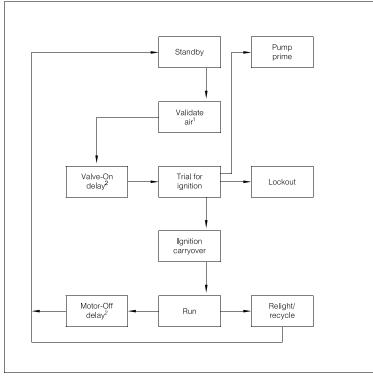

1 = only if air switch is installed

Table 9-10: ACTION Button Operation

Figure 9-9: Sequence of Operation, Beckett 7565 Primary Control

Burner State/Status	Pressing ACTION Button	Results
Lockout (soft)	1 Second Tap	Reset Control
Lockout (hard)	15+ Seconds	Reset Control
Valve-On Delay, For Ignition or Carryover	1 Second Tap	Go to pump after pump priming is enabled per the next step.
Powered On	15+ Seconds	Enable pump priming, then enters pump prime mode after next ignition sequence.
Any Excerpt Stand By	1+ Seconds	Exits current state and enters Stand-by, then keeps burner off while the button is held.
Powered On	1 Second Tap	Connect to the myTechnician app when prompted.

^{2 =} only if valve installed

10 Maintenance and Service Instructions

A. MAINTENANCE OF LOW WATER CUT-OFF DEVICES (when installed)

See Instructions provided with Low Water Cut-off Option Card for Installation Instructions.

WARNING

Probe type low water cut-off devices require annual inspection and maintenance.

PROBE TYPE LOW WATER CUT-OFF
 Although these devices are solid state in their
 operation, the probe is exposed to possible
 contamination in the boiler water and subject to
 fouling.

Sometimes the LWCO can be found in the primary loop of the boiler system. Ideally, shut off valves have been installed between the loop containing the LWCO and the rest of the system, to minimize the amount of system draining.

It is important to physically remove the probe from the LWCO tapping annually and inspect that probe for accumulation of scale or sediment.

Follow these steps to inspect, clean and/or replace the probe:

- a. Turn off electric service to the boiler.
- b. Drain boiler water to a level below the tapping for the probe.
- c. Disconnect wiring connections between the low water cut-off control and the probe.
- d. Remove the low water cut-off control from the probe.

DANGER

Assure that the boiler is at zero pressure before removing the LWCO probe. Do not rely on the pressure gauge to indicate that the boiler is at zero pressure. Open the pressure relief valve to relieve all internal pressure prior to proceeding. Pressure relief valve discharge piping must be piped such that the potential for burns is eliminated.

- e. Unscrew the probe from the LWCO tapping.
- f. Inspect that portion of the probe that is exposed to the water for a scale or sediment buildup.
- g. Light deposits may be removed by wiping the probe with a damp cloth. Wiping the probe with a cloth soaked in vinegar will remove more tenacious lime deposits. The most stubborn deposits may be removed from the probe by using a diluted amount, 3 parts of water to 1 part of phosphoric acid (H₂PO₄).

A CAUTION

Exercise caution when handling phosphoric acid and follow the instruction label on its container.

- h. Clean the pipe threads of the probe to remove old, hardened pipe dope and other foreign matter.
- Apply a moderate amount of good quality pipe dope to the pipe threads on the probe, leaving the two end threads bare. Do not use PTFE (Teflon) tape.
- j. Screw the probe into the LWCO tapping.
- k. Mount the low water cut-off control on the probe.
- I. Reconnect the control to probe wiring.
- m. Fill the system with water.
- n. Add boiler water treatment compound as needed (refer to Paragraph B.).
- o. Restore electric service to the boiler.
- p. Fire burner to bring the water in the boiler to a boil to drive off free oxygen.
- q. WARNING—BEFORE RETURNING BOILERTO SERVICE: Follow the low water cut-off instructions provided with Low Water Cut-off Option Card.

B. <u>BOILER AND SYSTEM CLEANING INSTRUCTIONS</u> FOR TROUBLE FREE OPERATION

- Filling of Boiler and System General —-In a hot water heating system, the boiler and entire system (other than the expansion tank) must be full of water for satisfactory operation. Water should be added to the system until the boiler pressure gauge registers 12 psi. To insure that the system is full, water should come out of all air vents when opened.
- Boiling Out of Boiler and System. The oil and grease which accumulate in a new hot water boiler can be washed out in the following manner.
 - Ideally, shut off valves have been installed between the boiler return manifold and the rest of the system, to minimize the amount of system draining.
 - b. Drain the boiler to a level below the pressure relief valve tapping.

DANGER

Assure that the boiler is at zero pressure before removing the pressure relief valve. Open the pressure relief valve to relieve all internal pressure prior to proceeding. Pressure relief valve discharge piping must be piped such that the potential for burns is eliminated.

10 Maintenance and Service Instructions (continued)

- c. Remove pressure relief valve using extreme care to avoid damaging it.
- d. Add an appropriate amount of recommended boil out compound.
- e. Replace pressure relief valve.
- f. Fill the entire system with water.
- g. Start firing the boiler.
- h. Circulate the water through the entire system.
- i. Vent the system, including the radiation.
- j Allow boiler water to reach operating temperature, if possible.
- k. Continue to circulate the water for a few hours.
- I. Stop firing the boiler.
- m. Drain the system in a manner and to a location that hot water can be discharged with safety.
- n. Remove plugs from all available returns and wash the water side of the boiler as thoroughly as possible, using a high-pressure water stream.
- o. Refill the system with fresh water.
- 3. Add appropriate boiler water treatment compounds as recommended by your qualified water treatment company.
- 4. Make pH or Alkalinity Test.

After boiler and system have been cleaned and refilled as previously described, test the pH of the water in the system. This can easily be done by drawing a small sample of boiler water and testing with hydrion paper which is used in the same manner as litmus paper, except it gives specific readings. A color chart on the side of the small hydrion dispenser gives the reading pH. Hydrion paper is inexpensive and obtainable from any chemical supply house or through your local druggist. The pH should be higher than 7 but lower than 11. Add appropriate water treatment chemicals, if necessary, to bring the pH within the specified range. With this lower level of protection, care must be exercised to eliminate all of the free oxygen in the system.

5. Boiler is now ready to be put into service.

C. EXCESSIVE MAKE-UP WATER

A leaky system will increase the volume of make-up water supplied to the boiler which can significantly shorten the life of the boiler. Entrained in make-up water are dissolved minerals, salts and oxygen. When the fresh, cool make-up water is heated in the boiler the minerals fall out as sediment, the salts coat the inside of the boiler, and the oxygen escapes as a gas. The accumulation of sediment eventually isolates the water from contacting the cast iron. When this happens

IMPORTANT

IF, DURING NORMAL OPERATION, IT IS NECESSARY TO ADD MORE WATER THAN INDICATED BELOW, CONSULT A QUALIFIED SERVICE TECHNICIAN TO CHECK YOUR SYSTEM FOR LEAKS.

Model No.	Gallons Per Month	Gallons Per Year
MPO-IQ84B/115B	0.20	2.4
MPO-IQ147B	0.25	3.0
MPO-IQ189B	0.30	3.6
MPO-IQ231B	0.40	4.8

the cast iron in that area gets extremely hot and eventually cracks. The presence of free oxygen or chloride salts in the boiler corrodes the cast iron from the inside. More make-up water and higher concentrations of contaminants damage the boiler sooner. Our warranty does not cover corrosion and sediment-related damage. Clearly it is in everyone's best interest to prevent this type of failure. You can do your part by ensuring that your system is leak-free, keeping leakage to less than 2 percent of the boiler water volume each month.

D. <u>ATTENTION TO BOILER WHILE NOT IN OPERATION.</u>

NOTICE: If boiler is not used during winter time, it must be fully drained to prevent freeze damage.

- 1. Spray inside surfaces with light lubricating or crankcase oil using gun with extended stem so as to reach all corners.
- 2. Always keep the manual fuel supply valve shut off if the burner is shut down for an extended period of time.
- 3. To recondition the heating system in the fall season after a prolonged shut down, follow the instructions outlined in Section 8.

WARNING

This boiler contains controls which may cause the boiler to shut down and not restart without service. If damage due to frozen pipes is a possibility, the heating system should not be left unattended in cold weather; or appropriate safeguards and alarms should be installed on the heating system to prevent damage if the boiler is inoperative.

11 Boiler Cleaning

WARNING

All boiler cleaning must be completed with burner service switch turned off. Boilers equipped with burner swing door have a potential hazard which can cause severe property damage, personal injury or loss of life if ignored. Before opening swing door, turn off service switch to boiler to prevent accidental firing of burner outside the combustion chamber. Disconnect the burner plug from the receptacle in the front jacket. Be sure to tighten swing door fastener completely when service is completed.

A. CLEAN THE FLUEWAYS (See Figure 11-1).

- 1. For access to the combustion chamber remove the two (2) 3/8-16 in. cap screws. If boiler is equipped with flexible fuel line(s), swing door open.
- 2. Remove the two smoke box clean-out covers from the rear smoke box by removing the four 5/16 in.-18 hex head bolts. It is NOT necessary to remove the vent connector from the smoke box to clean boiler. If necessary, remove the vent connector if there is evidence of heavy soot accumulation in the boiler or to inspect base of chimney for condensate or accumulation of debris.
- 3. Remove the baffles (if installed) from the flue passages. Refer to Section 2, Paragraph F for Baffle Installation.
- 4. Clean the 3rd Pass Insert a 2 in. dia. x 42 in. long wire or fiber bristle brush into each of the two 3rd passes. Using long strokes push the brush all the way through the boiler until the brush has exited the smoke box opening. Pull the brush all the way forward until it has exited the front of the boiler. Continue this operation for the entire height of the flue way until clean. Repeat the operation for the other 3rd pass flue way.
- 5. Clean the 2nd Pass Insert a 2 in. dia. x 42 in. long wire or fiber bristle brush into each of the two 2nd passes. Using long strokes push the brush all the way through the boiler until the brush hits the back wall of the reversing chamber. Pull the brush all the way forward until it has exited the front of the boiler. Continue this operation for the entire height of the flue way until clean. Repeat the operation for the other 2nd pass flue way.
- Vacuum the loose debris in the bottom of the combustion chamber and smoke box.
- B. <u>CLEAN THE COMBUSTION CHAMBER</u> Use a wire or fiber bristle brush to clean the surfaces of the combustion chamber. Vacuum all of the loose debris in the bottom of the combustion chamber.
- C. <u>AFTER CLEANING</u>, vacuum all remaining debris as necessary. Inspect burner swing door insulation, and rope gasket for signs of damage. If damaged, replace as needed.

D. REASSEMBLE BOILER.

A CAUTION

Do not start the burner unless the burner swing door and canopy cover plates are secured in place.

- Insert the baffles (if originally installed) into the correct flue way. Refer to Section 2, Paragraph F for Baffle Installation.
- Attach the smoke box clean-out covers onto the rear of the boiler. Verify that the rope gasket is in good working order before assembly. Replace rope gasket if necessary. Use the 3/8 in. hardware originally removed. Do not over tighten. They should be snug but not bottomed out.

NOTICE: When securing burner swing door make sure door is drawn-in equally on both sides.

Tighten swing door hardware to provide adequate seal to rope gasket around perimeter of door.

Use an alternating tightening method from right side to left side cap screw to pull door tight equally.

NOTICE: Do not overtighten. The rope gasket will provide sufficient seal when the door is snugged into place.

11 Boiler Cleaning (continued)

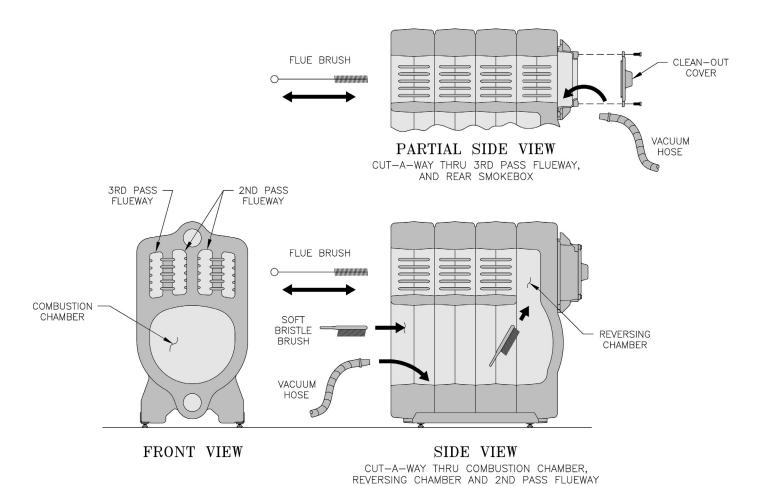


Figure 11-1: Cleaning of Boiler Flueways

WARNING

This boiler contains controls which may cause the boiler to shut down and not restart without service. If damage due to frozen pipes is a possibility, the heating system should not be left unattended in cold weather; or appropriate safeguards and alarms should be installed on the heating system to prevent damage if the boiler is inoperative.

12 Troubleshooting

A. COMBUSTION

- 1. NOZZLES Although the nozzle is a relatively inexpensive device, its function is critical to the successful operation of the oil burner. The selection of the nozzle supplied with the MPO-IQ boiler is the result of extensive testing to obtain the best flame shape and efficient combustion. Other brands of the same spray angle and spray pattern may be used but may not perform at the expected level of CO₂ and smoke. Nozzles are delicate and should be protected from dirt and abuse. Nozzles are massproduced and can vary from sample to sample. For all of those reasons a spare nozzle is a desirable item for a serviceman to have.
- 2. FLAME SHAPE Looking into the combustion chamber through the observation port, the flame should appear straight with no sparklers rolling up toward the crown of the chamber. If the flame drags to the right or left, sends sparklers upward or makes wet spots on the chamber walls, the nozzle should be replaced. If the condition persists look for fuel leaks, air leaks, water or dirt in the fuel as described above.
- 3. FUEL LEAKS—Any fuel leak between the pump and the nozzle will be detrimental to good combustion results. Look for wet surfaces in the air tube, under the ignitor, and around the air inlet. Any such leaks should be repaired as they may cause erratic burning of the fuel and in the extreme case may become a fire hazard.
- 4. AIR LEAKS Any such leaks should be repaired, as they may cause erratic burning of the fuel and in extreme cases may become a fire hazard.
- 5. GASKET LEAKS If 11.5 to 12.5% CO₂ with a #1 smoke cannot be obtained in the breeching, look for air leaks around the burner mounting gasket, observation door, and canopy gasket. Such air leaks will cause a lower CO₂ reading in the breeching. The smaller the firing rate the greater effect an air leak can have on CO₂ readings.
- 6. DIRT A fuel filter is a good investment. Accidental accumulation of dirt in the fuel system can clog the nozzle or nozzle strainer and produce a poor spray pattern from the nozzle. The smaller the firing rate, the smaller the slots become in the nozzle and the more prone to plugging it becomes with the same amount of dirt.
- 7. WATER Water in the fuel in large amounts will stall the fuel pump. Water in the fuel in smaller amounts will cause excessive wear on the pump, but more importantly water doesn't burn. It chills the flame and causes smoke and unburned fuel to pass out of the combustion chamber and clog the flueways of the boiler.

- 8. COLD OIL If the oil temperature approaching the fuel pump is 40°F or lower, poor combustion or delayed ignition may result. Cold oil is harder to atomize at the nozzle. Thus, the spray droplets get larger and the flame shape gets longer. An outside fuel tank that is above grade or has fuel lines in a shallow bury is a good candidate for cold oil. The best solution is to locate the tank near the boiler in the basement utility room or bury the tank and lines deep enough to keep the oil above 40°F. Check environmental issues with local authorities having jurisdiction.
- HIGH ALTITUDE INSTALLATIONS Air openings must be increased at higher altitudes. Use instruments and set for 11.5 to 12.5% CO₂.
- 10. START-UP NOISE Late ignition is the cause of start-up noises. If it occurs recheck for electrode settings, flame shape, air or water in the fuel lines.
- 11. SHUT DOWN NOISE If the flame runs out of air before it runs out of fuel, an after burn with noise may occur. That may be the result of a faulty cut-off valve in the fuel pump, or it may be air trapped in the nozzle line. It may take several firing cycles for that air to be fully vented through the nozzle. Water in the fuel or poor flame shape can also cause shut down noises.

NOTICE: CHECK TEST PROCEDURE. A very good test for isolating fuel side problems is to disconnect the fuel system and with a 24 in. length of tubing, fire out of an auxiliary five gallon pail of clean, fresh, warm #2 oil from another source. If the burner runs successfully when drawing out of the auxiliary pail then the problem is isolated to the fuel or fuel lines being used on the jobsite.

- B. OIL PRIMARY CONTROL (Oil Primary)
 - 1. Burner (Oil Primary) will not come on.
 - a. No power to Oil Primary.
 - b. Oil Primary is in lockout or restricted mode. Press reset button for one (1) second to exit lockout. If control has recycled three times within the same call for heat, it will enter into restricted mode. To reset from restricted mode, refer to Section 8, Paragraph J, for details.
 - c. CAD cell seeing light.
 - d. CAD assembly defective.
 - e. Control motor relay is stuck closed (see note below).
 - 2. Burner (control) will light, then shut down after a short time, then restart after one (1) minute.
 - a. CAD cell is defective.
 - b. Air leaking into oil line causing flame out.

- c. Defective nozzle causing flame to be erratic.
- d. Excessive airflow or draft causing flame to leave burner head.
- e. Excessive back pressure causing flame to be erratic.
- 3. Control locks out after Trial For Ignition (TFI).
 - a. No oil to burner.
 - b. Shorted electrodes.
 - c. Nozzle clogged.
 - d. Airflow too high.
 - e. Ignitor module defective.
 - f. CAD cell defective.
 - g. Oil valve stuck open or closed.

Note: The Safety Monitoring Circuit (SMC) is designed to provide lockout in the event of a stuck or welded motor relay.

C. IQ OIL BOILER CONTROL

When a problem occurs with the boiler operation, the IQ Control System easily provides specific, valuable information to help resolve the issue quickly. The display on the Boiler Control should be the first place to check, see Figure 12-1.

1. Error Code "Error IS NOT displayed on the Boiler Control: This is one of two conditions that occur when a problem arises. In this circumstance,

Operating Mode Parameters

the following table can be used to determine the problem and possible causes.

NOTICE: If flame is not established within 15 seconds of oil valve actuation (known as Trial For Ignition [TFI]) lockout will occur. Lockout is indicated by a red LED solid-on located on the oil primary control.

Hard Lockout will occur if the Oil Primary Control locks-out three (3) times during a call for heat. This is indicated by red light reset button solid-on.

D. BEFORE TROUBLESHOOTING

The following pages contain trouble shooting tables for use in diagnosing control problems. When using these tables the following should be kept in mind:

- 1. This information is only meant to be used by a professional heating technician as an aid in diagnosing boiler problems.
- 2. Where applicable, follow all precautions outlined in Section 9, System Start-Up.
- 3. In general, these tables assume that there are no loose or miswired electrical connections. Before using these tables inspect all electrical connections on the boiler to make sure that they are tight. Also, check the wiring on the boiler against the wiring diagram in Figures 6-1, 6-2 and 6-3. Ensure that incoming 120 VAC power polarity is correct and that the boiler is properly grounded.

5EA Status (see Status Numbers) **Boiler Temperature** Operating Setpoint (Outdoor Reset) High Limit Setpoint HdF High Limit Differential Heat Request Status **DHW Heat Request Status** EAG Cad Cell Resistance (ohms) าปก Run Time Hours EYE Boiler Cycles Error (see Error Numbers) ErP External Device Error (see Error Numbers)

Press "I" key on the control to change from one parameter to the next. Each setting will alternate between display code (for example 5LA) and value.

Figure 12-1: Boiler Control **User Interface**

Possible 5th (status) Values:

5£A Value	Description
1	Standby
4	Pre-purge
6	Trial for Ignition
7	Carryover
8	Running
9	Post-Purge
10	Retry/Recycle Display
14	Hard Lockout
15	Waiting for Limit to Close
16	Flame Present Out of Sequence
רו	Self Test

Possible Err (boiler control error) Values:

Err Value	Description
1	Temperature Sensor Fault
2	Communications Fault
3	Internal Hardware Fault
4	Burner Output (B1) Fault
5	Line Voltage Fault (< 80 VAC)
6	Fuse Missing
7	User Setting Lost, (reset to factory defaults)
8	Manual Reset Lockout (resetable)

103859-16 - 8/24 57

- 4. A defective control or component is generally the least likely cause. Before replacing a component, try to rule out all other possible causes.
- 5. When checking voltage across wiring harness pins be careful not to insert the meter probes into the pins. Doing so may damage the pin, resulting in a loose connection when the harness is reconnected.

Possible *E* ← P (External Error) Values:

ErP Value	Description
4	Warning, Cad Cell Resistance High (Service Required)
5	No Ignition, Check Cad Cell
9	Warning, Flame Proven, Late in Trial
10	No Ignition, Check Ignition Transformer
18	Internal Error, Electronics Failure
20	No Ignition
51	No Ignition, After Flame Loss During Run
55	Flame Lost During Run Three Times In A Row
23	Flame Out of Sequence, During Pre-Purge
24	Flame Out of Sequence, During Post-Purge
25	Oil Primary Lockout, Manual Reset Required

Possible ErP (External Error) Values (continued):

ErP Value	Description	
34	Cad Ohms Permanently Low (Flame Out of Sequence)	
35	Duplicate Zone	
58	AC Line Frequency Error	
59	AC Line Voltage Error	
84	Low Water Event	
89	Communication Lost	
91	Communication Error	
1 19	Sensor Failure	
140	Low Probe Signal	
14 1	Manual Reset Lockout	

E. USE BOILER CONTROL DISPLAY Err AND ErP NUMBERS TO DIRECT TROUBLESHOOTING

If the Boiler Control detects an error it will flash "Err" (boiler control error) or "ErP" (external error) followed by a number. Use this text and number to identify the boiler problem and corrective action in the table below. If there is no error display proceed to Paragraph E:

Table 12-2: Boiler Control Error Numbers

Display	Status	Recommended Corrective Actions
Err 1	Temperature Sensor Fault	Temperature sensor failure, wire harness loose or shorted connection or control hardware failure: - Check sensor is securely attached to boiler control - Check that sensor wire is not damaged - If secure and in good condition, replace sensor - If problem persists, replace control
Err 2	Communication Fault	Enviracom terminal is shorted to ground or line voltage. - Check wiring to EnviraCOM terminals 1,2 and 3. Wiring to external EnviraCom device is incorrect.
Err 3	Internal Hardware Fault	Error detected with AC power supply frequency or boiler control failure. Cycle power to the control. Replace control if problem persists.
Err 4	Burner Output (B1) Fault	B1 output sensed powered during safety output relay check sequence or un-powered during running, or powered in idle in combination with water temperature above 264°F limit. Cycle power to the control. Replace control if problem persists.
Err 5	Line Voltage Fault (< 80 VAC)	AC voltage out of specification high or low; check L1, L2, 110 VAC.
Err 6	Fuse missing	Internal fuse is blown or missing. The fuse protects the Aquastat from miss wiring the L1 and L2 on Oil Primary. When the Oil Primary is correctly wired the fuse is useless and not detected. If Primary is wired incorrectly the fuse is blown out and Aquastat report error 6. EnviraCOM message is sent when the wiring is fixed and the error disappears to indicate the end of the error state. Check wiring and replace fuse.
Err 7	User settings lost, (reset to factory defaults)	Warning : Generated if user adjustments are lost and the device uses factory default values. Error is cleared by entering and exiting the Adjustment mode. Replace control if problem persists.
Err B	Manual Reset Lockout (resettable)	Set if Err 4 was invoked four times in a row. Check wiring and clear Lockout by pressing all three user keys for 30 seconds.

E. <u>USE BOILER CONTROL DISPLAY Err AND ErP NUMBERS TO DIRECT TROUBLESHOOTING (continued)</u>

Table 12-3: External Device (Oil Primary, Option Card, etc.) Error Numbers

Display	Status	Recommended Corrective Actions
	Warring C. J.C. II	The cad cell resistance is higher than normal while running, the system is in need of a tune up.
ErP 4	Warning, Cad Cell Resistance High (service required)	 Check for proper alignment of the cad cell and clean the eye if necessary. Check if the pump is generating adequate pressure. Check burner adjustments (refer to burner manufacturers instructions). Check for excessive soot build up in the burner and flue. Check for flue blockage.
ErP 5	No Ignition, Check Cad Cell	The cad cell detected some amount of light during the ignition trial, but not enough to enter run mode. - Check the cad cell positioning and clean the eye. - Set the display to show the cad cell resistance. - Shield the cad cell from light. If the display shows is less than 20,000 ohms, unplug the cad cell, if the display does not read 999999 ohms, replace control, if it does read 999999 ohms, replace cad cell. - Expose the cad cell to ambient light (generally enough light to read by is adequate) If the display shows more than 2,000 ohms, short the cad cell terminals, if the display shows more than 5 ohms, replace control, if less than 5 ohms, replace cad cell. If the burner still does not light, proceed to "No Ignition", ErP 20 corrective action.
ErP 9	No Ignition, Check Cad Cell	The burner lit very late during the trial for ignition and is susceptible to not lighting. - Check cad cell for proper alignment and clean if necessary. - Check burner adjustments (refer to burner manufacturers instructions) - Check electrodes and spring contacts (if equipped) and adjust per manufacturers recommendations. - Check if the pump is generating adequate pressure. - Check the fuel supply lines and filter for obstructions.
ErP 10	No Ignition, Check Ignition Transformer	The burner was not lit and spark was not detected. Check the electrodes, spring contacts (or high voltage wires), and ignition transformer for proper operation. If spark ignition is functioning acceptably, proceed to "No Ignition", ErP 20 corrective action.
ErP 18	Internal Error, Electronics Failure	The Erp 18 display may indicate any one of the following: Check Oil Primary and Option Panel Displays: - If Option Panel display shows "Err 3", IQ Option Card Communication Error: the ErP IB error is caused by the option card. Replace defective card if error persists - If The Oil Primary is locked out with "Internal Error" replace control if the error persists.
ErP 20	No Ignition	 Check that fuel tank is not empty. Check that the manual shut off valve is open. Check that the burner motor is spinning and the pump is generating adequate pressure. Check the condition of the nozzle and replace if necessary. If a valve is present, check for proper operation. Check burner adjustments (refer to burner manufacturers instructions)
ErP 21	No Ignition, After Flame Loss During Run	 Check for excessive airflow or draft causing flame to leave burner head. Check for back pressure causing flame to be erratic. Re-ignition Failure, Flame was lost and could not be relit.
ErP 22	Flame Lost During Run Three Times In A Row	Flame was lost more than the allowed number of times. The burner lights, but does not remain lit. - Check that the fuel tank is not empty. - Check the condition of the nozzle and replace, if necessary. - Check the fuel supply lines (and filter) for obstructions or air - Use the pump priming feature to purge the system of air - Check the burner motor is spinning and the pump is generating adequate pressure. If present, check operation of the oil valve. If the problem persists, proceed to the "Cad Cell, High During Run", E-P 4 corrective action.

E. <u>USE BOILER CONTROL DISPLAY Err AND Erp NUMBERS TO DIRECT TROUBLESHOOTING (continued)</u>

Table 12-3: External Device (Oil Primary, Option Card, etc.) Error Numbers (continued)

Display	Status	Recommended Corrective Actions
ErP 23	Flame Out of Sequence, During Pre-Purge	Flame was proven during the valve on delay period. Check the oil valve for proper operation. If the system does not have an oil valve, set the valve on delay to 0.
ErP 24	Flame Out of Sequence, During Post-Purge	Flame remained lit during the burner off delay. Check the oil valve for proper operation. If the system does not have an oil valve, set the burner off delay to 0.
ErP 25	Manual Reset Required	Check Oil Primary and Option Panel Displays: - If Option Panel display shows "DL-", Open Limit: the display will indicate the card that has a manual reset lockout. Follow instructions included with card to reset the lockout. - If The Oil Primary is locked out refer to E-P 2D for additional information.
ErP 34	CAD Ohms Permanently Low (flame out of sequence)	The cad cell is permanently in a low resistance state. It should typically read much higher than 20,000 ohms when no flame is present. - Set the display to display cad cell resistance. - Shield the cad cell from light If the display shows less than 20,000 ohms, unplug the cad cell, If display does not read 999999 ohms, replace control, If it does read 999999 ohms, replace cad cell.
ErP 53	Outdoor Air Reset Option Card, Sensor Failure	Temperature sensor or interface failure (open or short connection or increased connection resistance) or control hardware failure.
ErP 58	AC Line Frequency Error	Check power supply.
ErP 59	AC Line Voltage Error	Supply voltage is low to the control. Measure the voltage across screw terminals "2" and "3" If it's greater than 22 VAC and the error does not clear, replace control. If it's less than 22 VAC, review appliance wiring.
ErP 84	LWCO Option Card, Low Water Event	Low water level Limit has caused the boiler to shutdown. Make sure that the water level has reached the probe. Limit will re-close automatically after water level is restored.
ErP 89	Outdoor Air Reset Option Card, Communications Error	Loose wire between the Option Panel and Boiler Control or control failure.
ErP 91	Communication Error	Communications error has been detected. Remove all devices from the Enviracom connections, 3-pin plug and screw terminals "1-2-3". If the error does not clear within one minute, measure the voltage on terminals "2" and "3". If the voltage across terminals "2" and "3" is between 20 VAC and 30 VAC, replace control. If it is outside of that range, review boiler wiring. There should be approximately 24 VAC across "2" and "3".
ErP 119	Aquastat Option Card, Sensor Failure	Temperature sensor or interface failure (open or short connection or increased connection resistance, dual sensor mismatch) or control hardware failure.
E-P 140	LWCO Option Card, Low Probe Signal	Warning , level monitoring signal is low. The probe may be dirty. Fluxes or oils used during the construction of the boiler or installation of system piping can coat the probe, preventing signals from being received by the LWCO Option Card. Add a cleaning solution, (such as water and tri-sodium phosphate or consult the boiler manufacturer), to the system. Heat and circulate this solution for at least one hour before draining and completely flushing the system with clean water. Remove the probe and thoroughly wipe it with a clean rag. Refill the system and test for proper operation.
ErP 141	LWCO Option Card, Manual Reset Lockout A manual reset, low water limit has caused the boiler to shutdown. Make sure that the water level has reached the probe. Limit will NOT re-close automatically after water level is restored. To reset the control follow the LWCO Option Card Reset Pushbutton procedure.	

F. USE BOILER CONTROL DISPLAY 518 (STATUS) NUMBER TO GUIDE TROUBLESHOOTING

The Boiler Control will flash "5LA" followed by a number. Use this number to identify the boiler problem in the table below:

1. Burner and Circulator Off

Display / Status	Recommended Corrective Action	
	The boiler has not detected a call for heat ($h_F = _DFF$ and $dh = _DFF$).	
	Ensure there is power to the boiler control.	
Standby Standby Burner off Circulator off	Check the thermostat: - When a thermostat call for heat is detected boiler control display "hr" will show "pn" - Make sure thermostat is calling for heat and contacts (including appropriate zone controls) are closed. Check for loose connection.	
	Check the DHW demand: - When a domestic call for heat is detected boiler control display "dh" will show "on" - Make sure the DHW aquastat contact is closed. Check for loose connection.	

2. Circulator is On, But Burner is Off

Display / Status	Recommended Corrective Action
	The boiler is warm and circulator is providing residual boiler heat to building:
SER I Circulator Pre-purge Burner off Circulator on	Check boiler temperature - The boiler will not start until boiler water temperature is less than the Setpoint (5P) minus differential (dF) - If boiler water temperature is higher than Start Temperature (5L_, default = 140 F) and the Circulator Pre-purge (PP_, default = 2 minutes) time has not expired, boiler start will be delayed until water temperature drops or time expires. To permit the boiler to start sooner increase Start Temperature parameter. Refer to Operation Section for additional information.

3. Burner is On, But Circulator is Off

Display / Status	Recommended Corrective Action	
5上月 日 Burner on Circulator off	Domestic Hot Water (DHW) Priority Forcing Circulator Off - When there is a DHW heat request wired to the boiler control's ZR terminal the System Circulator will be "forced off" for the duration of the DHW heat request. When the DHW heat request ends the System Circulator "force off" is removed, the circulator can respond normally. When the Priority Time, (PŁ_) Parameter is set to "pFF" the System Circulator is not "forced off" for a DHW call for heat. - When there is DHW heat request and an Outdoor Air Reset IQ Card is installed the System Circulator will be forced off for the duration of the Reset Card's Priority Time (PŁ_) parameter. Check Priority Time (PŁ_) parameter using the Outdoor Air Reset IQ Option Card Adjustment Mode (see Reset Card Adjustment Mode Instructions). Wiring / Circulator Issue: - Check wiring for loose connection, miswiring - Check circulator	

4. Circulator is On, But Oil Primary is in Standby

Display / Status	Recommended Corrective Action
5ER 15 Limit Open	Heat Request occurs and start of operating sequence is halted due to an open limit. Open limits may include Auxiliary High Limit or Low Water Cut-off Cards (when installed). If Boiler Control shows "5£# 15" proceed to Paragraph F.

103859-16 - 8/24

F. <u>USE BOILER CONTROL DISPLAY 5ŁR (STATUS) NUMBER TO GUIDE TROUBLESHOOTING (continued)</u>

5. Burner will not come on

Display / Status	Recommended Corrective Action
	When a hard lockout occurs the burner shuts down and will not restart until the Oil Primary's manual reset button is pressed. The Oil Primary will enter the Hard Lockout mode when the burner fails to light, loses flame during run three times or senses flame during pre-purge or post purge. The following is a summary of corrective actions:
5ER 14 Hard Lockout Also indicated by flashing green light on R7184	 No fuel to burner Check that the oil tank is not empty. Check that the manual shut off valve is open. Check fuel lines (and filter) are free of obstructions. Check fuel lines are fully purged of air. Use the pump priming feature to purge the system of air Check that the burner motor is spinning and the pump is generating adequate pressure. Check operation of fuel valve.
Oil Primary	Nozzle Clogged Check the condition of the nozzle and replace if necessary.
or "Hard Lockout"	No Spark Check the electrodes, spring contacts and high voltage wires. Check ignition transformer for proper operation
message on R7284 Oil Primary	4. Air Flow Too High or Too Low - Check for excessive airflow or draft causing flame to leave burner head. - Check for back pressure causing flame to be erratic - Check for excessive soot build up in the burner and flue - Check burner adjustments (refer to burner manufacturers instructions)
	 5. CAD Cell Defective - Check CAD cell for proper alignment and clean if necessary - Check CAD cell operation, refer to Trouble Shooting section D's ErP 5 for procedure.

6. Burner will light, then shut down after a short time, then restart

Display / Status	Recommended Corrective Action
5LA ID Recycle / Retry	The burner loses flame during running mode (5£R code "8"). After a recycle delay the oil primary will attempt to light the burner again. If the burner loses flame during running mode for three times in a row a Hard Lockout, State 14 will result.
Delay	Refer to Recommended Corrective Actions listed on previous page for E-P 22.

7. Flame Out of Sequence

Display / Status	Recommended Corrective Action
5ER 16 Flame Out of Sequence	Flame was detected during pre-purge (valve on delay) or post purge (motor off delay). Check the following: - Check the oil valve for proper operation - Check the CAD cell, refer to trouble shooting section D's ErP 34 for additional information.

G. USE OPTION PANEL DISPLAY TO DIRECT TROUBLESHOOTING

If Boiler Control Shows Status Code "5ŁA 15": The Boiler Control is "Waiting for Limit to Close and Option Panel display (display to right) will show one of the following status codes:

	Option Panel Display Shows "Err"							
	Display	Status	Boiler / Control Action(s)					
Err	1	Low Input Voltage	AC voltage is too low					
Err	2 - card #	Option Card Type Change without Re-Learn	Whenever a new Option Card is <u>first</u> installed into the Option Panel, the Option Panel automatically "Learns" the card. This means it detects the specific card and lists it as a card number (£ !_ £ £ = \$\sigma \cap £ \cap \cap \cap \cap \cap \cap \cap \cap					
Err	∃ - card #	Option Card Communications Error	The Option Card is not installed properly or has an internal fault. Remove the card and check for bent Option Panel card interface pins. Straighten bent or misaligned pins or choose another card slot and reinstall card. If problem persists, replace card.					
Err	Ч - card #	Option Card Hardware Interface Error	The Option Card is not installed properly, there is a option card or Option Panel fault. Remove the card and check for bent Option Panel card interface pins. Straighten bent or misaligned pins or choose another card slot and reinstall card. If problem persists, replace card.					
Err	5	Limit Output OFF in ON State	Check limit string wiring, replace the Option Panel.					
Err	6	Incorrect Wiring	Check boiler wiring.					
Err	٦	Internal Option Panel Error	Replace the Option Panel.					
Err	8	Limit Output ON in OFF State	Check limit string wiring, replace the Option Panel.					
Err	9	Hard Lockout Due to Repeated Err B	Check limit string wiring, replace the Option Panel.					

If Option Panel Display Shows "DL": The DL- "card number" indicates the card slot causing the Open Limit. For example, "DL-L" means open limit in the card located in card slot 1. To determine the cause of the open limit the user must switch the display on the Option Panel to show the view mode of the Option Card installed in Slot 1.

For example, if, while the boiler has a Heat Request, and the Aquastat Option Card installed in Slot 1 has a sensor failure the Option Panel displays <code>BL-EI</code> (Open Limit Card Slot 1). To investigate the status of option card <code>EI</code>:

- 1. Press the "I" key on the Option Panel. The display will go from "BL-EI" to EI.
- 2. When the display shows [1], press either the Up û or Down ↓ keys to switch the display to show the view mode of the Aquastat Limit Control Option Card inserted in Slot 1. The display will now read Err 119, Sensor Failure.
- **3.** Check the sensor connections and when required replace the sensor.
- **4.** When the sensor failure is corrected the Option Panel will return to the "D.E.P" display and the control start sequence will continue.


For additional information refer to the instruction manual supplied with the Option Card.

If Option Panel Display Shows "D.C.P": The Option Panel is in normal run or operating mode, the Option Panel display will show "O.C.P" (Option Card Panel) along with a floating decimal point that flashes on and off (the "heartbeat" flash indicating the panel is functioning properly and there are no open limits or errors). The Option Panel or the Option Card installed in the Option Panel are not causing the open limit.

103859-16 - 8/24


13 Service Parts

All MPO-IQ[™] Boiler Service Parts may be obtained through your local U.S. Boiler Company Wholesale distributor. Should you require assistance in locating a U.S. Boiler Company Distributor in your area, or have questions regarding the availability of U.S. Boiler Company products or service parts, please contact U.S. Boiler Company Customer Service at (717) 481-8400 or Fax (717) 481-8408.

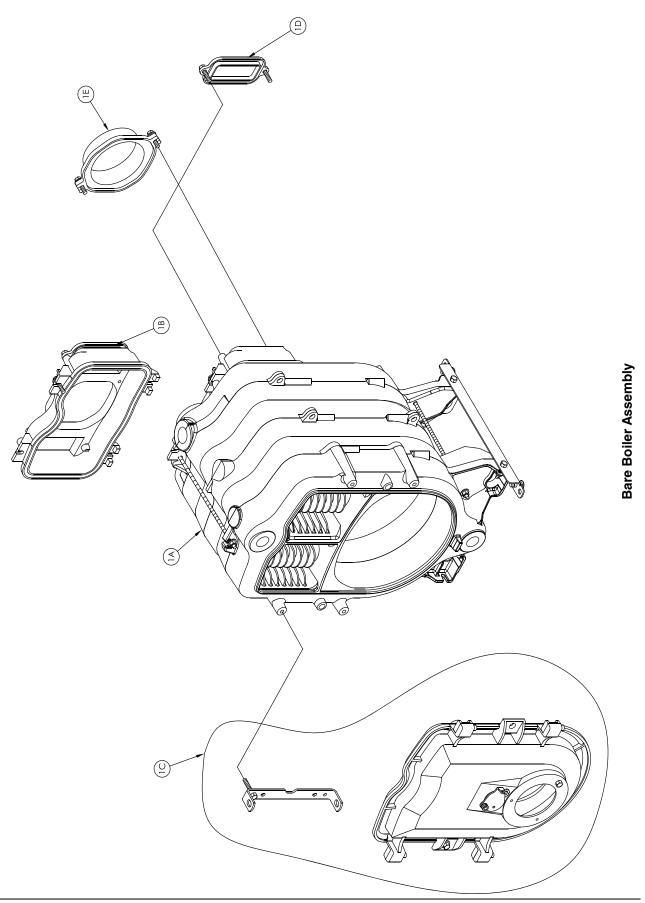

MPO-IQ Bare Boiler Assembly


Item No.	Description	Part Number	MPO-IQ84B	MPO-IQ115B	MPO-IQ147B	MPO-	Q189B	MPO-IQ231B
	Block	109554-02	1	1				
1A	Assembly Includes: Block	109554-03			1			
"	Assembly and	109554-04				1	1	
	Smoke Box	109554-05						1
1B	Smoke Box Includes: Sealant, and Hardware	109555-01	1	1	1	1	1	1
1C	Burner Swing Door Assembly	109556-01	1	1	1	1	1	
10	Includes: Hinge and Hardware	109557-01						1
1D	Cleanout Cover Assembly Includes: Hardware	109563-01	2	2	2	2	2	2
	Flue Collar	109567-01	1	1				
1E	Includes:	109568-01			1	1	1	
	Hardware	109569-01						1
Not	Combustion	109738-01	1	1	1	1	1	
Shown	Chamber Gasket Kit	109738-02						1

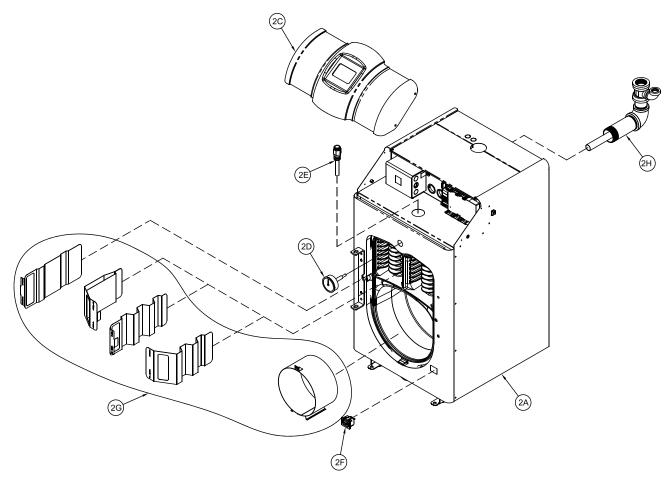

MPO-IQ Water Boilers - Trim

MPO-IQ Water Trim


Item No	Description		Part Number	MPO-IQ84B	MPO-IQ115B	MPO-IQ147B	MPO-IQ189B	MPO-IQ231B
	Complete Jacket Carton Includes: Labels and Hardware		103069-02	1	1			
2A			103069-03			1		
ZA			103069-04				1	
			103069-05					1
			109553-02	1	1			
OD.	Mran Araund	Inculation	109553-03			1		
2B	Wrap Around	IIISUIAUOII	109553-04				1	
			109553-05					1
2C	Plastic Cover		109643-01	1	1	1	1	1
2D	Temperature &	& Pressure Gauge	105894-01	1	1	1	1	1
2E	Immersion W	ell	109644-01	1	1	1	1	1
2F	Burner Recept	tacle	109570-01	1	1	1	1	1
	Baffle Kit		109991-01	1				
2G			111779-01		1			
			109558-01			1	1	1
2H	Injector Kit		102827-01	1	1	1	1	1
	Pressure Relief Valve, Conbraco, ³ / ₄ in. FIP x ³ / ₄ in. FIP	#10-408-05 30PSI						
		#10-303-07 40 PSI		1	1	1	1	1
		#10-303-10 50 PSI						
	5 in. Draft Regulator			1	1			
	6 in. Draft Reg	gulator				1	1	
Not	7 in. Draft Reg	gulator	Obtain					1
Shown	Drain Valve, 3,	/ ₄ in. NPT	Locally	1	1	1	1	1
	Circulator Fla	nge ¹ / ₂ in. NPT		2	2	2	2	2
	Circulator	Taco #194-1548		2	2	2	2	2
	Gasket	Grundfos				۷		۷
	Circulator	Taco 007e		1	1	1	1	1
	Circulator	Grundfos 15-55FC		I	1	1	1	1

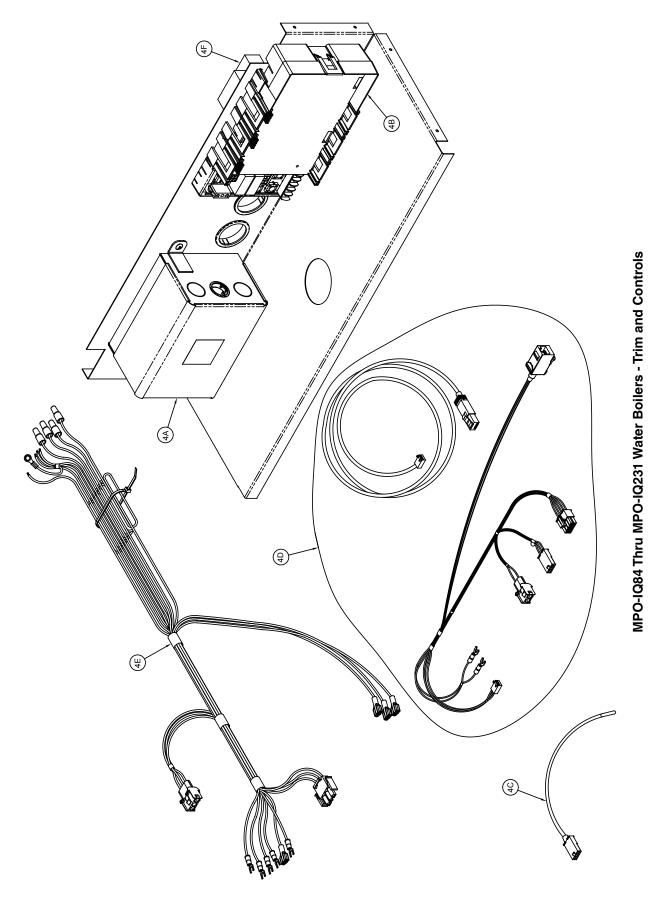

MPO-IQ Controls

Item No.	Description	Part Number	MPO-IQ84B	MPO-IQ115B	MPO-IQ147B	MPO-IQ189B	MPO-IQ231B
4A	Boiler Control	109646-01	1	1	1	1	1
4B	Option Control Panel	109647-01	1	1	1	1	1
4C	Limit Sensor	109645-01	1	1	1	1	1
4D	Low Voltage Harness/ ECOM Harness	109648-01	1	1	1	1	1
4E	Line Voltage Harness	109649-01	1	1	1	1	1
4F	Transformer	106034-01	1	1	1	1	1

Item No.	Description	Part No.	MPO-IQ147B	MPO-IQ189B	MPO-IQ231B					
5. DIREC	5. DIRECT VENT KITS AND PARTS									
5A	Direct Vent Conversion Kit , 5-6	102130-02	1	1						
JA	Direct Vent Conversion Kit, 6-7	102130-03			1					
5B	Appliance Adapter, FDVS, 5-6	100234-02	1	1						
)D	Appliance Adapter, FDVS, 6-7	100234-03			1					
5C	6 in. Appliance Clamp, FDVS-6, Half	100235-02	2	2						
30	7 in. Appliance Clamp, FDVS-7, Half	100235-03			2					
5D	Cover Sleeve Assembly, FDVS-5	100236-02	2	2						
JD	Cover Sleeve Assembly, FDVS-6	100236-03			2					
5E	Cover Ring Assembly, FDVS-5	100237-02	2	2						
JE JE	Cover Ring Assembly, FDVS-6	100237-03			2					
5F	Inner Pipe Clamp, FDVS-5, Half	100238-02	4	4						
ЭГ	Inner Pipe Clamp, FDVS-6, Half	100238-03			4					
6. FLEX	OIL VENT PIPE	,								
	5 in. Dia. x 10 ft. FOVP-510	100212-02	1	1						
	5 in. Dia. x 20 ft. FOVP-520	100214-02	I							
	6 in. Dia. x 10 ft. FOVP-610	100212-03			1					
	6 in. Dia. x 20 ft. FOVP-620	100214-03								

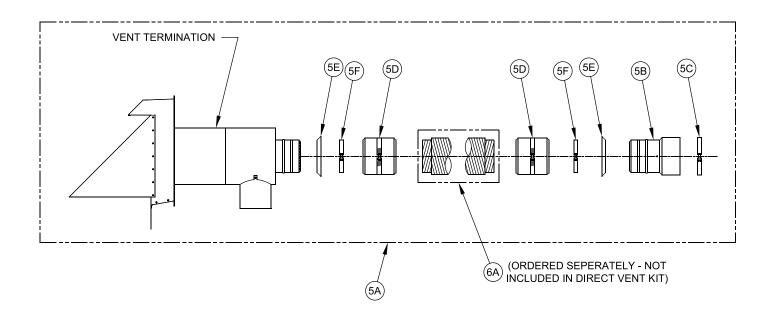

Item No	Description		Part Number	MPO-IQ84B	MPO-IQ115B	MPO-IQ147B	MPO-IQ189B	MPO-IQ231B
			112202-01	1				
			112203-01		1			
		Natural Draft	112204-01			1		
			112205-01				1	
	Beckett		112206-01					1
			112207-01			1		
		Direct Vent	112208-01				1	
			112209-01					1
	Carlin		102276-01	1				·
		Natural Draft	102276-02		1			
Not			102276-03			1		
Shown			102276-04				1	
			102276-05					1
		Natural Draft	103143-01	1				
			103143-02		1			
	Riello		100831-01			1		
			101762-01				1	
			101763-01					1
		Beckett GeniSys 7565	011.	1	1	1	1	1
	Primary Control	Carlin	Obtain Locally	1	1	1	1	1
		Riello		1	1	1	1	1
	Burner Disconnect Harness		102115-01	1	1	1	1	1

13 Service Parts (continued)

RIELLO OIL BURNER PART NUMBERS FOR MPO-IQ SERIES BOILERS

Note: When ordering parts always give the serial and model numbers shown on the boiler and burner.

Refer to Models F3 & F5 Installation Manual, Riello 40 Series Residential Oil Burners (C6501010) or Model F10 Installation Manual, Riello 40 Series Residential Oil Burners (2902554) for an exploded view of the burner and a list of spare parts.

For replacement Riello oil burner parts, contact your wholesaler or the burner manufacturer:

Riello Corporation of America 35 Pond Park Road Hingham, Massachusetts 02043 Telephone: (617) 749-8292 Facsimile: (617) 740-2069 Toll Free: (outside Massachusetts)

(800) 992-7637

Riello Canada Inc. 2165 Meadowpine Blvd. Mississauga, Ontario L5N 6H6 Telephone: (905) 542-0303 Facsimile: (905) 542-1525 Toll Free: (800) 387-3898

CARLIN OIL BURNER PART NUMBERS FOR MPO-IQ SERIES BOILERS

Note: When ordering parts always give the serial and model numbers shown on the boiler and burner.

Refer to Installation and Operating Instructions for Packaged Heating/Burner Units, Carlin Elite EZ-LF and EZ-66 Oil Burners (Form CCT-569A) for an exploded view of the burner and a list of spare parts.

For replacement Carlin oil burner parts, contact your wholesaler or the burner manufacturer:

CCT, Carlin Combustion Technology, Inc. 126 Bailey Road North Haven, CT 06473 Telephone: (203) 680-9401

103859-16 - 8/24 73

14 Burner Specifications

Table 14-1: Beckett AFG Burner Specifications - Chimney Vent

Boiler Model	Burner Input (GPH)	Burner Model	Nozzle	Air Shutter (setting)	Air Band (setting)	Pump Pressure (PSI)	Head Type (setting)	Insertion Depth (Inch)	Approx. Shipped CO ₂ (%)	Baffle Location (pass)	Approx. Stack Temp. Increase Without Baffles °F (2)	Approx. Breech Pressure (" w.c.) (3)	Baffles IN Approx. Overfire Pressure (" w.c.) (3)	Baffles OUT Approx. Overfire Pressure (" w.c.) (3)
MPO-IQ84B	0.60	AFG	0.50 x 45W Delavan	8 (1)	0	180	L2	2	11.5	2 nd	52	0	+0.010	+0.005
MPO-IQ115B	0.80	AFG	0.60 x 45W Delavan	5	0	180	L2	2	11.5	2 nd & 3 rd	84	0	+0.040	+0.020
MPO-IQ147B	1.00	AFG	0.75 x 60B Delavan	9	0	180	L1	2	11.5	2 nd	65	0	+0.040	+0.020
MPO-IQ189B	1.30	AFG	1.00 X 60B Delavan	7	1	180	V1 (2)	2	11.5	2 nd	39	0	+0.040	+0.030
MPO-IQ231B	1.60	AFG	1.25 x 60B Hago	10	3	180	V1 (3)	2	11.5	2 nd	18	0	+0.050	+0.030

Notes

Table 14-2: RIELLO 40 Burner Specifications - Chimney Vent

Boiler Model	Burner Input (GPH)	Burner Model	Nozzle	Air Gate (setting)	Turbulator (setting)	Pump Pressure (PSI)	Combustion Head	Insertion Depth (Inch)	Approx. Shipped CO ₂ (%)	Baffle Location (pass)	Approx. Stack Temp. Increase Without Baffles °F (2)	Approx. Breech Pressure (" w.c.) (3)	Baffles IN Approx. Overfire Pressure (" w.c.) (3)	Baffles OUT Approx. Overfire Pressure (" w.c.) (3)
MPO-IQ84B	0.60	F3	.50 x 80°W Delavan	2.5	1.0	145	SBT 6"	2.25	11.5	2 nd	52	0	+0.010	+0.005
MPO-IQ115B	0.80	F3	.65 x 70°W Delavan	5.0	3.0	145	VSBT	2.25	11.5	2 nd & 3 rd	84	0	+0.040	+0.020
MPO-IQ147B	1.00	F5	0.85 x 60°B Delavan	2.7	1.0	145	LBT 10.0"	10	11.5	2 nd	65	0	+0.040	+0.020
MPO-IQ189B	1.30	F5	1.10 x 60°B Delavan	4.5	3.0	150	SBT 6"	3.5	11.5	2 nd	39	0	+0.040	+0.030
MP0-IQ231B	1.60	F5	1.35 x 60°B Delavan	3.5	4.0	145	VSBT	2.25	11.5	2 nd	18	0	+0.050	+0.030

Notes

 $^{^{(1)}}$ MPO-IQ84 at 0.60 GPH firing rate utilizes a low fire baffle.

⁽²⁾ The increased stack temperature with the baffles removed is an approximation, based on a constant supply temperature of 180°F and 11.5% CO₂. Actual field conditions may be different.

⁽³⁾ These values are minimum and could be as much as -.03 in. w.c., more without impacting performance. Pressures based on 11.5% CO₂. Example: MPO-IQ231B could have a breech pressure of -.03 in. w.c. and an overfire pressure of .020 in. w.c.

⁽⁴⁾ Single stage fuel pump is standard, two-stage fuel pump is optional. Burner manufacturer has preset single stage fuel pump to settings shown in table above. Two-stage fuel pump is factory set at 140 PSI and must be readjusted to settings shown above during burner start-up.

⁽²⁾ The increased stack temperature with the baffles removed is an approximation, based on a constant supply temperature of 180°F and 11.5% CO₂. Actual field conditions may be different.

⁽³⁾ These values are minimum and could be as much as -.03 in. w.c., more without impacting performance. Pressures based on 11.5% CO₂. Example: MPO-IQ231B could have a breech pressure of -.03 in. w.c. and an overfire pressure of .020 in. w.c.

⁽⁴⁾ Single stage fuel pump is standard, two-stage fuel pump is optional. Burner manufacturer has preset single stage fuel pump to settings shown in table above. Two-stage fuel pump is factory set at 140 PSI and must be readjusted to settings shown above during burner start-up.

14 Burner Specifications (continued)

Table 14-3: Carlin EZ Burner Specifications - Chimney Vent

Boiler Model	Burner Input (GPH)	Burner Model	Nozzle	Head Setting	Air Setting	Pump Pressure (PSI)	Air Tube Type	Insertion Depth (Inch)	Approx. Shipped CO ₂ (%)	Baffle Location (pass)	Approx. Stack Temp. Increase Without Baffles °F (2)	Approx. Breech Pressure (" w.c.) (3)	Baffles IN Approx. Overfire Pressure (" w.c.) (3)	Baffles OUT Approx. Overfire Pressure (" w.c.) (3)
MPO-IQ84B	0.60	EZ-LF	0.50 x 60AS Danfoss	1.0	30	150	12D	2-5/8	11.5	2 nd	52	0	+0.040	+0.020
MPO-IQ115B	0.80	EZ-LF	0.65 x 60A Delavan	0.75	65	150	12D	2-5/8	11.5	2 nd & 3 rd	84	0	+0.040	+0.020
MPO-IQ147B	1.00	EZ-66	0.85 x 45B Hago	2.0	40	150	Conical Wrap	2-5/8	11.5	2 nd	65	0	+0.040	+0.020
MPO-IQ189B	1.30	EZ-66	1.10 x 45B Delavan	3.5	50	150	Conical Wrap	2-5/8	11.5	2 nd	39	0	+0.040	+0.030
MPO-IQ231B	1.60	EZ-66	1.35 x 45B Delavan	5.5	60	150	Conical Wrap	2-5/8	11.5	2 nd	18	0	+0.050	+0.030

Notes

Table 14-4: Beckett NX Burner Specifications - Direct Vent

Boiler Model	Burner Input (GPH)	Head /Air Adjustment (setting)	Nozzle	Pump Pressure (PSI)	Approx. Shipped CO ₂ (%)	Baffle Location (pass)	Approx. Stack Temp. Increase Without Baffles °F (2)	Baffles IN Minimum Overfire Pressure (" w.c.) (3)	Baffles OUT Minimum Overfire Pressure (" w.c.) (3)	Baffles IN Minimum Breech Pressure (" w.c.) ⁽³⁾	Baffles OUT Minimum Breech Pressure (" w.c.) (3)
MPO-IQ147B	1.00	2.75	0.75 - 60°W Delavan	180	11.5	2 nd	75	+0.06	+0.045	+0.045	+0.03
MPO-IQ189B	1.30	1.00	1.00 - 45°B Hago	180	11.5	2 nd	70	+0.10	+0.05	+0.08	+0.04
MPO-IQ231B	1.60	2.25	1.25 - 45°B Hago	180	11.5	2 nd	23	+0.07	0	+0.06	+0.02

Notes

103859-16 - 8/24 75

⁽²⁾ The increased stack temperature with the baffles removed is an approximation, based on a constant supply temperature of 180°F and 11.5% CO₂. Actual field conditions may be different.

⁽³⁾ These values are minimum and could be as much as -.03 in. w.c., more without impacting performance. Pressures based on 11.5% CO₂. Example: MPO-IQ231B could have a breech pressure of -.03 in. w.c. and an overfire pressure of .020 in. w.c.

⁽⁴⁾ Single stage fuel pump is standard, two-stage fuel pump is optional. Burner manufacturer has preset single stage fuel pump to settings shown in table above. Two-stage fuel pump is factory set at 140 PSI and must be readjusted to settings shown above during burner start-up.

⁽²⁾ The increased stack temperature with the baffles removed is an approximation, based on a constant supply temperature of 180°F and 11.5% CO₂. Actual field values may be different.

⁽³⁾ These values are representative for max vent and air intake piping conditions @ 180°F supply water temperature and 11.5% CO₂. Actual field values may be different.

⁽⁴⁾ Single stage fuel pump is standard, two-stage fuel pump is optional. Burner manufacturer has preset single stage fuel pump to settings shown in table above. Two-stage fuel pump is factory set at 140 PSI and must be readjusted to settings shown above during burner start-up.

Appendix A Oil Burner IQ Control System

IQ Control System Overview

MPO-IQ Boiler uses a microprocessor based control system called the "IQ Control System". This "IQ Control System" consists of an IQ Oil Boiler Control in conjunction with an Oil Primary Control and an IQ Option Panel with optional "plug-in" IQ Option Cards. The IQ Control System fully integrates both factory and field installed components, simplifying installation and troubleshooting. IQ Control System is designed to efficiently operate the entire boiler system to save energy and installation and setup time, while ensuring adequate supply of heat and domestic hot water.

The IQ Option Panel works together with the IQ Oil Boiler Control to provide an easy and convenient means to "plug-in" an Auxiliary High Limit, Low Water Cut-off, and/or Outdoor Reset functions.

The Manual Reset Low Water Cutoff and High Limit IQ Option Cards are CSD-1 compliant, which simplifies installations in areas where CSD-1 is enforced. IQ Option Cards snap onto the IQ Option Panel supplied on all MPO-IQ boilers and feature Plug n' Play connections.

IQ Option Card Major Features

- Plug-'n-play connection to MPO-IQ Boilers, only wiring required is to field installed sensors
- Status and error codes displayed on built-in 3-digit display
- Error codes can be displayed on EnviraCOM-enabled programmable thermostat
- Built-in diagnostics
- U.S. Boiler Company factory engineered and tested as part of a complete system

IQ Oil Boiler Control: P/N 103851-01

The IQ Oil Boiler Control replaces the familiar Honeywell L7248 electronic Aquastat and contains several additional features. These unique features allow the IQ Oil Boiler Control to connect the boiler's control system together in a way that was not previously possible, greatly simplifying set-up and troubleshooting of the boiler.

- Boiler System Display well-known electronic aquastat 3-digit
 - LED display provides the following information:
 - <u>Boiler Status</u> Standby, pre-purge, post purge, trial for ignition, running, etc.,
 - <u>Diagnostics</u> CAD cell resistance, run time hours and cycle counts
 - <u>Error Monitoring</u> Including primary control and connected IQ Option Cards

(**Note**: Primary control information is only available when an EnviraCOM enabled primary is connected)

- Outdoor Air Reset Ready Operating Setpoint is automatically adjusted by outdoor air temperature and heat demand type when an Outdoor Air Reset IQ Option Card is connected. Also, Operating Setpoint is adjusted by thermostat "sleep" and "leave" modes when a setback EnviraCOM enabled thermostat is connected.
- Warm Start Ready boiler is started and circulator is stopped when the boiler is cold and an external low limit is connected.
- Smart Circulator Pre-purge Upon a call for heat the circulator is started and the boiler start is delayed.
 The boiler is started without delay if the boiler is cold or there is a DHW demand. Boiler cycling and resulting standby loses are reduced by adjusting the circulator pre-purge time.



- "Energy Banking" Pump Overrun Time The system circulator may be run after the call for heat has ended to "move" residual heat in the boiler to the system or indirect water heater.
- Second Configurable Pump Output In addition to the system pump output the control has a second pump output and associated input that may be configured for Domestic Hot Water or second zone demand and pump control. This second output eliminates the need for an external relay for DHW pump control or the need for a zone panel used for a two zone home.

Appendix A Oil Burner IQ Control System (continued)

IQ Option Panel: P/N 102291-01

The IQ Option Panel works together with the IQ Oil Boiler Control to provide an easy and convenient means to add factory-engineered auxiliary boiler control features. When installed into the IQ Option Panel, IQ Option Cards provide plug-'n-play high temperature limit, low water cut-off and outdoor reset controls. A separate 3-digit LED readout displays settings, status and diagnostic information for all installed IQ Option Cards making them simpler and functionally superior to stand alone auxiliary controls. IQ Option Cards are available for the following features:

- Outdoor Air Reset with Domestic Hot Water Demand
- Auxiliary High Temperature Limit (available in auto reset or manual reset versions)
- Low Water Cut-off (available in auto reset or manual reset versions)



Outdoor Reset IQ Option Card: P/N 105648-01

Installing the Outdoor Reset IQ Option Card is the simplest way to maximize the efficiency of any MPO-IQ Boiler. The Outdoor Reset IQ Option Card is a microprocessor-based control that regulates the water temperature of the heating system based on the outdoor temperature. By modulating the water temperature of the heating system, the MPO-IQ Boiler equipped with an Outdoor Reset IQ Option Card will deliver annual fuel savings up to 16%, while increasing home comfort. The Outdoor Reset IQ Option Card is simple to set up yet it includes a powerful list of features that can be customized for any job.



IQ Oil Boiler Control Operating Setpoint is normally set to the High Limit Setpoint. However, when an Outdoor Reset IQ Option Card is installed the Operating Setpoint may be reduced to the outdoor reset or Domestic Hot Water (DHW) Setpoint. When an Outdoor Reset IQ Option Card is added the following user defined setpoints are available:

- High Limit Setpoint The High Limit becomes the upper limit for the operating setpoint. The operating setpoint can not be set higher than this value. The High Limit is set to protect the boiler and hydronic system from excessive temperature.
- DHW Setpoint The Operating Setpoint is set to the DHW Setpoint when the Outdoor Reset IQ Option Card DHW input is energized. This setpoint is set equal to the Indirect Water Heater manufacturer's recommended water temperature.
- High Boiler Water Temperature The High Boiler Water Temperature (also known as the "Boiler Water Design Temperature") setpoint is set to the lowest boiler water temperature that will heat the home on the home's design day. This adjustment typically depends on the type and quantity radiation (heating element) installed in the home.

Kit Includes:

- Outdoor Reset IQ Option Card
- Outdoor temperature sensor
- Instructions

Major Features:

- Selectable DHWP
- Selectable/adjustable DHWP protection
- Selectable/adjustable boost feature
- Simple adjustment of reset curve

LWCO IQ Option Card (Auto Reset): P/N 102711-01 LWCO IQ Option Card (Manual Reset): P/N 102714-01

LWCO IQ Option Cards add a low water cut-off function to MPO-IQ Boilers. LWCO IQ Option Cards plug into the IQ Option Panel and connect to the system-mounted sensor with a single-wire connection. LWCO IQ Option Cards feature built-in diagnostics, probe signal strength display, and include a "Test" and "Reset" feature in compliance with UL 353 and CSA 22.2 for CSD-1 Compliance in US and Canada.

Kit Includes:

- LWCO IQ Option Card
- 3/4 in. NPT level sensor
- 36 in. wire sensor connector
- Instructions

Major Features:

- UL 353 approved
- Displays signal strength
- Warns when probe cleaning required



103859-16 - 8/24 77

Appendix A Oil Burner IQ Control System (continued)

Hi Limit IQ Option Card (Auto Reset): P/N 102717-01 Hi Limit IQ Option Card (Manual Reset): P/N 102720-01

High Limit IQ Option Cards add auxiliary temperature limit-rated controls to MPO-IQ Boilers. High Limit IQ Option Cards plug into the IQ Option Panel and connect to a system-mounted probe with a single Molex connection. High Limit IQ Option Cards feature an adjustable set point and differential, as well as built-in diagnostics. Manual Reset models are UL 353 for CSD-1 Compliance in US and Canada.



Kit Includes:

- High Limit IQ Option Card
- Limit-rated probe with 48 in. lead
- 1/2 in. well
- Probe retainer clip
- Instructions

Major Features:

- UL 353 approved
- Error code LED and display
- Temperature display
- Electronic adjustment of high limit and differential

EnviraCOM Thermostats:

Standard EnviraCOM thermostats provide "heat demand" to the IQ Oil Boiler Control and alerts the home owner of any boiler control faults.

Connected thermostats provide a red LED and display the IQ Oil Boiler Control, Oil Primary Control or IQ Option Card Error Codes. A home owner is alerted to a problem even before the water is cold. When an Outdoor Reset IQ Option Card is installed with a setback thermostat, "leave" or "sleep" modes are used to shifts the reset curve to save energy while the home is in a reduced room temperature mode.



Honeywell VisionPro IAQ Setback Thermostat (Honeywell P/N TH942lc1004)

Appendix A Oil Burner IQ Control System (continued)

SYSTEM PARTS LIST

Factory Mounted Components

Part Number	Item Description
103851-01	IQ Oil Boiler Control (2012) 120V, less well, Hi Limit 180°F (Default), Hi Limit Range (140° - 240°F), Hi Limit Differential 15°F (Default), Hi Limit Diff Range (10° - 30°F). Includes 12 in. Limit Rated Temperature Sensor, Honeywell P/N 5001464-001.
103195-01	Limit Rated Temperature Sensor, 12 in. length.
102291-01	IQ Option Panel with three slots "plug-in" option card slots, suitable for gas or oil fired boiler applications, accepts a variety of plug-in cards including limit rated cards.

Optional Components

Part Number	Item Description
105648-01	Outside Reset IQ Option Card Kit, Domestic Hot Water Priority, for use with IQ Option Panel, with Outside Air Temperature Sensor, Instructions, Unit Pack
104842-01	Outdoor Reset IQ Option Card, Domestic Hot Water Priority, for use with IQ Option Panel, less Sensor
102946-01	Outdoor Air Temperature Sensor, 12k ohm
102711-01	LWCO IQ Option Card kit, Hot Water LF Module, Automatic Reset, for use with IQ Option Panel, with Probe, 3/4 inch NPT, Instructions, Unit Pack
102714-01	LWCO IQ Option Card kit, Hot Water LF Module, Manual Reset, for use with IQ Option Panel, with Probe, 3/4 inch NPT, Instructions, Unit Pack
102305-01	LWCO Probe, ¾ inch NPT
102720-01	Aquastat IQ Option Card Kit, 130-220 Deg F, Manual Reset for use with IQ Option Panel, Temperature Sensor, Well, Sensor Clip, Instructions, Unit Pack
102717-01	Aquastat IQ Option Card Kit, 130-220 Deg F, 15 Deg F Adjustable Differential, Auto Reset, for use with IQ Option Panel, Temperature Sensor, Well, Sensor Clip, Instructions, Unit Pack
102292-01	Aquastat IQ Option Card, 130-220 Deg F, Manual Reset for use with IQ Option Panel, less well, Less Sensor
102293-01	Aquastat, IQ Option Card, 130-220 Deg F, 15 Deg F Adjustable Differential, Auto Reset, for use with IQ Option Panel, less Well, less Sensor
102295-01	Limit Rated Temperature Sensor, 36 inch length
102296-01	Limit Rated Temperature Sensor, 48 inch length

Additional Information List

Aquastat IQ Option Card Instruction Sheet - part number 103589-01 Outdoor Reset IQ Option Card Instruction Sheet - part number 105647-01 Low Water Cut-off IQ Option Card Instruction Sheet - part number 103591-01

103859-16 - 8/24

Appendix B Blocked Vent Safety Switch

A. INSTALLATION

- Interrupt power to boiler prior to beginning safety switch installation to prevent burner from starting while servicing.
- 2. Follow manufacturer's Installation Instructions provided with the blocked vent safety switch. Be sure to locate switch as close to boiler as possible.

B. WIRING

- 1. Interrupt electrical power to boiler prior to wiring the blocked vent safety switch.
- 2. Wire the blocked vent safety switch to the boiler as instructed in either Method A, B or C below, as appropriate.
- 3. Max Amp Load: 10 FLA

METHOD A:

Wire the blocked vent safety switch in series in the safety limit string (see Figure B-1).

METHOD B:

Wire the blocked vent safety switch in series in the burner circuit as shown in Figure B-2.

METHOD C:

Refer to the manufacture's Primary Control Instruction.

WARNING

Wiring the safety switch in the heat demand circuit when the boiler is equipped with a combination high/low limit relay control may allow noxious fumes into occupied space in the case of a blocked vent. Always wire the safety switch in the limit string when the boiler is equipped with a combination high/low limit relay control.

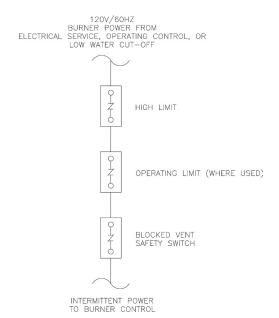


Figure B-1: Limit String Circuit Schematic

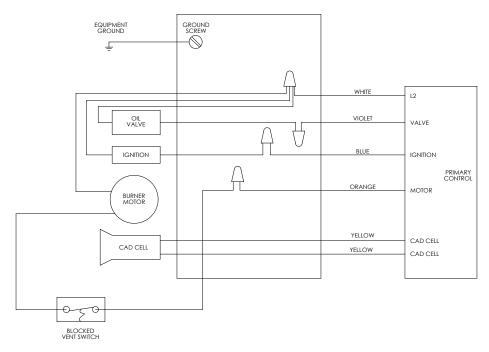


Figure B-2: Burner Limit Circuit Schematic

	SERVICE RECORD
DATE	SERVICE PERFORMED

103859-16 - 8/24

	SERVICE RECORD
DATE	SERVICE PERFORMED

	SERVICE RECORD
DATE	SERVICE PERFORMED

103859-16 - 8/24

U.S. Boiler Company, LLC P.O. Box 3020 Lancaster, PA 17604 1-888-432-8887 www.usboiler.net