




FIRESTOP SLEEVE WITH ADJUSTABLE CAP. HFP-P/Mx(B) Sleeve 7-1/4" THRU 8" TALL WITH ADJUSTABLE CAP. (Fig. 1)

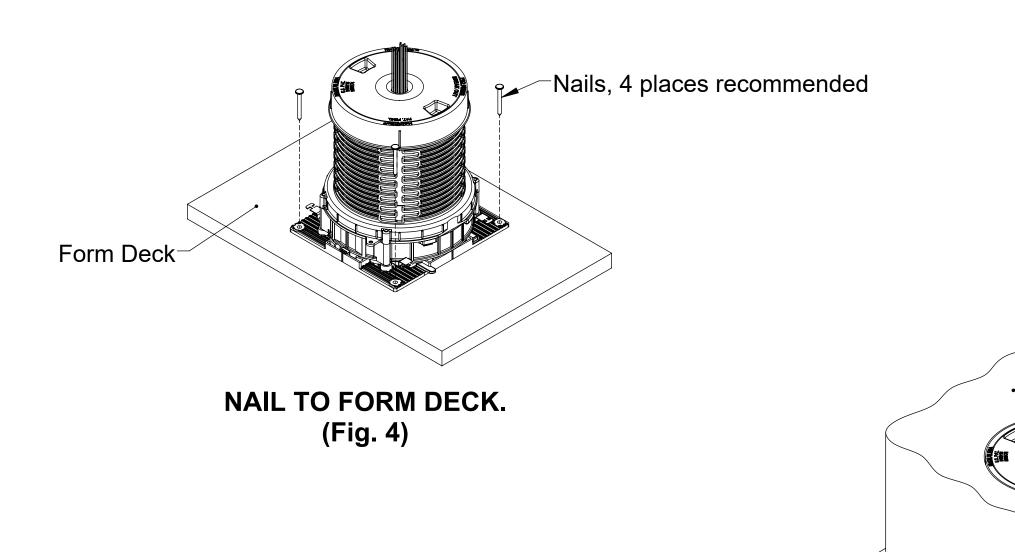


POUR IN CONCRETE. (Fig. 5)

Hydroflame PRO Series - HFP-P/Mx(B) Firestop sleeve with adjustable cap. See Hydroflame Pro - "Best Practices" document and UL's online certification directory (file R25101) for more details. Rev D, 01-29-2 ** W - Rated when penetrant is centered within sleeve.

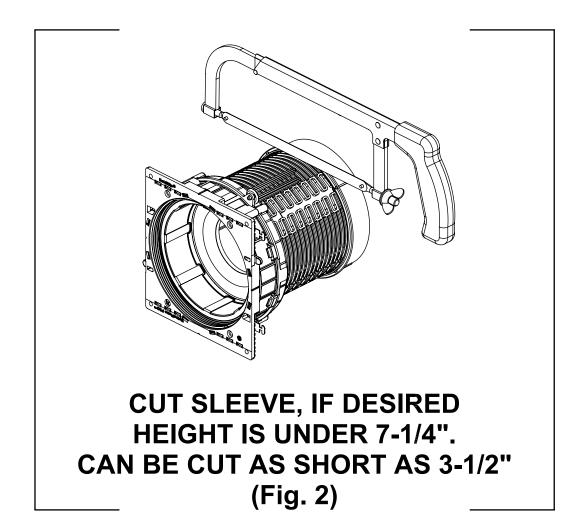

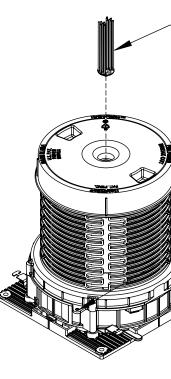

INSERT WHISKERS. (Fig. 3)

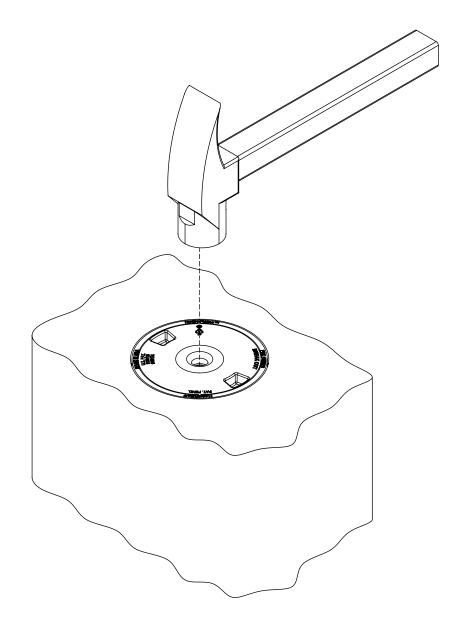


BREAK-OUT CAP WITH HAMMER. (Fig. 6)

-Pour concrete to top of Sleeve.

Push Locator Whiskers until locked in place. (Optional, screw can be used for stronger attachment).

Locator Whisker is attached in the side of the Base when not in use.

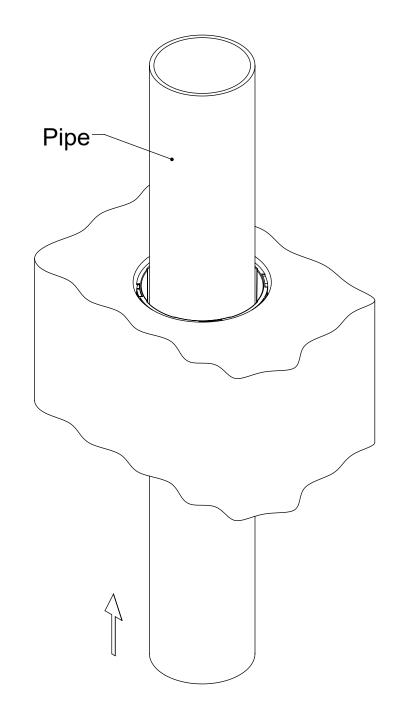

INSTALL PIPE FROM BELOW. SOAPY WATER EASES PIPE INSERTION. (Fig. 7)