

SMART-PRIME ELECTRONIC TRAP PRIMER **INSTALLATION & MAINTENANCE INSTRUCTIONS**

DESCRIPTION:

www.pppinc.net

SMP-500 is a plug-in electronic trap primer (the plug-in connection is only provided with 115V version). The trap primer functions at a pre-selected time delivering potable water across an air gap funnel. CAUTION:

SMP-500 should not be defined as a pressure feed trap priming system. The trap primer should be mounted 12" above the finished floor measured from the bottom of the air gap fitting uzw with a straight drop before turning with your makeup line to the floor drain. This trap primer is a gravity feed system so the makeup line to the floor drain must SUB-MINIATURE

have a continuous slope.

OPERATION:

When the timer energizes the solenoid valve discharges potable water across the air gap funnel for a set amount of time, and when the timer deactivates the solenoid valve closes. Approximately 2 oz of water at 20 PSIG is discharged in a 24 hour cycle. SOLENOID VALVE ELECTRICAL CORD 6' STANDARD

- a.) Read all of the instructions before using the appliance.
- b.) Do not use outdoors.
- c.) To disconnect, remove the plug from the outlet, grasp the plug,
 - not the cord and pull. Do not operate the unit with a damaged electrical cord.
- d.) If the primer is damaged please consult factory.

INSTALLATION:

- Trap primer must be a minimum of 12" above the finished floor of drain(s). This valve serves 1-4 floor drains. 1.
- 2. SMP-500 must be installed in an accessible location. Model # D-814PC or SS access door is the ideal size for concealing this valve behind the wall.
- Connect ¹/₂" NPT connection from the potable water supply using Teflon tape only (Pipe dope will void 3. the warranty).
- Connect primer makeup line to either a single feed or with a DU-U distribution unit to accommodate up to 4 4. floor drains. Ensure assembly is plumb and square.
- Make absolutely sure your makeup line to the floor drain has a continuous slope. 5.

FUNCTIONS:

- 1. On Time: 12 seconds Off Time: 24 hours factory pre-set.
- 2. Press test switch to check functionality of unit.
- 3. Yellow LED's to indicate status of valve.
- 4. 115V AC/DC 60Hz (Standard).

Portland, Oregon 97233

Precision Plumbing Products Division of JL Industries, Inc. 802 SE 199th Ave



T (503) 256-4010 F (503) 253-8165

www.pppinc.net







SMP-500-115V

¥

8 15/16

APPROVED

BRACKET LOCATIONS

WHEN ALIGN

1/2"FEMALE N.P.T.

MENT LEGS