KICHLER

TWINKLER HANGING LIGHT

MODEL # 15501CBR

FIXTURE DETAILS:

INSTRUCTIONS PERTAINING TO A RISK OF FIRE,OR INJURY TO PERSONS IMPORTANT SAFETY INSTRUCTIONS

WARNING — Risk of Electric Shock. Install luminaires 10 feet (3M) or more from a pool, spa or fountain.

- Turn off / unplug and allow to cool before replacing lamp.
- 2) Do not touch lamp or fixture if warm.

 
1)

- 3) Do not look directly at lamp when on.
- 4) Keep lamp away from combustible materials.
- 5) Use only with wattage and LED lamp marked on fixture.

SAFETY INSTRUCTIONS READ THIS FIRST KEEP THESE INSTRUCTIONS

This fixture is intended for installation in accordance with the National Electric Code (NEC) and Local code specifications. Failure to adhere to these codes and instructions may result in serious injury and/or property damage and will void the warranty.

- 1) This fixture is to be used only with a power unit (transformer) rated a maximum of 300 W (25 AMPS) 15 volts per circuit.
- 2) The #18 ga. fixture wire is not intended for direct burial or connection to transformer.
- Direct burial rated wire is to be buried a minimum of 6" (152mm) beneath the surface of the ground. NOTE: If additional Direct Burial wire is needed, contact your local Kichler[®] landscape distributor.
 - 8 GA wire can be purchased in length of 250' (76 M), 15503-BK.
 - 10 GA wire can be purchased in length of 250' (76 M), 15504-BK.
 - 12 GA wire can be purchased in lengths of 100' (30 M), 15501-BK; 250' (76 M), 15502-BK; 500' (152M), 15505-BK; and 1000' (304 M), 15506-BK.
- 4) Fixture shall not use a tungsten halogen lamp.
- 5) Wiring connections must be made with approved/listed wire connection device(s) suitable for the application. Do not exceed manufacturers' wiring combination specifications for size and quantity of conductors.



1. Mounting bracket 2. Connector 3. Quick link 4. Chain

- 5. Coupling 6. Bushing 7. Shade holder
- 8. Socket bracket 9. Socket 10. Shade 11. Plug
- 12. O-Ring 13. Screw 14. Screw 15. Cable

CAUTION

WHEN INSTALLING KICHLER LANDSCAPE LIGHTING (LINE VOLTAGE OR LOW VOLTAGE), CARE SHOULD BE TAKEN TO KEEP CLEAR OF POTENTIALL Y COMBUSTIBLE MATERIALS.

WHEN MAINTAINING THE FIXTURES, BE SURE TO REMOVE LEAVES, PINE NEEDLES, GRASS CLIPPINGS, MULCH, OR ANY DEBRIS THAT HAS ACCUMULATED ON THE LIGHT BULB, LENS, OR BODY OF THE FIXTURE.

ASSEMBLY AND INSTALLATION

1. TURN OFF POWER

- 2. Open the quick link to connect the mounting bracket and remaining parts
- 3. Install the mounting bracket to your desired ceiling / tree surfaces.
- 4. Adjust the fixture chain to your desired length by removing links, as needed.
- 5. Unscrew the shade to expose the socket. Install the MR16 lamp in socket. Reinstall the shade once lamp has been installed.
- 6. Connect the mounting bracket with the rest of the fixture by quick link.
- 7. Make wire connections using approved wire nuts (not supplied).