

EZT HOME V2.0 PARTS LIST

STANDARD CURB KEY APPLICABLE SPECIFCATIONS

EZT HOME V2.0 HAS BEEN BROADLY DESIGNED TO ADAPT AND ASSEMBLE TO MOST STANDARD CURB KEYS REGARDLESS OF LENGTH WHILE STILL FITTING IN A 2 INCH PORT.

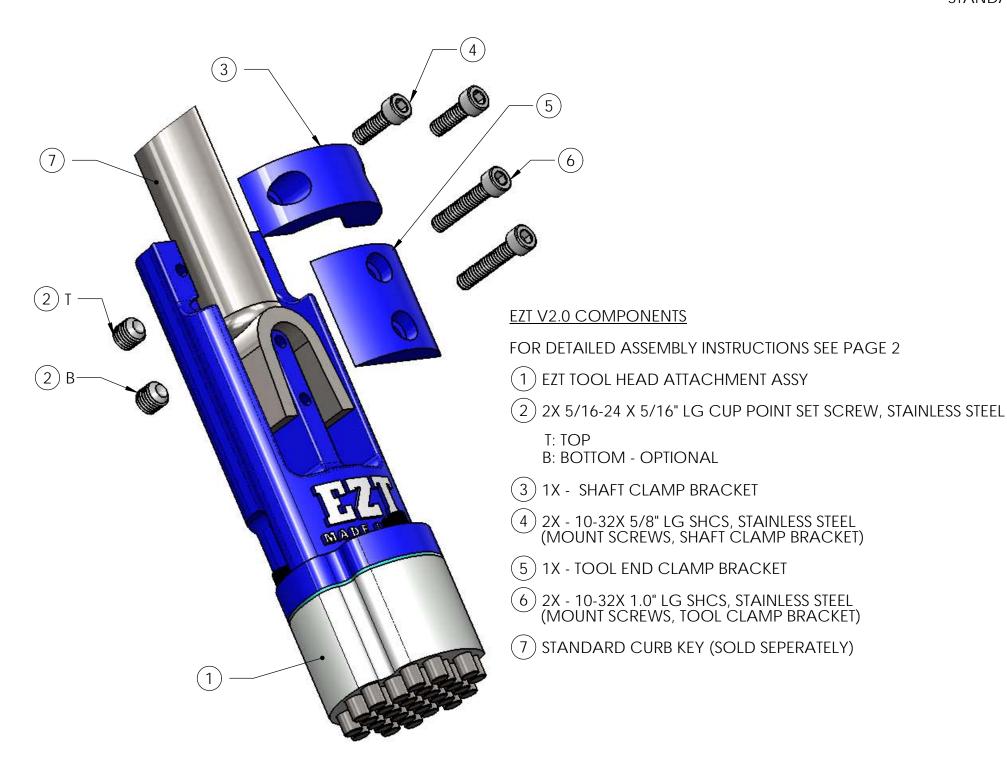

FOR DETAILED ASSEMBLY INSTRUCTIONS SEE PAGE 2

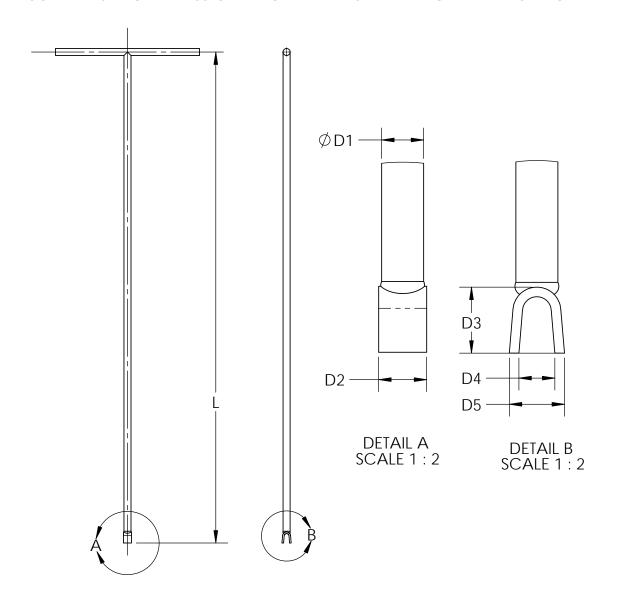

STANDARD CURB KEY DIMENSIONAL LIMITS			
ALLOWABLE CURB KEY DIMENSIONS SHOWN IN TABLE BELOW.			
DIM	DESCRIPTION	MIN	MAX
L:	CURB KEY LENGTH	ANY LENGTH	
ØD1	Shaft diameter	1/2'	1"
D2	WIDTH, TOOL END	13/16"	1 7/16"
D3	HEIGHT, TOOL END	1"	2"
D4	INNER SPAN, TOOL END	5/8"	-
D5	OUTER SPAN, TOOL END	1"	1 13/32"

EZT HOME V2.0 - ATTACHMENT ASSEMBLY INSTRUCTIONS

- TOOL: 5/32" ALLEN WRENCH
- CONVERT YOUR STANDARD CURB KEY INTO A EZT BY FOLLOWING THESE THREE ONE TIME AND EASY ASSEMBLY STEPS.
 EZT ATTACHMENT CLAMPS FIRMLY AND SECURLY TO THE END OF YOUR CURB KEY AND WILL ROBUSTLY TRANSMIT FULL TORQUE TO VALVE ACUTATION.

STEP 1 **LOCATE EZT TOOL HEAD ATTACHEMENT** ASSEMBLYY (1) ONTO CURB KEY (7) AT LOCATIONS: 1.1: 7 SHAFT ON 1 SURF A

1.2: (7) TOOL END ON (1) SURF B


1.3: (7) TOOL END "TOP OF U" ON (1) SURF C

STEP 2

- 2.1 MOUNT SHAFT CLAMP (3) LOSELY AGAINST SHAFT OF CURB KEY (7) WITH TWO 10-32X 5/8" LG SHC SCREWS (4)
 2.2 THREAD IN SET SCREW (2) T
 2.3 LEAVE SLIGHTLY LOOSE UNTIL STEP 3.3

- 3.1 MOUNT TOOL END CLAMP (5) LOSELY AGAINST CURB KEY TOOL END, (7) WITH TWO 10-32X 1" LG SHC SCREWS 6)
- 3.2 OPTION (SEE NOTE): IF NEEDED THREAD IN SET SCREW (2) B.
- 3.3 LOCK AND ALIGN CURB KEY, (7) SHAFT DOWN
 BY TIGTHENING TWO SHC SCREWS (4) AND TOP
 SET SCREW (2) A TO MAKE SECURE 3-POINT CLAMP.
 3.4 LOCK DOWN TOOL END CLAMP (5) FIRMLY AGAINST
 CURB KEY (7) TOOL END BY TIGHTENING TWO
 SHC SCREWS (6).
- 3.5 OPTION (SEE NOTE): IF NEEDED TIGHEN SET SCREW

 2 B TO COMPLETE 3 POINT SECURE CLAMP WITH CURB KEY TOOL END(7). IF NOT NEEDED REMOVE (2) B.

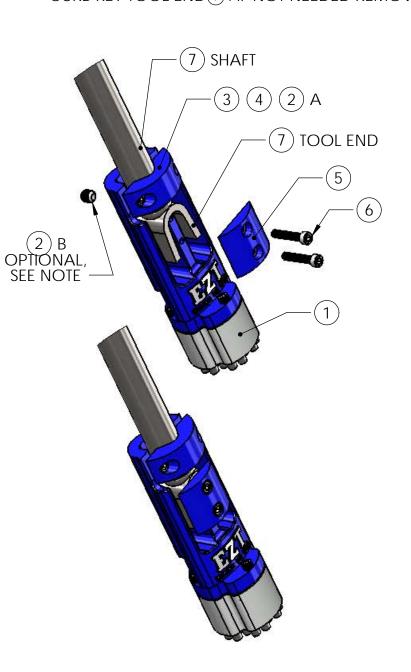

NOTE: OPTIONAL TOOL END SET SCREW (2) B USEAGE DEPENDS ON RELATIVE GEOMETRY OF CURB KEY SHAFT AND IT'S TOOL END WIDTH.
IF TOOL END WIDTH IS TOO SMALL COMPARED TO SHAFT DIA THEN SET SCRW B SHOULD BE USED TO FILL IN GAP. IF NOT THEN REMOVE. SEE "CONDITION FOR USE" AND EXAMPLES **BELOW:**

CONDITION FOR USE:

- **USE**: IF d2 \emptyset d1 IS LESS THEN 3/8"
 - **EXAMPLE**:
 - d1 (SHAFT DIA) = 7/8"
 - d2 (TOOL END WIDTH) = 1 1/8"
 - d2 d1 = 1/4" IS LESS THEN 3/8":
 - **USE SET SCREW B**
- **DO NOT USE:** IF d2 Ød1 IS GREATER THEN 3/8"
 - **EXAMPLE**:
 - d1 (SHAFT DIA) = 3/4"

 - d2 (TOOL END WIDTH) = 1 1/4" d2 d1 = 1/2"" IS GREATER THEN 3/8":
 - DO NOT USE SET SCREW B

