

ELKAY®

INSTALLATION & USE MANUAL

Pro Filtration™ Bottle Filling Stations & Coolers



Important: The refrigerated coolers must be hung on the right side.

Patent zurn-elkay.com/patents

⚠ **WARNING:** Cancer and Reproductive Harm - www.P65Warnings.ca.gov

⚠ **ADVERTENCIA:** Cáncer y daño reproductivo - www.P65Warnings.ca.gov

⚠ **AVERTISSEMENT:** Cancer et effets néfastes sur la reproduction - www.P65Warnings.ca.gov

Contents

<p>1. General Information 2</p> <p>1.1 Installation Manual 2</p> <p>1.2 Disclaimer 2</p> <p>1.3 Serial Number Location 3</p> <p>1.4 Contact Information. 3</p> <p>1.5 Notice of Changes 3</p> <p>1.6 Warranty 3</p> <p>2. Safety 3</p> <p>2.1 General 3</p> <p>2.2 Safety Alert Symbol. 3</p> <p>2.3 Personal Safety. 4</p> <p>2.4 Property Damage 5</p> <p>3. Tools and Supplies 5</p> <p>3.1 Tools Required 5</p> <p>3.2 Installer Supplied Parts. 5</p> <p>4. Preparation 6</p> <p>4.1 General Information 6</p> <p>4.2 Water, Waste, and Electrical Locations. 6</p>	<p>5. Installation 8</p> <p>5.1 Instructions for Removing Wrapper 8</p> <p>5.2 Hanger Bracket Installation. 9</p> <p>5.3 Installation of Cooler 10</p> <p>5.4 Installation of Bottle Filler 11</p> <p>5.5 Installation of Cooler Wrapper. 14</p> <p>6. Programming and Error Codes 14</p> <p>6.1 Instructions to Access Programming Button 14</p> <p>6.2 Programming Instructions. 15</p> <p>6.3 Pro Filtration Error Codes 16</p> <p>7. Filter Replacement and Service 17</p> <p>7.1 Service Instructions. 17</p> <p>7.2 Filter status and Replacement 18</p> <p>7.3 Replacement Filter Parts List 18</p> <p>7.4 Instruction For Replacing Filters 19</p> <p>8. Electrical Schematics and Parts List 19</p> <p>8.1 Electrical Schematic 19</p> <p>8.2 Plumbing Diagram 20</p> <p>8.3 Parts List 21</p> <p>9. Frequently Asked Questions (FAQ) 25</p>
--	--

1. General Information

1.1 Installation Manual

Read all instructions carefully BEFORE starting the installation and familiarize yourself with the various parts of this product.

This manual contains step-by-step installation, adjustment, and maintenance instructions for the LZS8WSBPRO series bottle filling stations. Followed carefully, these instructions will result in trouble-free installation of this Elkay Manufacturing Company (Elkay) product.

The installation of this product requires electrical and plumbing connections that use specific skills and knowledge. If you are unsure or not qualified to make these connections, consult a qualified plumber, electrician, or installer. Professional installation is suggested.

Any deviations, additions, and/or deletions from the described methods, without prior written approval of Elkay, will void the warranty covering this product.

Make sure the installation and use of this product meets all local, state, and federal plumbing and electrical codes.

Save these instructions for future reference

⚠ WARNING



To avoid product or property damage, personal injury, or even possible death, carefully read, understand, and follow all the instructions in this Installation & Use Manual before installing this product.

Improper installation of this product could cause a dangerous situation that results in injury or death.

Do not operate power tools unless you read and understand the instructions and warnings in this and all other applicable labels or manuals. Proper use of tools and the products described in this guide is your responsibility.


Failure to follow these instructions could result in personal injuries, water damage, and other damage to floors, pipes, walls, and other portions of your building or home.

1.2 Disclaimer

The information contained in this Installation & Use Manual is given free of charge. It is based upon technical data which we believe to be reliable and is intended for use by persons having knowledge of this technical area at their own discretion and risk. Elkay assumes no responsibility for results obtained or damage incurred from the use of this material either in whole or in part by the buyer.

1.3 Serial Number Location

Please use the serial number located on the underside of the water cooler when contacting us with questions concerning the installation of this product.

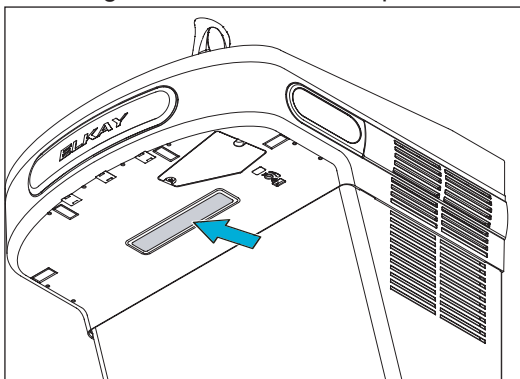

1.4 Contact Information

General Information

Elkay Manufacturing Company
1333 Butterfield Road, Suite 200
Downers Grove, IL 60515
Website: <http://www.elkay.com>

USA/Canada Customer Care

Phone: 800.260.6640
Email: CustCare@Elkay.com

International Customer Care

Phone: 630.575.4755
Email: IntlCare@Elkay.com

1.5 Notice of Changes

The information, specifications, and illustrations in this manual are based on the information that was available at the time this material was written and can change at any time. In keeping with our policy of continuing product improvement, Elkay reserves the right to change specification without notice.

All dimensions are given in inches (") and millimeters (mm).

1.6 Warranty

This product is covered by a Limited Warranty and Elkay will not be held responsible for damage of any kind in connection with the installation of the product.

Refer to the Elkay website <http://www.elkay.com/> warranty and click on drinking water products, 'Warranty for Drinking Water Products' article under the Info and Maintenance section (form 96993C).

2. Safety



Think Safety

Before performing any work, read and understand the safety instructions in this manual.

2.1 General

The Elkay Manufacturing Company (Elkay) cannot anticipate every possible circumstance that might involve a potential hazard during the installation or maintenance of this product. The warnings and instructions in this Installation Manual are, therefore, not all-inclusive. If a tool, installation procedure, or work method that is not specifically recommended by Elkay is used, you must be satisfied that it is safe for yourself and others. You should also make sure that the product will not be damaged by the methods you choose.

Most work related accidents are caused by failure to observe basic safety rules or precautions. An accident can often be avoided by recognizing potentially hazardous situations before an accident occurs. As you install and maintain this product, you must be alert to potential hazards. You should also have the necessary training, skills, and tools to perform any installation or maintenance procedure.

2.2 Safety Alert Symbol



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

This manual contains WARNINGS, CAUTIONS, NOTICES, SAFETY INSTRUCTIONS, and NOTES which must be followed to prevent the possibility of improper service, damage to the equipment, personal injury, or death. The following key words call the reader's attention to potential hazards.

Hazards are identified by the "Safety Alert Symbol" and followed by a signal word such as "WARNING" or "CAUTION".

2.3 Personal Safety

WARNING

These warnings indicate a potentially hazardous situation which, if not avoided, could result in serious injury or death. Follow all instructions related to the installation and/or maintenance of this product (unit).



Personal Protection

Be sure to use all personal protective equipment, such as sturdy safety glasses, work shoes, hearing protection, and gloves, whenever necessary, to ensure your own safety.



To avoid eye injury, always wear protective glasses with side shields when using power tools. Also, make sure no one else can be injured by flying particles when using power tools.



To prevent possible damage to your hearing, always wear ear protection, such as earmuffs or earplugs, when using power tools.



This product is heavy and can cause bodily injury, due to its weight or if the unit is dropped. Use two people

to lift the product when unpacking the unit or installing it onto the hanger brackets.



Wear protective gloves during installation to protect against sharp edges from sheet metal components.



Lifting Hazard

- To avoid personal injury, always use these proper lifting techniques and use two people to move heavy cartons.
- Use appropriate lifting devices to move the load.
- Always use two people when lifting heavy or bulky cartons. **DO NOT** attempt to lift objects that are too heavy.



Power Tool Hazard

- To prevent personal injury or possible death, always follow the electrical safety recommendations of the power tool's manufacturer.
- Do not use power tools in an unsafe manner.
 - Power tools should only be connected to a circuit protected by a ground-fault circuit interrupter (GFCI).
 - If an extension cord is required, always use an OSHA approved extension cord.



Shock and Electrocution Hazards

Failure to follow these instructions could result in severe burns, significant injuries, and even death.



Water will conduct electric current to create a short circuit, resulting in injury or death.

- Never use electric power tools around water or wet floors/surfaces.
- Keep all liquids away from electrical cords and power tools.
- If an extension cord is required, always use an OSHA approved cord.
- DO NOT** create a short circuit between a source of electricity and a liquid by being in contact with both simultaneously.



Contacting live electrical wiring with power tools or hand tools can cause serious injury or death.

- Make sure all related circuit breakers are turned OFF.
- Test for live circuits or wiring inside any wall where installation of the product requires cutting into a wall.



Prior to any maintenance, make sure the unit is unplugged and circuit breakers are turned OFF.



Prior to installation, test for live circuits or wiring inside the wall before cutting or drilling into the wall.

CAUTION

These cautions indicate a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. Follow all instructions related to installation and/or maintenance of this product.



Tripping Hazard

Personal injury can result from tripping over power cords, tools, or other installation items. **DO NOT** leave items laying around the work area.



Cutting Hazard

The installation of this product may require using power tools.

Keep hands away from the cutting edge of any tool used in the installation of our product.

Placing fingers in or around the cutting blades could result in serious personal injury.

Use Proper Tools

Always use proper tools which are in good working condition during the installation of the product. Using tools other than those listed could adversely affect the product and could result in property damage.

2.4 Property Damage**Inspect Before Cutting**

Make sure no electrical wiring or plumbing is present before cutting into a wall.

3. Tools and Supplies**3.1 Tools Required**

Tool	Used For
Tape Measure	Locating mounting brackets
Level	Mounting bracket installation
Power Drill	Installation of wall anchors or lag screws for mounting plate
Adjustable Pliers	Installation of P-trap
Adjustable Wrench	Installation of water inlet valve
Hacksaw	Trimming waste outlet pipe
Flat Blade Screwdriver	Adjustment of pressure regulator and coldness control valve
5/16" Nut Driver	Removal of mounting bracket and front panel
T25 Screw Driver	Removal of bottle filler access door
Tubing Cutters	To trim excess poly tube
1/4" Nut Driver	Installing door tethers to threaded studs
Personal Protective Equipment	Eye, Hand, and Toe Protection

3.2 Installer-Supplied Parts

Description	Qty.
P-trap with 1-1/4" inlet	1
Quarter turn shutoff valve with angled 3/8" outlet (filtered units)	1
Flexible 3/8" tubing and 3/8" tube union fittings (filtered units)	-
1-1/4" flexible drain pipe	1

4. Preparation

4.1 General Information

1. This water cooler is designed for indoor use only and should not be installed outdoors or in a humid environment.

NOTICE A water supply pressure below 20 psi will result in decreased water flow through the unit and damage to the product. A pressure above 105 psi will also cause damage to the product.

2. Make sure the water supply pressure to the product is between 20 and 105 psi. The LZ filtered units require 40 psi minimum water pressure. Recommended operating pressure is 50psi.
3. Use care when opening and removing the packaging to prevent damage to the product.
 - a. Inspect the product for any shipping damage and report it immediately to the location of purchase. Installation of a damaged product will void the warranty.
 - b. Confirm that all parts have been included for the proper installation of this product. Contact the location of purchase if damaged parts are found.

NOTICE Make sure no electrical wiring, potable water inlet pipes, or drainwater outlet pipes will be damaged during installation of the product. Damage to any of these items can cause electrical damage, fire, and/or water damage.

4. Shutoff the water supply source and disconnect power to the electrical outlet being used to operate the product before starting installation.

NOTICE Mounting hardware to be supplied by customer.

4.2 Water, Waste, and Electrical Locations

This section contains general information for the required utilities for the cooler. Use the Location Drawing in each section to determine the exact location of the utilities.

1. Install water supply in accordance with local plumbing codes.
 - a. Use at least 3/8" O.D. unplated copper tube for supply line.
 - b. Pipe should extend 3" (76mm) maximum from wall.
 - c. Install a quarter-turn, installer supplied, shutoff valve.

NOTICE Connect shutoff valve to water inlet. Do not use a piercing-type saddle valve for supply water which will reduce water flow and clogs easier.

Note: This water cooler has been designed and built to provide water to the user which has not been altered by materials in the cooler waterways. The grounding of electrical equipment such as telephones, computers, etc. to water lines is a common procedure. The grounding may be in the building but may also occur away from the building. This grounding can cause electrical feedback into a water cooler creating an electrolysis, which creates a metallic taste of causes an increase in the metal content of the water.

NOTICE Water cooler must be connected to the water supply using a dielectric coupling. The cooler is furnished with a non-metallic strainer which meets this requirement. The drain trap which is provided by the installer should also be plastic to completely isolate the cooler from the building plumbing system.

2. Install a waste water drain.
 - a. Waste outlet must be minimum 1-1/4" O.D. for single units.
 - b. Pipe should extend 2" (50mm) from wall.
3. Install a grounded, electrical outlet on a dedicated circuit.

WARNING To prevent electrical shock, fire, or electrocution, install grounded outlet. Do not use an adapter or extension cord.

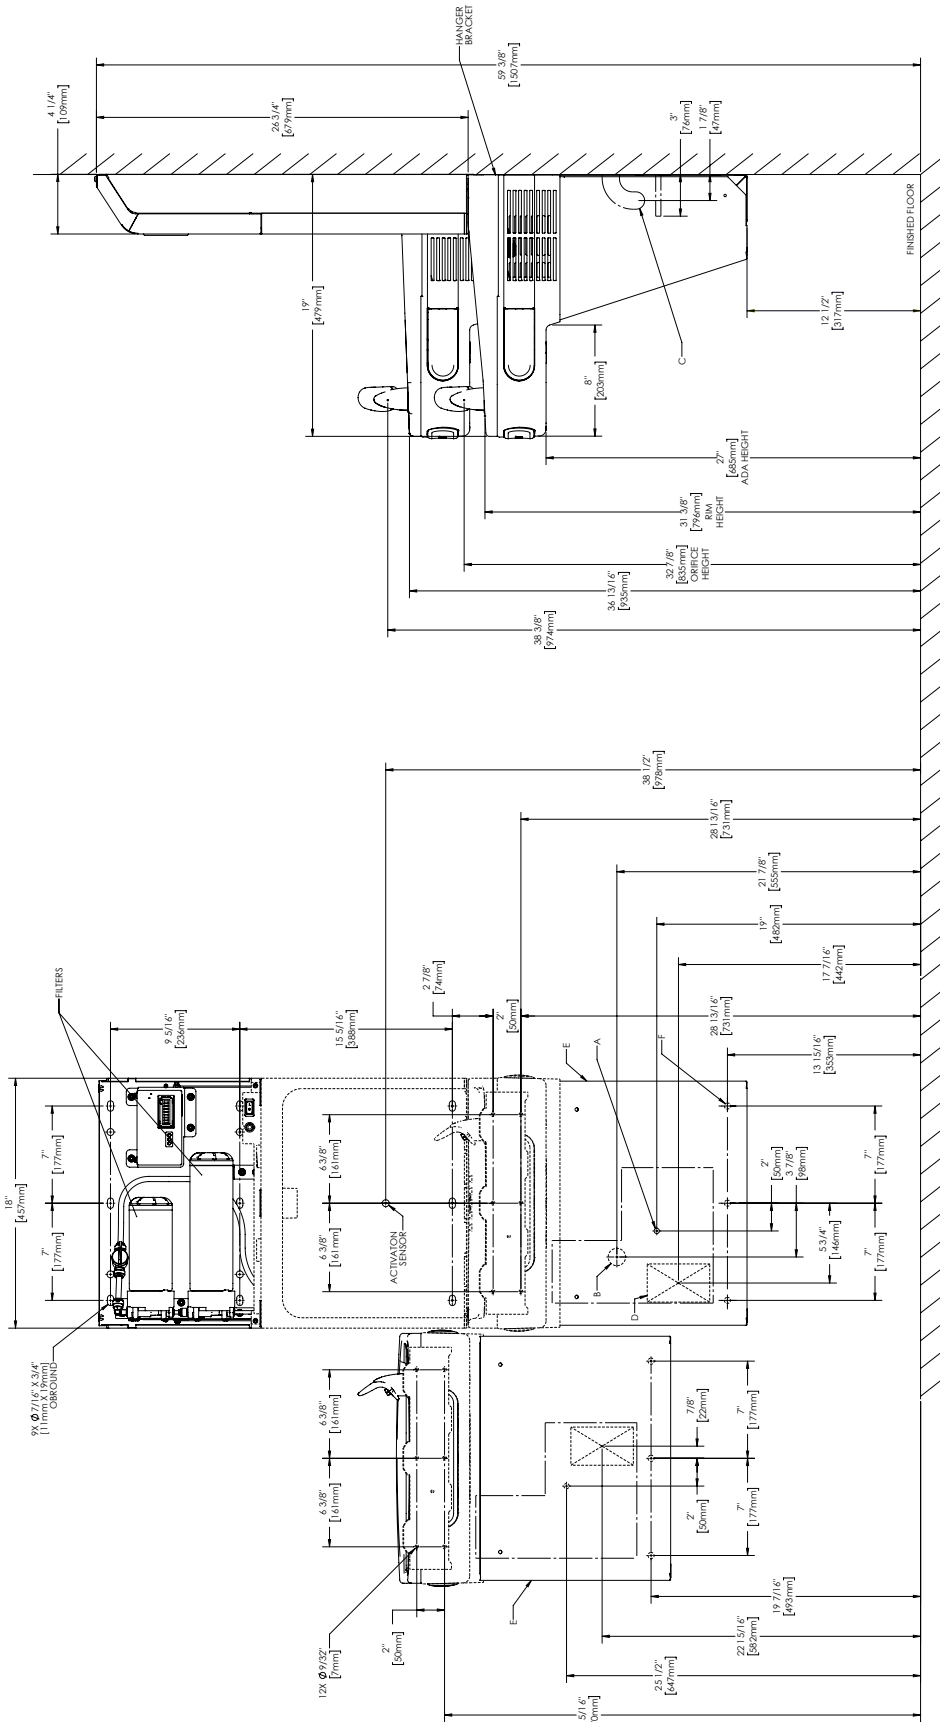


Fig. 1

REDUCE HEIGHT BY 3 INCHES FOR INSTALLATION OF CHILDREN'S ADA COOLER
REDUZCA LA ALTURA EN 76 mm (3") PARA LA INSTALACION DEL BEBEDERO CON CLASIFICACION ADA PARA NIÑOS
REDUIRE LA HAUTEUR DE 76 mm (3 PO) POUR LES INSTALLATIONS A LA NORME ADA ENFANTS

- LEGEND/LEYENDA/LÉGENDE**
A = RECOMMENDED WATER SUPPLY LOCATION 3/8 O.D. UNPLATED COPPER TUBE CONNECT STUB WITH SHUTOFF (BY OTHERS) 3 IN. (76mm) MAXIMUM OUT FROM WALL.
 UBICACIÓN RECOMENDADA DEL SUMINISTRO DE AGUA. TUBERÍA DE COBRE SIN REVESTIMIENTO DE 3/8" DE DIÁM. EXT. ADAPTADOR DE CONEXIÓN CON VALVULA DE CIERRE DE TERCEROS) MÁXIMO A 76 mm (3") DE LA PARED.
 EMPLACEMENT RECOMMANDÉ DE L'ARRIVÉE D'EAU. TUBE EN CUIVRE NON PLAQUÉ DE 3/8 PO DE DIA. EXT. RACCORDER À LA CONDUITE D'ALIMENTATION AVEC UN ROBINET D'ARRÊT (NON FOURNI) À 76 MM (3 PO) MAXIMUM DU MUR.
- B = RECOMMENDED WASTE OUTLET LOCATION. TO ACCOMMODATE 1-1/4" NOMINAL DRAIN. DRAIN STUB 2" (61MM) OUT FROM WALL.**
 UBICACIÓN RECOMENDADA PARA LA SALIDA DE DESAGÜE. PARA ADAPTAR UN DRENAJE NOMINAL DE 1-1/4". CONEXIÓN DE DRENAJE A 2" (61 MM) DE LA PARED.
 EMPLACEMENT RECOMMANDÉ POUR LA SORTIE DES DÉCHETS. POUR ACCUEILLIR UN DRAIN NOMINAL DE 1-1/4". BOUT DE DRAIN À 2" (61MM) DU MUR.
- C = 1-1/4" TRAP (NOT FURNISHED)**
 NO SE INCLUYE SIFÓN DE 1-1/4"
 SIPHON DE 1-1/2 PO NON FOURNI

- LEGEND/LEYENDA/LÉGENDE**
D = ELECTRICAL SUPPLY (3) WIRE RECESSED DUPLEX OUTLET**
 SUMINISTRO ELÉCTRICO (3) ENCHUFE DE ALAMBRE SALIDA DUPLEX
 ALIMENTATION ÉLECTRIQUE (3) ENCASTRE
- E = INSURE PROPER VENTILATION BY MAINTAINING 6" (152 mm) (MIN.) CLEARANCE FROM CABINET LOUVERS TO WALL.**
 PARA GARANTIZAR LA VENTILACIÓN ADECUADA, MANTENGA 152 mm (6") (MIN.) DE SEPARACIÓN DESDE LAS REJILLAS DEL GABINETE HASTA LA PARED.
 POUR ASSURER UNE AÉRATION SUFFISANTE, PRÉVOIR UN DÉGAGEMENT DE 152 mm (6 PO) (MIN.) ENTRE LES ÉVÉNENTS DE L'ENCEINTE ET LE MUR.
- F = 7/16" (11mm) BOLT HOLES FOR FASTENING UNIT TO WALL**
 ORIFICIOS PARA PERNOS DE 7/16" (11mm). PARA FIJAR LA UNIDAD A LA PARED
 TROUS DE VIS DE 7/16" (11mm) POUR LA FIXATION DE L'APPAREIL AU MUR
- **NEW INSTALLATIONS MUST USE GROUND FAULT CIRCUIT INTERRUPTER (GFCI)**
 **Las nuevas instalaciones deben usar un interruptor de circuito de falla a tierra (GFCI, por sus siglas en inglés)
- **Les nouvelles installations doivent comporter un disjoncteur différentiel (GFCI)**
 NOTE: It is highly recommended that the circuit be dedicated and the load protection be sized for 20 amps.
 NOTA: Es muy recomendable que el circuito esté dedicado y que la protección de carga tenga un tamaño de 20 amperios.
- REMARQUE: Il est fortement recommandé de dédier le circuit et de dimensionner la protection de charge à 20 ampères.**

5. Cooler Installation

5.1 Instructions For Removing Wrapper

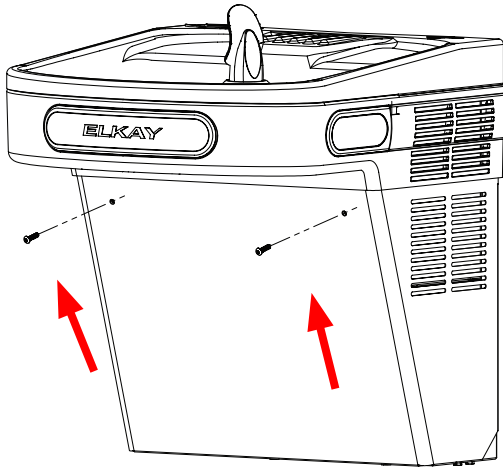


Fig. 2

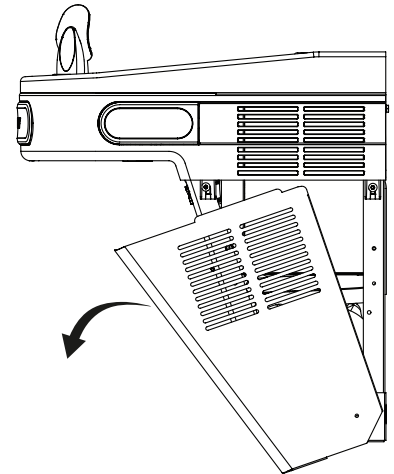
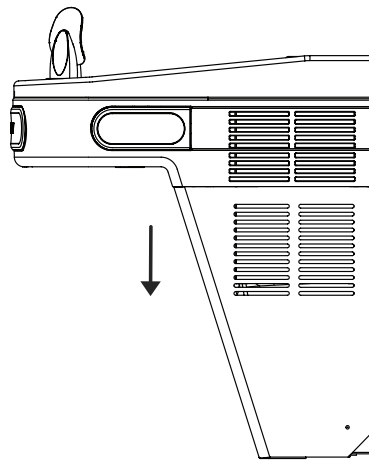


Fig. 3

1. Remove the two security screws (size T25) from the front panel. (see Fig. 2)
NOTE: SCREW THREADS INTO BUSHING WHILE ANGLED. DO NOT ATTEMPT TO THREAD SCREW INTO BUSHING HORIZONTALLY.
2. Gently pull the wrapper down and rotate the wrapper to a downward position (see Fig. 3).
3. To remove the wrapper, hold each side and gently pull wrapper up and out of pivoting bracket (see Fig. 4).

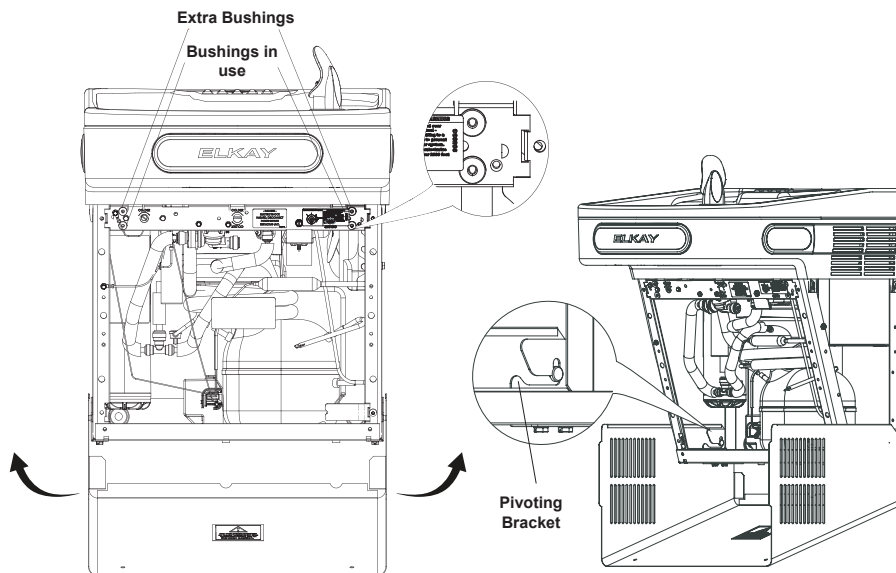


Fig. 4

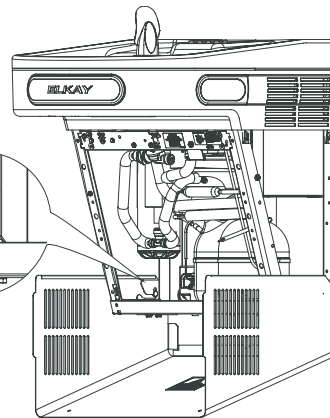


Fig. 6

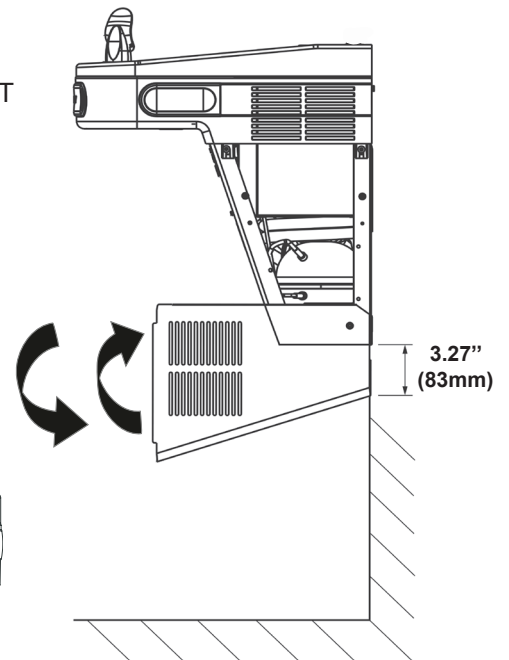


Fig. 5

- ⚠ CAUTION: WRAPPER DROPS AND SWINGS WHEN SECURITY SCREWS ARE REMOVED.
- ⚠ CAUTION: DO NOT LEAN ON WRAPPER.
- ⚠ CAUTION: DO NOT USE POWER TOOL TO TIGHTEN. DO NOT OVERTIGHTEN.

NOTE:

1. Ensure that there are no plumbing or external objects below the wrapper in the specified dimension. The specified (3.27") minimum distance is required for the wrapper to swing out (see Fig. 5).
2. Removing the wrapper from the pivoting bracket when servicing the unit is recommended. The wrapper may be left in place for quick serviceability (see Fig. 4).
3. When re-attaching wrapper, ensure each side of wrapper is engaged to pivoting bracket (see Fig. 6).
4. Once the wrapper is in place, rotate wrapper up and under the shroud. Ensure thru holes on wrapper are aligned with plastic bushing threads on the frame prior to engaging security screws. Ensure screw is angled relative to the ground and perpendicular to wrapper surface prior to engagement. Hand tighten prior to using hand tool to avoid cross-threading.
5. Four plastic bushings are located in the cross brace of the frame. The lower two bushings align with wrapper holes and the top two bushings are extras in case of replacement (see Fig. 4).

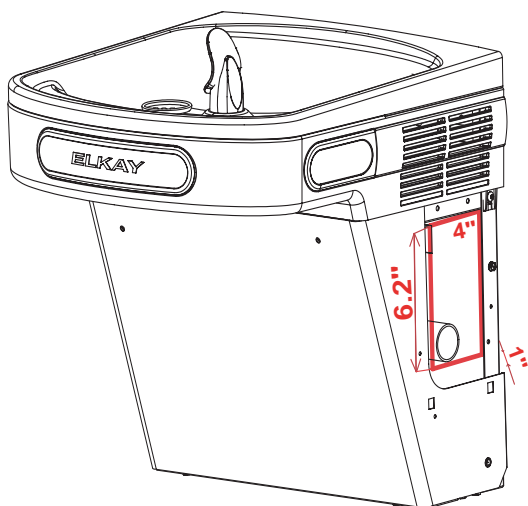


Fig. 7

NOTE:

The highlighted portion in red color is acceptable plumbing rough-in for installation.

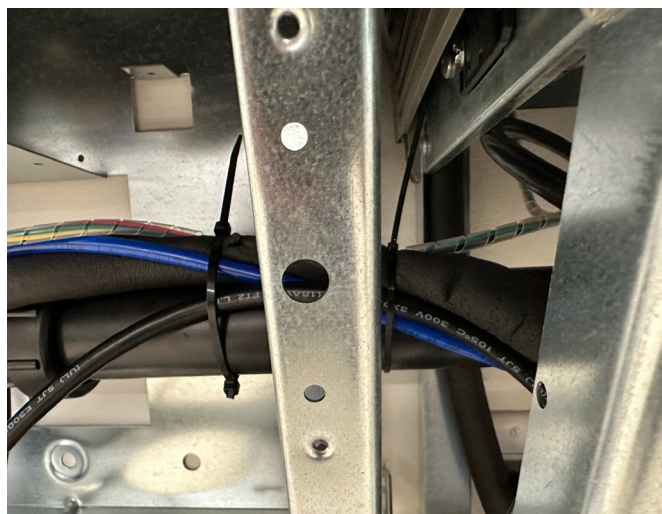


Fig. 8

NOTE:

To mitigate the wrapper rotation interferences, zip tie lines (plumbing and electrical) running between the cooler units to the waste line (PVC pipe).

5.2 HANGER BRACKETS INSTALLATION

1. Remove hanger bracket fastened to back of coolers by removing one (1) screw.
2. Refrigeration unit must be on right hand side.

Mount the hanger bracket as shown in Figures 1 (Pg. 7).

NOTE: Hanger Bracket MUST be supported securely. Add fixture support carrier if wall will not provide adequate support. Anchor hanger securely to wall using all six (6) 1/4 in. dia. mounting holes.

IMPORTANT: 5-7/8 in. (150 mm) dimension from wall to centerline of trap must be maintained for proper fit.

OPERATION OF QUICK CONNECT FITTINGS

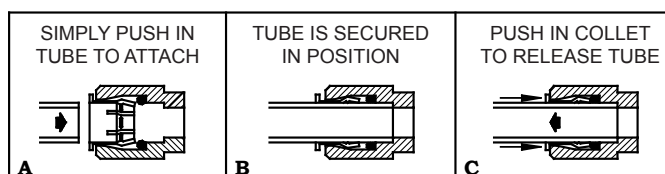


Fig. 9

5.3 INSTALLATION OF COOLER

1. Hang the cooler on the hanger bracket. Be certain hanger bracket is engaged properly in the slots on the cooler back as shown in Figure 1 (Pg. 7).
2. Refer Fig 2 to Fig 5, Pg. 8 for wrapper removing instructions.
3. Hang only the refrigerated cooler on the hanger bracket. Be certain hanger bracket is properly in the slots on the cooler backs as shown in Figures 1 (Pg. 7).
4. Hang the non-refrigerated cooler on the hanger bracket. Be certain hanger bracket is engaged properly in the slots on the cooler backs as shown in Figures 1 (Pg. 7).
5. Unband the loose wires in the refrigerated cooler. Stretch it out and thread through the left side of the refrigerated cooler and into the right side of the non-refrigerated cooler.
6. Secure each cooler frame to wall by installing (2) screws and washers (not supplied) in lower holes. See reference figures in page 10.
7. Connect the waterline from the solenoid in the non-refrigerated cooler to the open 1/4" inch tee fitting in the refrigerated cooler.
8. Connect the drain assembly together as shown in the plumbing diagram.
9. Install trap.

IMPORTANT: If it is necessary to cut the drain, loosen the screw at the black rubber boot and remove tube, check for leaks after re-assembly.

NOTE: To move bottle filler and basin to left side see instruction sheet 2000002591.

PLUMBING DIAGRAM

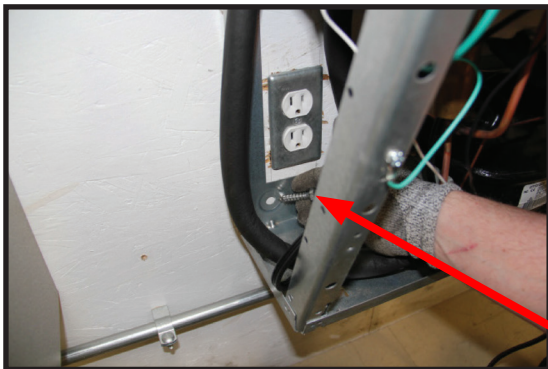
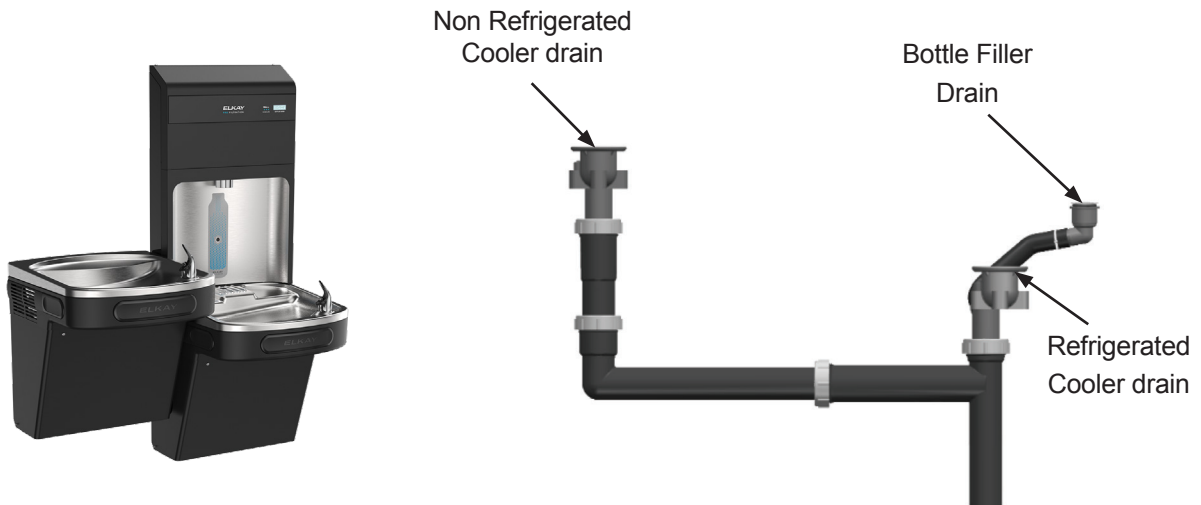


FIG. 10

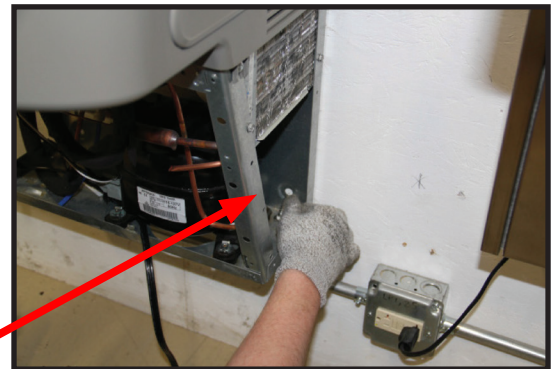



FIG. 11

Secure cooler frame to wall by installing (2) screws and washers (not supplied).

5.4. Bottle Filler Installation


1. Remove two (2) security screws (T25) securing the filter access door to the bottle filler with torx T25 screwdriver. Remove the filter access door.

Note: Do not discard mounting screws, they will be needed to reinstall the filter access door.

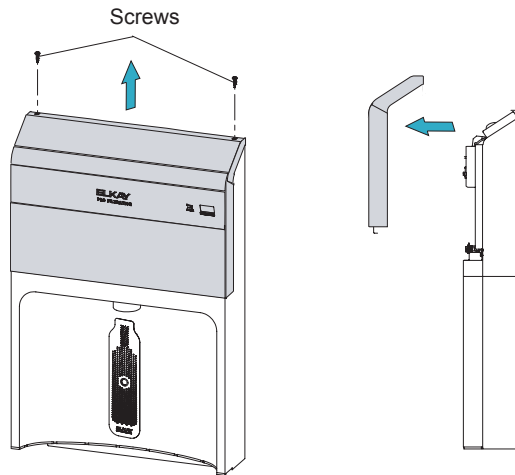


2. Tape the template (provided with the unit) to the wall. Align center line of template with cooler drain and bottom line of template to the top of the cooler basin. Mark and drill pilot holes for top row (ROW A) of mounting holes in the template and partially install fasteners (not provided) in the two outermost hole locations, and remove template from wall.

Note: The installation template is an optional aid, refer to rough-in drawing if the template is not preferred.

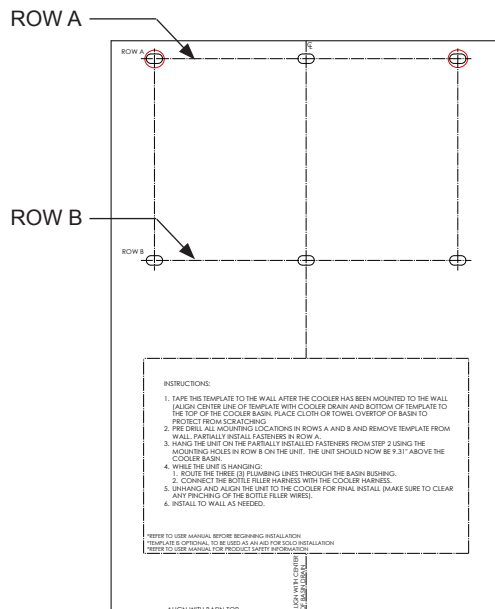


3. Hang the unit on the two partially installed fasteners from step 2 using the mounting holes in row B on the unit. The unit should be approximately 9" above the cooler basin.


Note: This is an intermediate step to aid in routing the plumbing lines to the cooler and connecting the wiring harness; this is not the final position of the bottle filler.

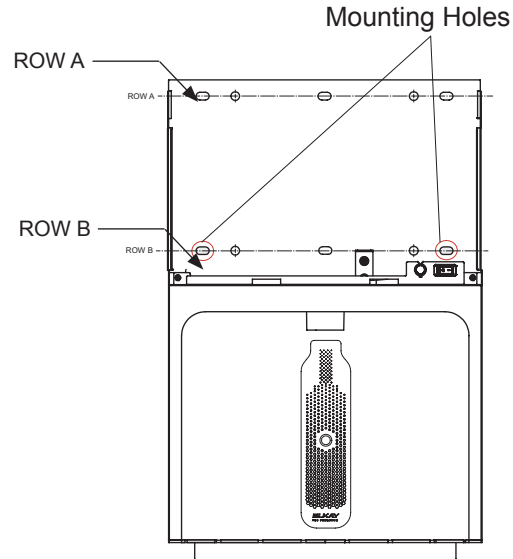

4. While the unit is hanging on the Fasteners :
 - a. Route the three (3) plumbing lines through the snap-in bushing in the basin.
 - b. Connect the bottle filler harness to the cooler harness as shown in the below figure.

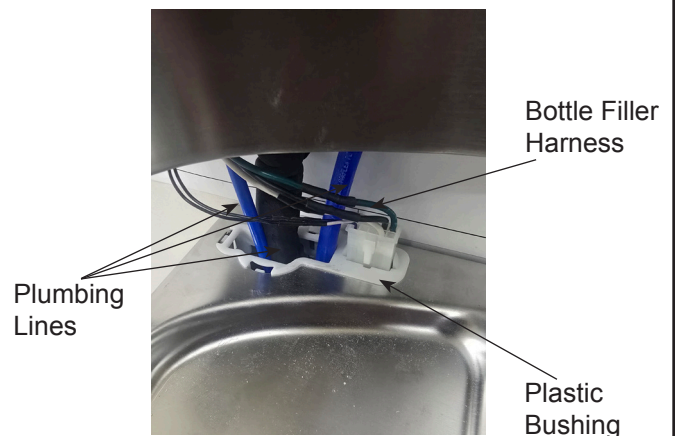


Note: If installing a unit with a UV module, route the power supply cable through the plastic bushing on the basin (from the bottom up), and behind the alcove to plug in to the UV module as shown below.

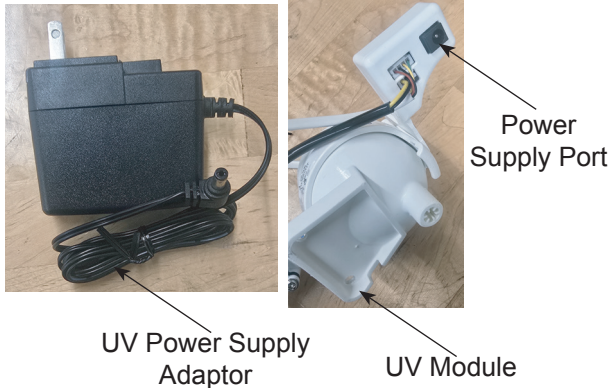


- Remove the bottle filler from the partially installed fasteners, and align the bottle filler to the cooler. Remove the fasteners that were partially installed. Secure the bottle filler to the wall using top row of mounting holes (row A) on the bottle filler using the pre-drilled holes from step 2 and secure the bottle filler with the remaining 2 mounting holes in row A. Secure the bottle filler to the wall using the 4 remaining mounting holes in the second row B.


Note: Make sure to clear any pinching of the bottle filler wiring or plumbing while aligning the bottle filler to the cooler.

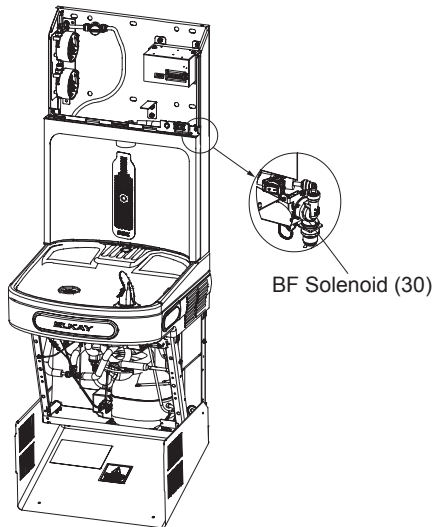


- Reinstall the filter access door by hanging it by the tabs on the bottom edge of the filter access door.

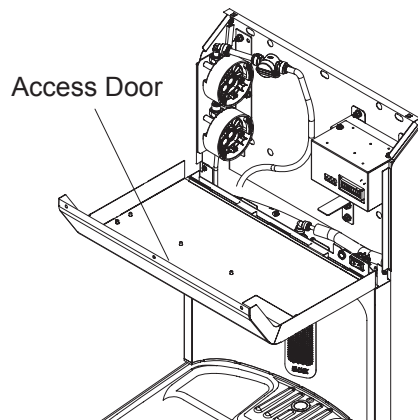


- Attach the tethers fastened/hanging from the control board mounting bracket and the filter bracket to the corresponding PEM studs on the inside face of the filter access door using the provided #6 mounting screws. Hand tighten first and then wrench tighten no more than 1/4 turn, do not over tighten.

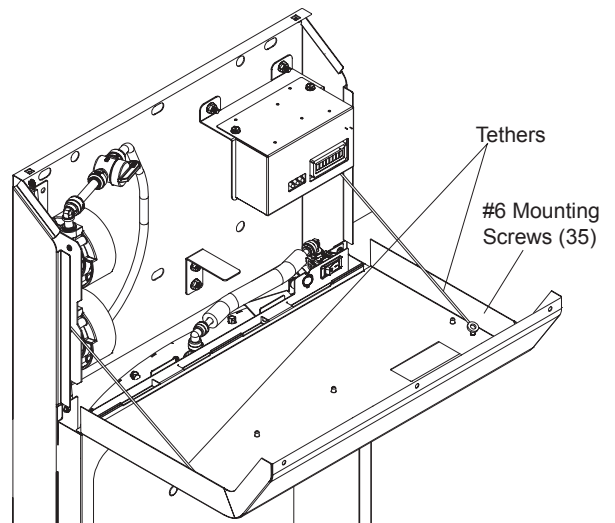

- Before installing filters, make sure power switch is set to 'off' and water shutoff valve is closed. Remove filter from carton, remove protective cap, attach filter to filter head by firmly inserting into head and rotating filter clockwise.

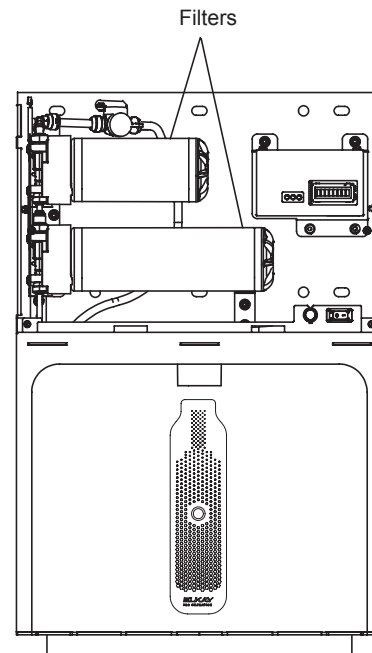


9. Connect the plumbing lines in the cooler (see labels provided on plumbing lines and plumbing diagram in section 8.2 on page 20).
 - a. Connect the water supply to the 3/8" copper tube supplied with the installation parts kit by using the union or directly to the supply line.
 - b. Connect 3/8" with Armaflex to the outlet of the evaporator.
 - c. Connect 3/8" without Armaflex to the inlet of the evaporator.
10. Connect electrical power by plugging in the power cord.
11. Turn on main water supply and ensure that bottle filler shutoff valve is open by rotating blue lever on the water shutoff valve to counter-clockwise so lever is parallel to the tubing and check for leaks.
12. Turn on electrical power by depressing the power switch moving it to the open position by depressing the left side of the switch.

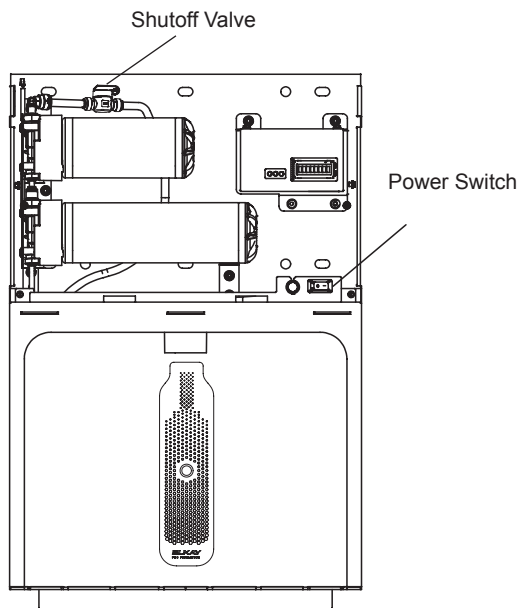


13. Ensure that the auto flush timer begins to countdown, after the countdown expires, the system will begin an automatic filter flush procedure. Wait for auto flush procedure to complete, this should take 3 to 5 minutes.

14. Once it is confirmed that there are no leaks close and resecure the filter access door by using the two mounting screws from step 1.

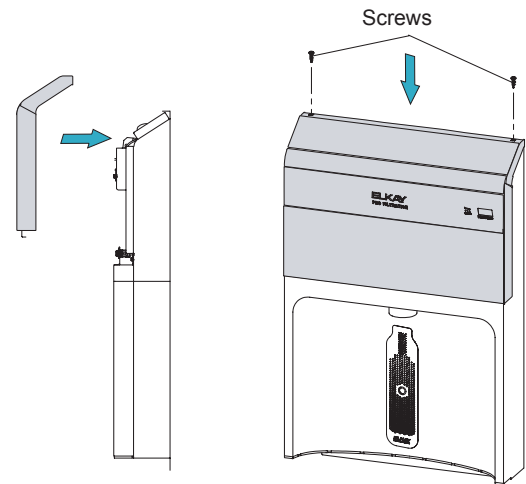

15. Verify proper dispensing from the bottle filler by placing a cup under the water dispenser spout and verify the bubbler operation by pressing the push bar on the front panel.

Note: The first initial dispenses might have air in the line which may cause a sputter. This will be eliminated once all air is purged from the line. A steady stream of water assures all air is removed. If air is trapped in the inlet line or filter micro bubbles, which make the water appear cloudy, may appear. These bubbles will dissipate and the water will be clear.

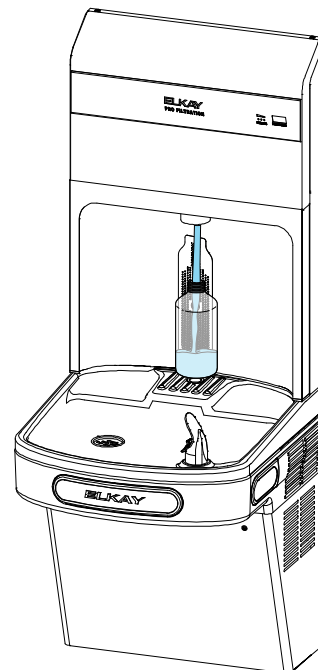

5.5. Cooler Wrapper Installation

1. Install the cooler wrapper on water coolers.
2. When re-attaching the cooler wrapper, push wrapper up and under the shroud. Make sure wrapper and bushing holes are aligned prior to inserting screw as shown in Fig. 12, do not over tighten. Units are now ready for use.

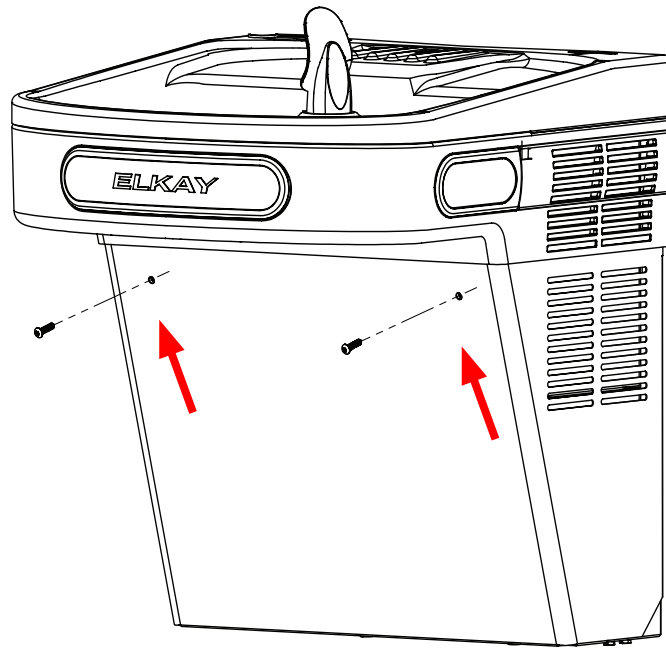


Fig. 12

6. Programming and Error Codes

6.1 Instructions To Access Programming Button

1. Remove two (2) security screws (size T25) that secure the filter access door from top and rotate the filter access door forward. The filter access door will be held in the open position by the tethers.
2. The programming button is located in lower right corner of bottle filler (See Fig. 13, Pg. 14).

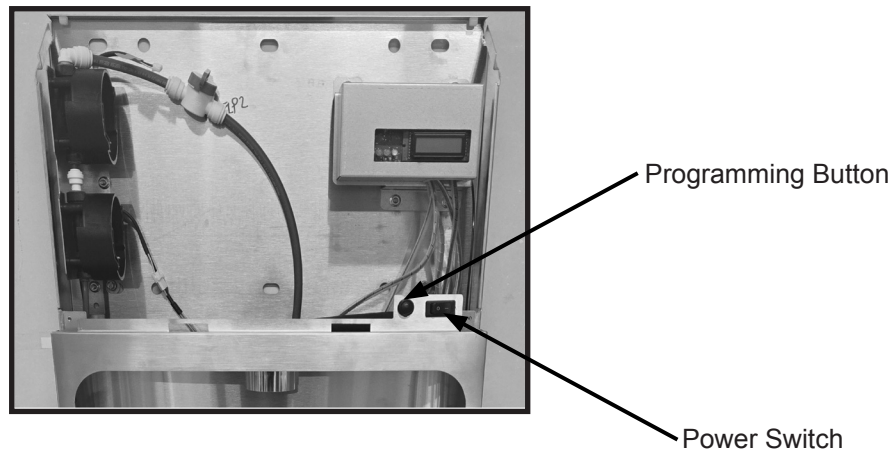


Fig. 13

6.2 Programming Instruction

Depress Button for 5 seconds to activate main menu, then release

Display will cycle through all menu options for 2 seconds each for 2 cycles, then return to bottle count display if no user input is detected

Display will cycle through all sub-menu options for 2 seconds each for 2 cycles, then return to main menu if no user input is detected

Selections are saved upon exit from each sub-menu.

Top level	Sub Menu 1	Sub Menu 2	Notes	End Action
Info	Lists current settings			Returns to Main Menu
Errors	Lists active errors			Returns to Main Menu
AutoFlus			Enable or disable the automatic flushing of new filter(s) upon instalation	Drops to next level when selected
	Off		Manual flush required after filter change	Returns to Main Menu
	On (default setting)		Auto-flush enabled	Returns to Main Menu
FLSWATTM (flush wait time)			Set duration of time between detection of new filter and filter auto-flush initiation	Drops to next level when selected
	15 seconds		15 second wait time	Returns to Main Menu
	30 seconds (default setting)		30 second wait time	Returns to Main Menu
	45 seconds		45 second wait time	Returns to Main Menu
Prdt Type			Enable or disable connection to plumb-SMART "Connected" endpoint board	Drops to next level when selected
	Conn = No (default setting)		Connection disabled	Returns to Main Menu
	Conn = Yes		Connection enabled	Returns to Main Menu
MLTFILTR (multi-filter)			Configure product filter configuration	Drops to next level when selected
	No (default setting)		Single-filter system	Returns to Main Menu
	Yes		Dual-filter system	Returns to Main Menu
Set time			Set product date-time	Drops to next level when selected
	Year		Set current year (2025-2099)	Drops to next level when selected
	Month		Set current month (1-12)	Drops to next level when selected
	Date		Set currnet day (1-31)	Drops to next level when selected
	Day		Set day of week (Mon-Sun)	Drops to next level when selected
	AM/PM		Set AM/PM	Drops to next level when selected
	Hour		Set hour (1-12)	Drops to next level when selected
	Minute		Set minute (0-55)	Returns to Main Menu
Refrig			Toggle refrigeration on/off	Drops to next level when selected
	No		Refrigeration disabled	Returns to Main Menu
	Yes (default setting)		Refrigeration enabled	Returns to Main Menu
Range			Adjusts sensitivity of bottle detection sensor. The lower the number, the closer to the sensor the bottle needs to be to activate.	Drops to next level when selected
	1-10 (default: 2)			Returns to Main Menu

B-Light (backlight)			Set brightness of Bottle Count display	Drops to next level when selected
	25%		(dimmest)	Returns to Main Menu
	50%			Returns to Main Menu
	75% (default setting)			Returns to Main Menu
	100%		(brightest)	Returns to Main Menu
EnerSave			Configure Energy-Saving Mode (ESM)	Drops to next level when selected
	Off (default setting)			Returns to Main Menu
	On		Set ESM on/off time: 24 hours – 12-11AM and 12-11PM	Drops to next level when selected
		WDn (Weekday ON)	Select weekday “on” time	Drops to next level when selected
		WDf (Weekday OFF)	Select weekday “off” time	Drops to next level when selected
		WEn (Weekend ON)	Select weekend “on” time	Drops to next level when selected
		WEf (Weekend OFF)	Select weekend “off” time	Drops to next level when selected

6.3 Pro Filtration® Error Codes

Error Code	Error Description	Corrective Action
BF01, BF02	Firmware error	<ul style="list-style-type: none"> Shut down unit for 30 seconds and restart. If error persists, replace Alpha Numeric LED board.
BF03	Continuous Flow Warning	<ul style="list-style-type: none"> System detected continuous flow lasting longer than 1 minute. Inspect system for leaks, release bubbler shroud switches, clear area in front of IR sensor and clean sensor lens. Close water shutoff valve, power cycle unit, and re-open valve. If error persists, replace solenoid.
BF04	Lower filter Communication error - filter tag	<ul style="list-style-type: none"> System could not detect genuine Elkay PRO filter in lower filter position. Ensure Elkay PRO filter is properly installed and power cycle the unit. If error persists, replace with new Elkay PRO filter.
BF05	Upper filter Communication error - filter tag	<ul style="list-style-type: none"> System could not detect genuine Elkay PRO filter in upper filter position. Ensure Elkay PRO filter is properly installed and power cycle the unit. If error persists, replace with new Elkay PRO filter.
BF06	Lower filter Communication error - NFC board	<ul style="list-style-type: none"> System could not establish connection with lower Filter NFC Board. Ensure filter module cable is securely connected to the lower branch of the wiring harness and power cycle the unit. If error persists, replace filter module.
BF07	Upper filter Communication error - NFC board	<ul style="list-style-type: none"> System could not establish connection with upper Filter NFC Board. Ensure filter module cable is securely connected to the upper branch of the wiring harness and power cycle the unit. If error persists, replace filter module.
BF09	Endpoint Connection Error	<ul style="list-style-type: none"> Disconnect blue endpoint board from control board for 30 seconds and reconnect. Verify in programming menu that Product Type is set to “Conn = Yes.” If error persists, replace endpoint board and harness.
BF10	Line flush Warning	<ul style="list-style-type: none"> Confirm water shutoff valve is open and water is flowing to unit. Clear any water line blockage. If running post-install filter flush, retry flush by activating the bubbler shroud switches. If error persists, power cycle the unit to restart the post-install filter flush.
BF11	Filter position Warning	<ul style="list-style-type: none"> Verify that a sediment filter is installed in the upper filter position, and a contaminant-reduction filter is installed in the lower filter position.

Note: Danger! Electrical shock hazard. Disconnect power before servicing unit.

7. Filter Replacement and Service

7.1. Service Instructions

Lower and Upper Shroud

To access the refrigeration system and plumbing connections, Remove two (2) screws from front of cooler to remove the lower shroud. To remove the upper shroud for access to the pushbars, regulator, solenoid valve or other components located in the top of the unit, remove lower shroud, disconnect drain, remove four screws from tabs along lower edge of upper shroud, unplug two wires and water tube.

Bubbler

To remove the bubbler, first disconnect the power supply. The underside of the bubbler can be reached through the access panel on the underside of the upper shroud. Remove the access panel by removing the retaining screw. To remove the bubbler, loosen locknut from the underside of the bubbler and remove the tubing from the quick connect fitting per the Operation Of Quick Connect Fittings section in the General Instructions. After servicing, replace the access panel and retaining screw.

Switches Behind the Push Bar

The regulator in an EZ cooler is always held fully open by the use of a single regulator nut (See Fig. 21 and Fig. 22). Water is not dispensed until the pushbar is depressed to activate a switch which then opens a solenoid valve.

To remove sidebars, from the inside compress the flared tabs and pull out carefully. To reinstall side pushbars, the front of the pushbar is inserted first. While keeping the switch depressed, snap the rear of the pushbar into position.

Cleaning

Stainless Steel

- General cleaning: use an ordinary mild detergent and soft cloth, rinse and towel dry.
- Steel soap pads should never be used; particles can adhere to a stainless steel basin surface and will eventually rust.
- Light scratches are normal for stainless steel basins; over time they will blend into the uniform finish pattern.
- Do not use cleaners containing acids or chlorides, these will cause the stainless steel to oxidize.

Plastic Components


- General cleaning: use an ordinary mild detergent and soft cloth, rinse and towel dry.
- Wiping the surface clean to remove debris or build up will not hurt the antimicrobial properties.

Temperature Control

- Factory set at 50°F (+/- 5°F) under normal conditions. For altitude adjustments, refer to sticker on left side of top bar.

Stream Height Adjustment

VIEW OF UNDERSIDE OF BASIN SHROUD

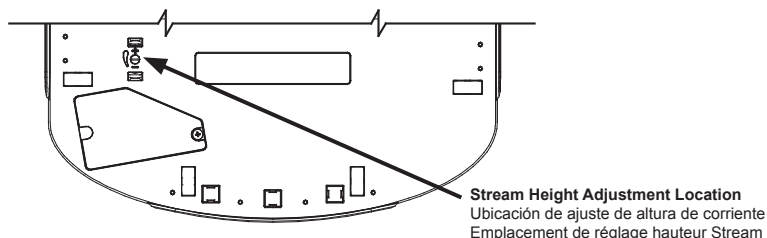

7.2 Filter Status and Replacement

The filter status indicator shows the filter condition using colors. Blue indicates normal operation, no immediate attention needed. Red indicates immediate attention required to maintain proper function.

Note: Only install sediment filter in upper position

It is recommended that both the sediment FSR5 and the FLP4, FL6 and FL10 contaminant reduction filters be changed annually and at the same time.

The filter status light will track days remaining and capacity remaining for the FLP4, FL6 and FL10 contaminant reduction filters and days remaining for the FSR5 sediment filter. When both a contaminant reduction and sediment filter are installed the lowest remaining days or capacity remaining will be displayed.

The remaining life of each filter can be viewed in the PlumbSMART app.



Fig. 14

7.3 Replacement Filter Parts List

PRO FILTRATION® FILTER PARTS LIST

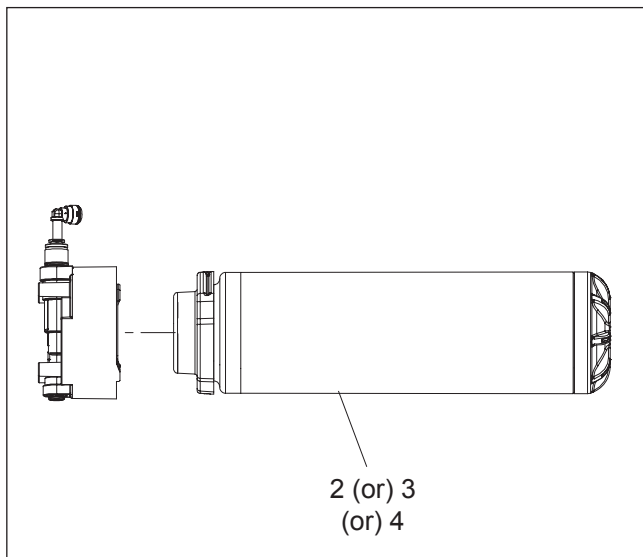


Fig. 15

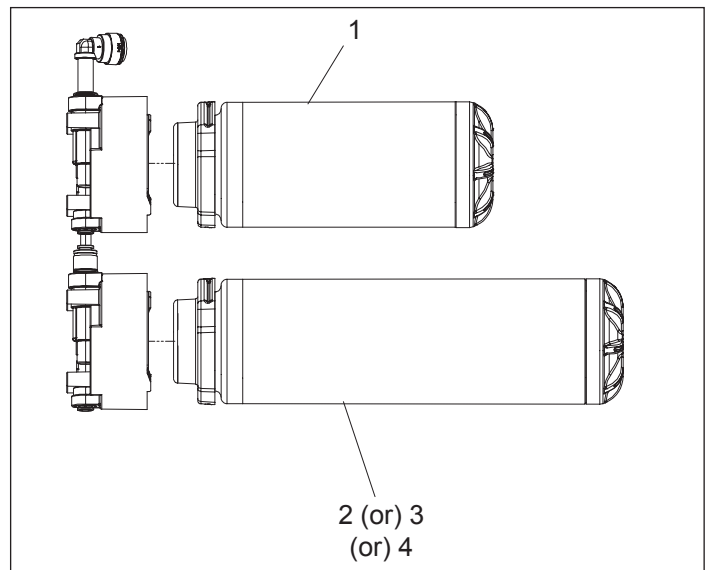


Fig. 15 A

Pro Filtration® Filter Detail

Pro Filtration® FILTER PARTS LIST		
ITEM NO.	PART NO.	DESCRIPTION
1	FSR5	Sediment Filter
2	FL6	High-Capacity Lead 6,000 gallon capacity
3	FL10	Ultra-Capacity Lead 10,000 gallon capacity
4	FLP4	Total PFAS + Lead 4,000 gallon capacity
NS	1100000031	Sediment Filter Kit – Includes Filter, Filter head, harness and mounting screws



Scan for information on where to buy and troubleshooting assistance.

7.4 Instructions For Replacing Filters

⚠ WARNING Turn off power when servicing filters.

1. Remove two (2) mounting screws securing the filter access door to the bottle filler using Torx T25 security bit screwdriver and rotate the filter access door forward. The filter access door will be held in the open position by the tethers.
2. Turn off water supply by rotating the blue lever on the water shutoff valve located in the bottle filler counter-clockwise so lever is perpendicular to inlet/outlet tubing.
3. Dispense water to relieve pressure by using bottle filler IR Sensor or bubbler.
4. Turn off power to the unit using the rectangular rocker switch located above the lower right corner of door.
5. Hold a rag or towel underneath the filter before removing to catch any dripping water.
6. Rotate filter counterclockwise to disengage filter from head and remove.
7. Remove protective cap from new filter and place the cap on the used filter to seal it.
8. Engage filter to filter head by pressing filter into head and rotate filter clockwise to tighten.
9. Turn on water supply by rotating blue lever the water shutoff valve 90 degrees counter-clockwise so lever is parallel to tubing.
10. Turn on electrical power to the unit using the rectangular rocker switch.
11. When power is restored, the unit will start an automatic flush sequence to remove air from the system.
12. After filter flush is complete, close filter access door and reinstall mounting screws.

8. Electrical Schematics and Parts List

8.1 Electrical Schematics

115V Refrigerated Wiring Diagram with Alpha/Numeric Display
Connected-Ready - Enhanced Bottle Filler

LZSTL8WSBPRO
LZSTL8WSBPRO - UV
Pro Filtration Bottle Filling
Station Electrical Diagram

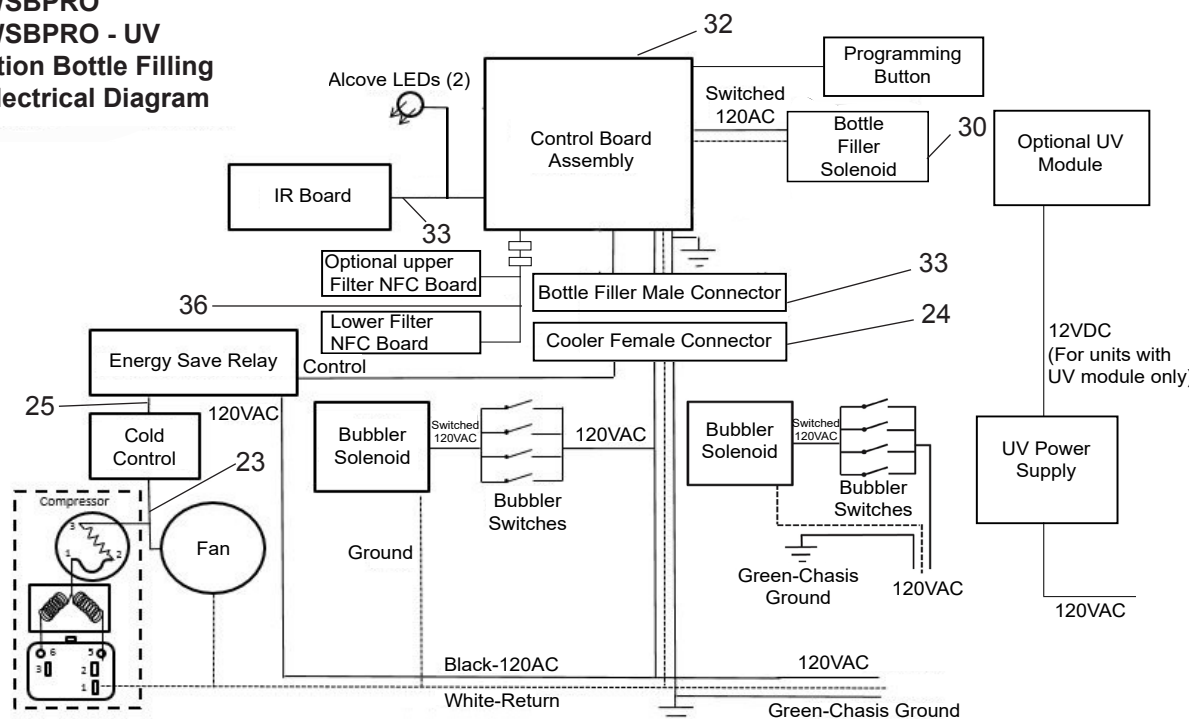


Fig. 16

⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



8.2 Plumbing Diagram

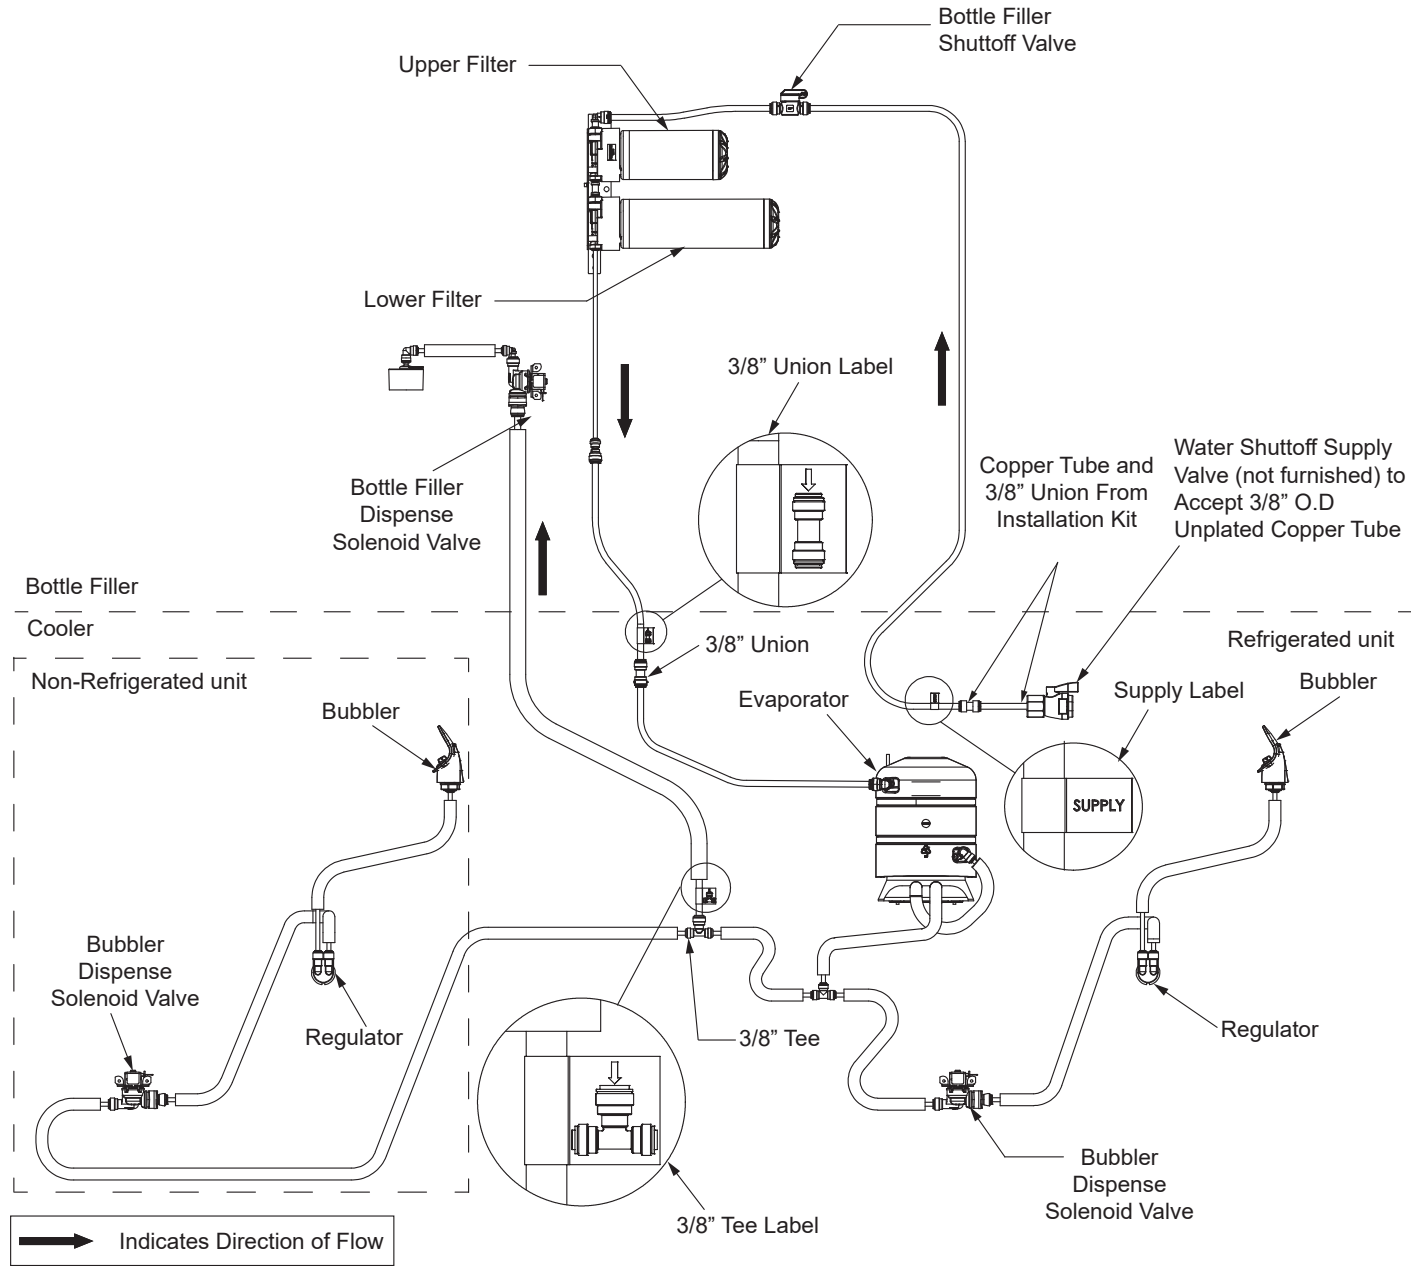


Fig. 17

8.3 Cooler and Bottle Filler Parts List

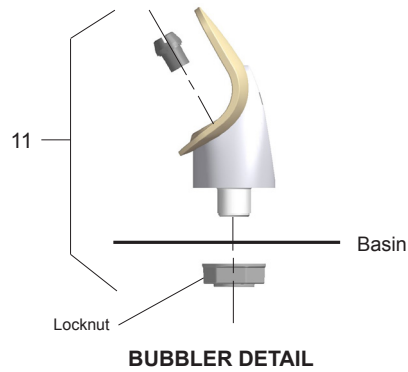


Fig. 18

NOTE:

When installing replacement bubbler and pedestal, tighten nut only to hold parts snug in position. Do Not Overtighten.

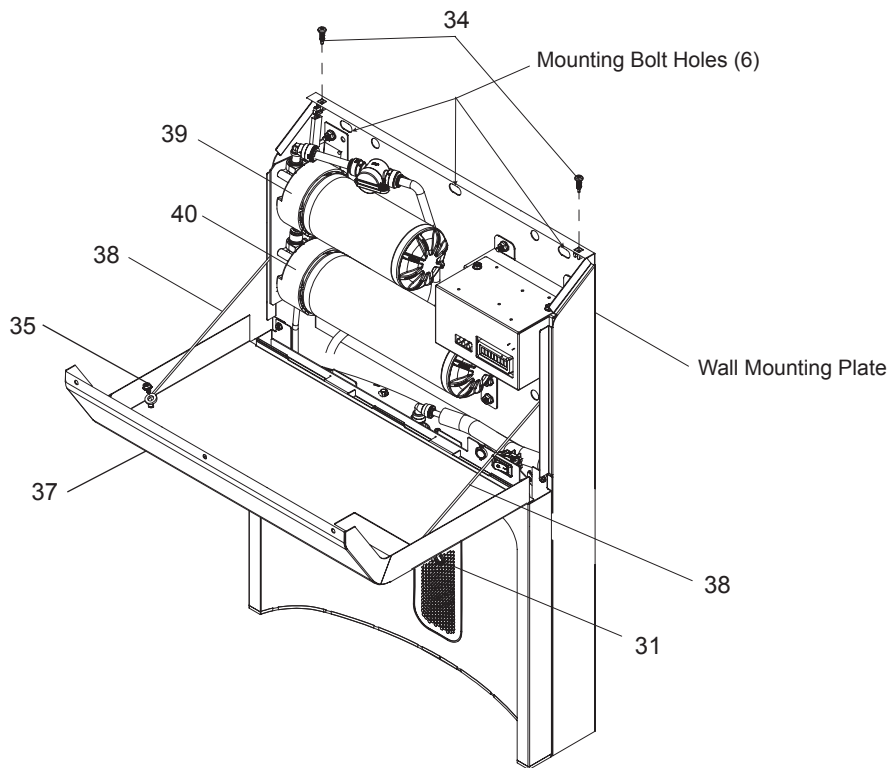


Fig. 19
BOTTLE FILLING UNIT

Pictured is unit only without bottle filler.

Uses HFC-134A refrigerant
 Usa refrigerante HFC-134A
 Utilise du fluide frigorigène HFC-134A

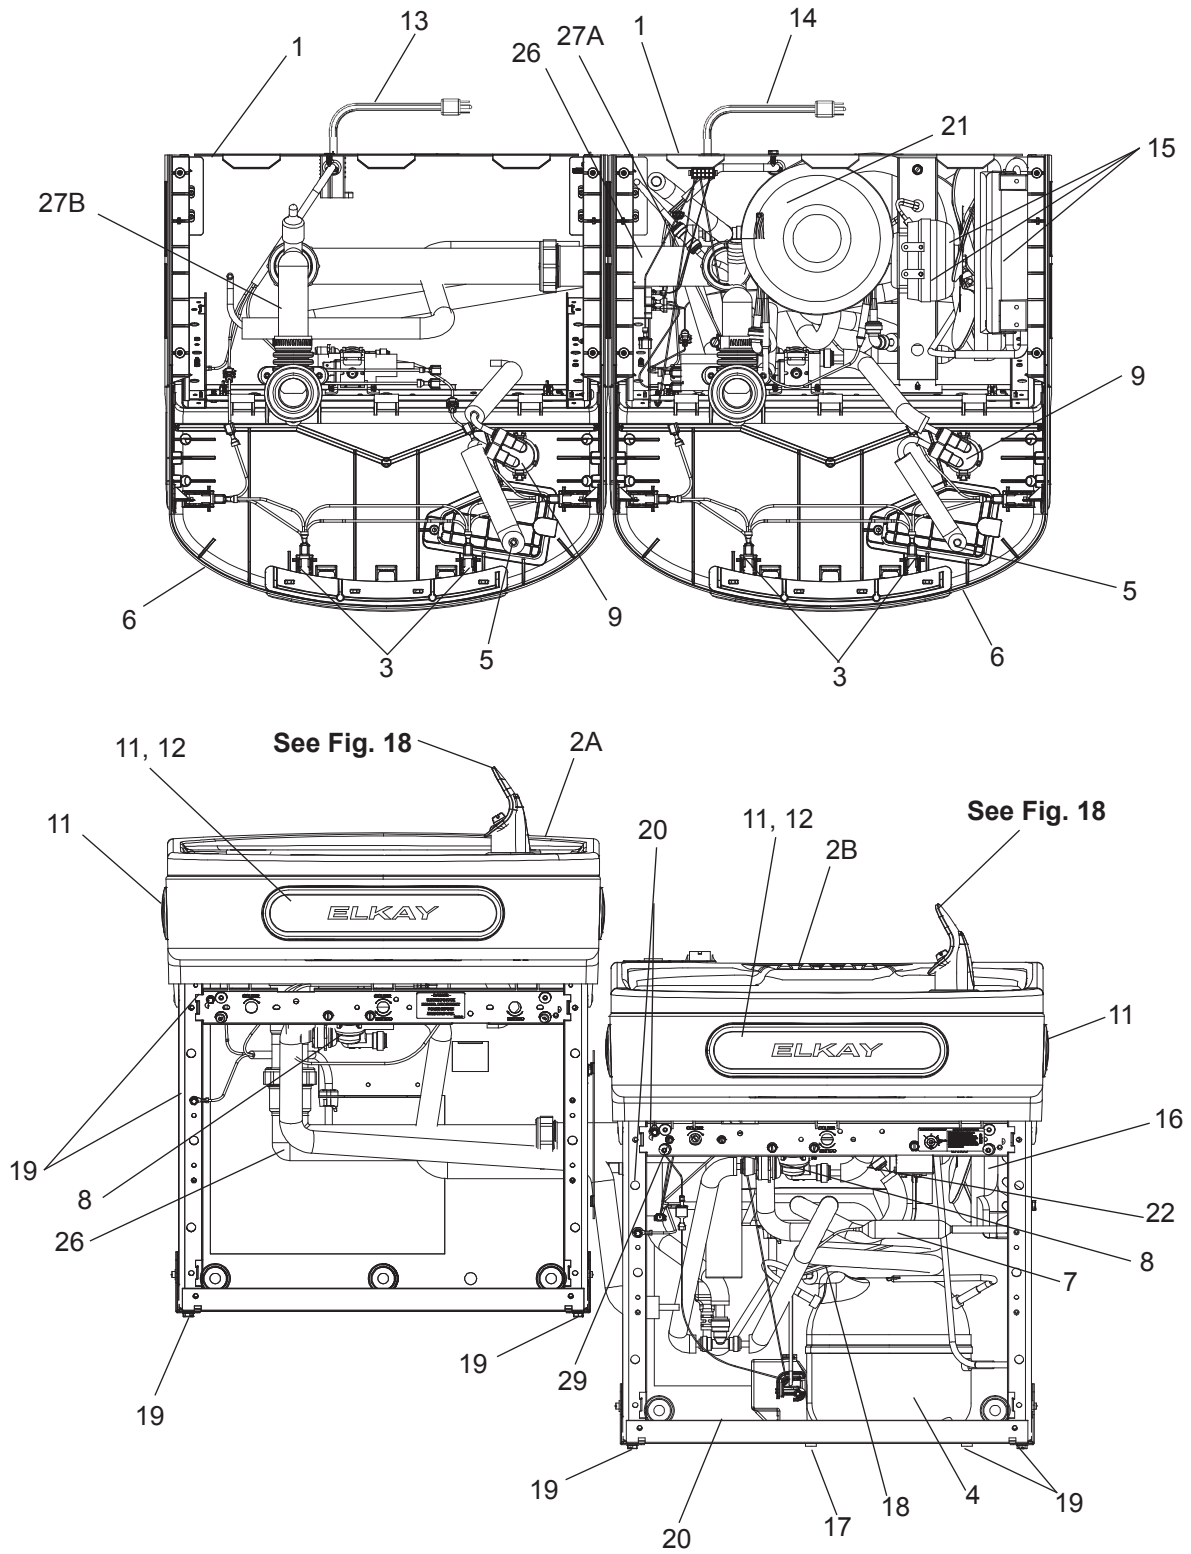


Fig. 20

Refrigerated Unit

Non-Refrigerated Unit

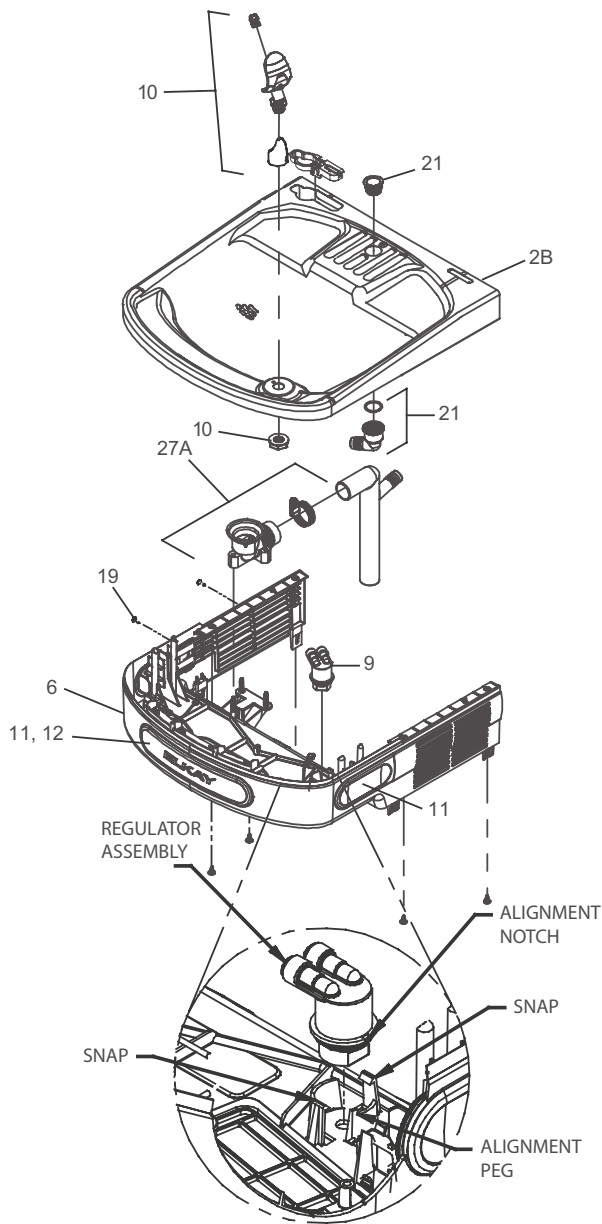


Fig. 21

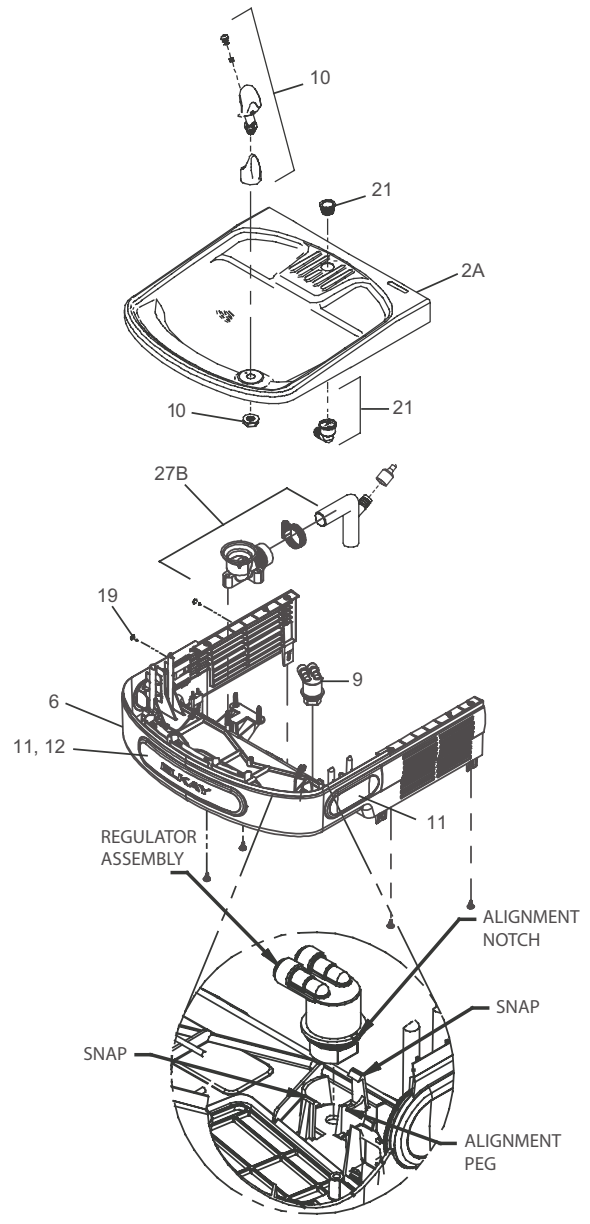


Fig. 22

115V PARTS LIST / LISTA DE PIEZAS DE 115 V / LISTE DES PIÈCES 115 V

ITEM NO.	PART NO.	DESCRIPTION	DESCRIPCIÓN	DESCRIPTION
1	28401C	Hanger Bracket	Soporte colgante	Ferrure de suspension
2A	55001109	Basin - Stainless Steel	Tarja: Acero inoxidable	Cuve - Acier inoxydable
2B	0000001337	Basin - Bottle Filler Stainless Steel	Tarja: Llenadora de botellas de acero inoxidable	Cuve - Remplisseuse de bouteille en acier inoxydable
3	36216C	Wiring - Front/Side Push Bar	Cableado: Barra de empuje delantera y lateral	Câblage - Poussoir frontal/lateral
*4	36322C	Compr - Service Pak 115V EMIS70HHR	Compresor: Paquete de servicio de 115 V EMIS70HHR	Compr - Ens. service 115 V EMIS70HHR
5	56092C	Tube - Poly (Cut To Length)	Tubería: Polietileno (corte a la longitud necesaria)	Tube - Poly (couper à la longueur)
6	2000001859	Assy - Midnight Black Shroud - Upper (Front Side Push)	Conjunto - Cubierta blanca ártica - Superior (Empuje lateral delantero)	Assy - Arceau blanc arctique - Partie supérieure (poussée latérale avant)
7	66703C	Drier	Secador	Déshydrateur
8	1000004572	Kit - Solenoid Valve/Regulator Assembly	Kit - Conjunto de válvula solenoide / regulador	Trousse - Assemblage électrovanne / régulateur
9	1000004564	Kit - Regulator / Holder / Nut	Kit - regulador con soporte y tuerca	Trousse - régulateur avec support et écrou
10	2000002086	Kit - Midnight Black Flexi Bubbler/"O"-Ring/Nut	Kit - Burbuja flexible/junta tórica/tuerca color negro medianoche	Trousse - Bulleur flexible noir minuit/joint torique/écrou
11	2000002076	Kit - Pushbar (Front/Side) TL	Kit - Barra de empuje (Delantera y lateral) TL	Trousse - Poussoir (frontal/lateral) TL
12	2000002078	Kit - Pushbar (Front Only)	Kit - Barra de empuje (Solo delantera)	Trousse - Poussoir (frontal seulement)
13	35980C	Power Cord Non-Refrigerated	Kit - Cable eléctrico L/R	Cordon d'Alimentation L/R
14	1000004568	Power Cord - EZTL8	Cable Elctrico EZTL8	Cordon d'Alimentation EZTL8
NS	1000006146	UV Power Cord	Cable de alimentación ultravioleta	Cordon d'alimentation UV
NS	2000001930	UV Power Supply	Fuente de alimentación ultravioleta	Alimentation UV
15	98775C	Kit - Fan Motor/Blade/Screws/Nut	Kit - Motor del ventilador, aspa, tornillos y tuerca	Trousse - Moteur de ventilateur/pales/vis/écrou
16	98776C	Kit - Condenser/Drier/WireTies	Kit - Condensador/secador/lazos de alambre	Trousse - Statiques/sécheur/Colliers
17	98777C	Kit - Compr Mtg Hdwe/Grommets/ Clips/Studs	Kit - Piezas metálicas de montaje del compresor, arandelas, sujetadores y remaches	Trousse - Visserie fix. compr./œillets/clips/goujons
18	98778C	Kit - Heatx/Drier	Kit - Intercambiador de calor y secador	Trousse - Échangeur chaleur/déshydrateur
19	98898C	Kit - Hardware	Kit - Piezas metálicas	Trousse - Visserie
20	0000000238	Kit - 115V Electricals (Relay, Ovrlid, Cover)	Kit - Eléctrico, relé, sobrecarga y cubierta	Trousse - Élect./relais/antisurcharge/capot
21	98724C	Kit - Evap. Replacement	Kit - Repuesto evaporador	Trousse - Évaporateur de rechange
22	1000001602	Kit - 75583C Elbow 5/16" x 1/4" (3 Pack)	Kit - 75583C Codo 5/16" x 1/4" (Paquete de 3)	Trousse - 75583C Coude 5/16 po x 1/4 po (paq. 3)
23	1000004547	Harness - Cooler	Arnés - Enfriador	Harnais - Glacière
24	1000004550	Wire - 6" Jumper	Cable - Puente de 6 "	Fil - Cavalier de 6 "
25	1000004559	Wire Assy - Jumper	Asamblea de alambre - Puente	Assemblage de fils - Cavalier
26	1000004447	Wasteline Drain Assy	Conjunto de tubería de desagüe BF	Écoulement conduite eau usée BF
27A	98900C	Kit - Drain Replace TL	Kit - Repuesto de desagüe TL	Trousse - Écoulement de rechange TL
27B	97969C	Kit - Drain Replace (TL) LR	Kit - Repuesto de desagüe (TL) LR	Trousse - Écoulement de rechange (TL) LR
28	1000001812	Kit - Bottle Filler Drain	Kit - Desague de la llenadora de botellas	Trousse - Ecoulement remplisseuse de bouteille
29	98773C	Kit - Cold Control	Kit - Control de frío	Trousse - Contrôle du Froid
30	1000004573	Kit - Solenoid Valve 120V (BF)	Kit - Conjunto de válvula solenoide	Trousse - Assemblage électrovanne
31	1000005219	Kit - IR Sensor K+	Kit - Sensor infrarrojo	Trousse - Capteur IR
32	2000001912	Kit - Main Control Board	Kit - Tablero de control principal	Trousse - Tableau de commande principal
33	2000001913	Harness - Bottle Filler	Arnés - Llenadora de botellas	Harnais - Remplisseur De Bouteille
34	2000001218	10-16 Security Torx Screw	Tornillo Torx de seguridad 10-16	Vis Torx de sécurité 10-16
35	2000001932	#6-32 x 1/4 Slotted Indented Hex Washer Head Serrated	Arandela hexagonal con ranura y sangría dentada dentada n.º 6-32 x 1/4	#6-32 x 1/4 Tête de rondelle hexagonale fendue et dentelee
36	2000001955	Harness 2-Filter Y-Cable	Arnés 2-Cable Y de filtro	Câble en Y pour harnais 2 filtres
37	1100000040	Kit - Filter Access Door Replacement	Kit - Reemplazo de la puerta de acceso al filtro	Trousse - Remplacement de la porte d'accès au filtre
38	1100000042	Kit - Tether Replacement Kit	Kit - Kit de reemplazo de correa	Kit - Kit de remplacement d'attache
39	2000002438	Filter Head Module - Upper	Módulo del cabezal del filtro - Superior	Module de tête de filtre - Supérieur
40	2000001485	Filter Head Module - Lower	Módulo del cabezal del filtro - Inferior	Module de tête de filtre - Inférieur
NS	2000002081	Kit - Midnight Black Drop Down Wrapper TL	Kit - Envoltorio desplegable negro medianoche TL	Trousse - Emballage déroulant noir minuit TL
NS	2000002084	Kit - Midnight Black Drop Down Wrapper LZTLD	Kit - Envoltorio desplegable negro medianoche LZTLD	Trousse - Emballage déroulant noir minuit LZTLD
NS	2000002198	Filler - Wrapper (MDNT BLK)	Relleno - Envoltura (MDNT BLK)	Remplissage - Enveloppe (MDNT BLK)
NS	1000001893	Panel - Universal Trim Stainless LZTLD	Panel: Banda universal acero inoxidable LZTLD	Panneau - Garniture universelle inox LZTLD
NS	98546C	Kit - Aerator Replacement	Kit - Repuesto de aireador	Trousse - Aérateur de rechange

NS = Not Shown
NS = No se muestra
NS = Non représenté

***INCLUDES RELAY & OVERLOAD. IF UNDER WARRANTY, REPLACE WITH SAME COMPRESSOR USED IN ORIGINAL ASSEMBLY.**
NOTE: All correspondence pertaining to any of the above water coolers or orders for repair parts MUST include Model No. and Serial No. of cooler, name and part number of replacement part.

***INCLUYE RELÉ Y SOBRECARGA. SI ESTÁ CUBIERTO POR LA GARANTÍA, REEMPLÁCE CON EL MISMO COMPRESOR QUE SE USA EN EL CONJUNTO ORIGINAL.**
NOTA: Toda la correspondencia que guarde relación con los bebedores descritos anteriormente, o los pedidos de piezas de repuesto, DEBEN incluir el n.º de modelo y el n.º de serie del bebedero, nombre y número de pieza del repuesto.

***COMPREND RELAIS ET LIMITEUR DE SURCHARGE. SI SOUS GARANTIE, REMPLACÉ PAR LE MÊME COMPRESSEUR QUE CELUI DE L'APPAREIL D'ORIGINE.**
REMARQUE : Toute correspondance concernant toute fontaine à eau fraîche ci-dessus ou toute commande de pièces détachées devra IMPÉRATIVEMENT inclure le numéro de modèle et le numéro de série de l'appareil, ainsi que le nom et le numéro de pièce des pièces de rechange.

9. Frequently Asked Questions (FAQ)

For FAQ questions refer to the Elkay website elkay.com

FCC COMPLIANCE STATEMENT

CAUTION: Changes or modifications not expressly approved could void your authority to use this equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To ensure compliance with FCC and ISED RF exposure requirements this device must be installed to provide a minimum of 20cm between the device and people.

Pour garantir la conformité aux exigences d'exposition RF de la FCC et d'ISED Canada, cet appareil doit être installé de manière à laisser un minimum de 20 cm entre l'appareil et les personnes.

INDUSTRY CANADA STATEMENT

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.



2000002324

FOR PARTS, CONTACT YOUR LOCAL DISTRIBUTOR OR CALL 1.800.834.4816
PARA PIEZAS, CONTACTE A SU DISTRIBUIDOR LOCAL O LLAME AL 1.800.834.4816
POUR OBTENIR DES PIÈCES, CONTACTEZ VOTRE DISTRIBUTEUR LOCAL OU COMPOSEZ LE 1.800.834.4816

REPAIR SERVICE INFORMATION TOLL FREE NUMBER 1.800.260.6640
NÚMERO GRATIS DE SERVICIO 1.800.260.6640
INFORMATIONS POUR LE SERVICE PAR NUMERO SANS FRAIS 1.800.260.6640

PRINTED IN U.S.A.
IMPRESO EN LOS E.E.U.U.
IMPRIME AUX E.-U.

ELKAY MANUFACTURING Co. • 1333 BUTTERFIELD ROAD SUITE 200 • DOWNERS GROVE, IL 60515 USA • 630.574.8484 • www.elkay.com