

Installation & Maintenance Instructions

3-WAY OR 4-WAY, 2 POSITION SINGLE OR DUAL SOLENOID VALVES
 FOR NAMUR ACTUATORS - 1/4 NPT PRESSURE & 1/8 NPT EXHAUST CONNECTIONS
 AIR OR INERT GAS SERVICE – ANODIZED ALUMINUM CONSTRUCTION

SERIES
8551

SERVICE NOTICE

Except for coil replacement, the Series 8551 are not repairable. When any performance problems are detected during routine inspection, replace valve immediately. For catalog numbers prefixed WT or EF, see separate solenoid installation and maintenance instructions for information on: Wiring, Solenoid Temperature, Cause of Improper Operation and Coil Replacement.

DESCRIPTION


Series 8551 valves are 3-way or 4-way, 5 ported 2 position piloted spool type single or dual solenoid valves designed for air or inert gas service. Valves are made of rugged anodized aluminum. A built-in manual operator allows manual operation when desired or during an electrical power outage. Each valve may be used for 3-way (normally closed) or 4-way operation by using the appropriate flow plate provided. Flow plates are marked (3/2) for 3 Ports, 2 Positions (3-way operation) or (5/2) for 5 Ports, 2 Positions (4-way operation). These valves are supplied with all necessary hardware for a NAMUR direct mount installation i.e. flow plates, gaskets, mounting screws and a locating set screw. See Flow Selection And Mounting section. Valves catalog numbers prefixed SC are supplied with an open-frame spade plug connection coil (3x DIN 46244). A DIN Plug Connector Kit No. K226061-001, is available from ASCO.

APPLICATION

Typically, the 3-way (3/2) normally closed mode is used for a single acting (spring return) actuator; 4-way (5/2) mode for a double acting actuator.

Single-acting actuator
 solenoid spool-valve control adapted for 3/2 operation

Double-acting actuator
 solenoid spool-valve control adapted for 5/2 operation

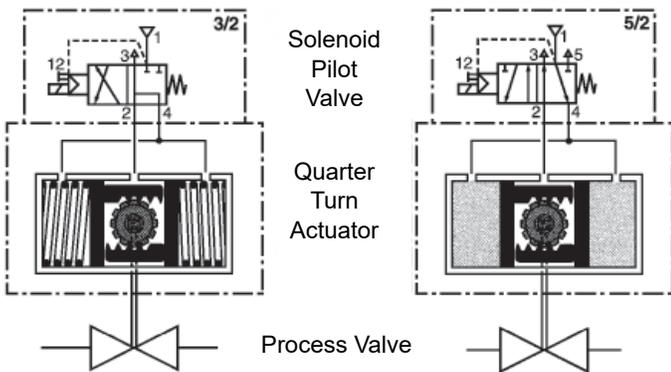

Port Markings: 1 = Pressure 2 & 4 = Cylinder
 3 & 5 = Exhaust

OPERATION

IMPORTANT: Minimum operating pressure differential 30 psi; maximum 150 psi.

Breather Function 3-way (3/2) mode only: Allows for spring side of a spring return actuator to vent at all times through valve exhaust port 3.


Single Solenoid: This type of operation is used where automatic return of the valve on electrical power failure or loss of main line pressure is required.

3-Way NC Single Solenoid Operation

Solenoid De-energized: Flow is from port 2 to port 3. Port 4 is open to exhaust port 3 (breather function); pressure port 1 is closed Slight pilot exhaust is also apparent. Port 5 is not used.

Solenoid Energized: Flow is from pressure port 1 to port 2. Port 4 is open to exhaust port 3 (breather function); pilot exhaust is closed.

3-Way Single Solenoid (3/2)

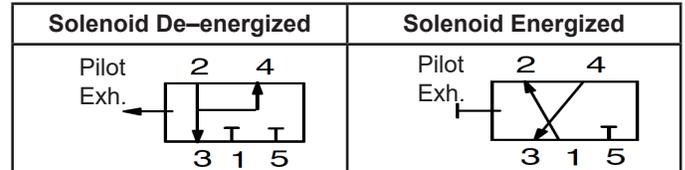


4-Way Single Solenoid Operation

Solenoid De-energized: Flow is from pressure port 1 to port 4 and from port 2 to port 3. Port 5 is closed. Slight pilot exhaust is also apparent.

Solenoid Energized: Flow is from pressure port 1 to port 2 and from port 4 to port 5. Port 3 and pilot exhaust are closed.

4-Way Single Solenoid (5/2)

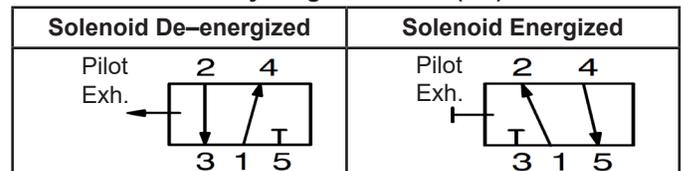

Dual Solenoids: Solenoid may be energized momentarily or continuously depending upon application. Dual solenoid valves are used where equipment must not change position when electrical power fails. Valve operates when one solenoid is energized and returns when the other solenoid is energized.

CAUTION: Do not energize solenoids A and B simultaneously, as this will cause valve to malfunction.

ATTENTION: Ne pas alimenter en tension les bobines A et B simultanément car cela pourrait entraîner un dysfonctionnement de la vanne.


IMPORTANT: Minimum on time for each solenoid is 0.3 seconds.

3-Way NC Dual Solenoid Operation

Solenoid A Last Energized: Flow is from pressure port 1 to port 2. Port 4 is open to exhaust port 3 (breather function). Slight pilot exhaust is apparent when solenoid A is de-energized. Port 5 is not used.

Solenoid B Last Energized: Flow is from pressure 2 to port 3. Port 4 is open to exhaust 3 (breather function); pressure port 1 is closed. Slight pilot exhaust is apparent when solenoid B is de-energized.

3-Way Dual Solenoid (3/2)

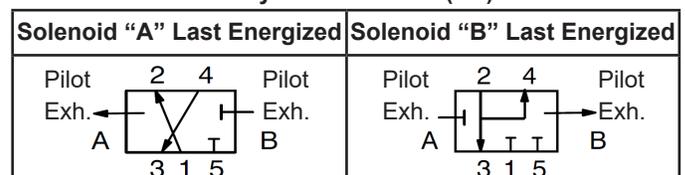


4-Way Dual Solenoid Operation

Solenoid A Last Energized: Flow is from pressure port 1 to port 2 and from port 4 to port 5. Port 3 is closed. Slight pilot exhaust apparent when solenoid A is de-energized.

Solenoid B Last Energized: Flow is from pressure port 1 to port 4 and from port 2 to port 3. Port 5 is closed. Slight pilot exhaust apparent when solenoid B is de-energized.

4-Way Dual Solenoid (5/2)

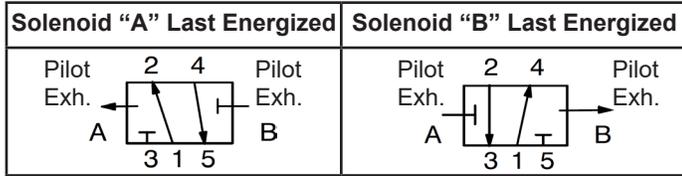

Manual Operator

Manual operator provides manual operation when desired or during an electrical power outage. To engage manual operator, rotate screw clockwise as far as possible to "1". Valve will now be in the same position as when the solenoid is energized. To disengage manual operator, rotate screw counterclockwise as far as possible to "0".

CAUTION: To prevent malfunction be sure to turn screw counterclockwise to "0" before operating valve electrically

ATTENTION: Pour éviter tout dysfonctionnement, assurez-vous de tourner la vis dans le sens inverse des aiguilles d'une montre sur "0" avant de faire fonctionner la vanne électriquement.

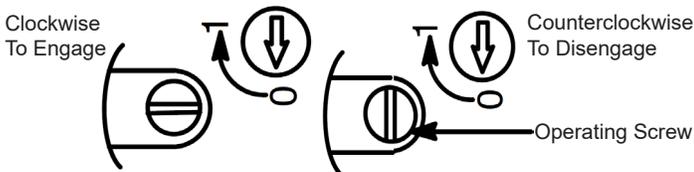


Figure 1. Manual Operator (partial view).

Metering Device with Filter for 1/8 NPT Connections (Optional Feature)

These metering devices can be used to vary the operating speed of the actuator/cylinder this valve is piloting. Install metering devices in 1/8 NPT exhaust connection and tighten securely. Install a metering device in port 3 and port 5 of 4-way (5/2) valves only. Because of the breather function, the use of a metering device is not recommended for the 3-way (3/2) mode.

Metering Device Adjustment:

- Loosen Locknut on adjusting screw.
- Turn adjusting screw clockwise (to reduce flow) as far as possible.
- Turn adjusting screw counterclockwise (to increase flow) no more than two turns.
- Tighten locknut using 13 mm wrench.

IMPORTANT: The steps above provide only a rough adjustment of the metering device. Final adjustments must be made with valve fully pressurized in the line of final application.

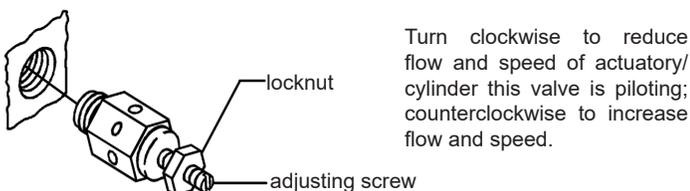


Figure 2. Metering Device (partial view).

INSTALLATION

Check nameplate for correct catalog number, pressure, voltage, frequency, and service. Never apply incompatible fluids or exceed pressure rating of the valve. Installation and valve maintenance to be performed by qualified personnel.

WARNING: To prevent the possibility of electrical shock from the accessibility of live parts, install the open-frame solenoid in a suitable enclosure.

AVERTISSEMENT: Pour éviter tout risque d'électrocution dû à l'accessibilité aux parties actives, installez la bobine à cadre ouvert dans un boîtier approprié.

Future Service Considerations

Provision should be made for performing seat leakage, external leakage, and operational tests on the valve with a nonhazardous, noncombustible fluid.

Temperature Limitations

For valve ambient and fluid temperature ranges, refer to chart following. Check watt rating on nameplate.

Watt Rating AC/DC	Catalog Number Prefix	Valve Ambient And Fluid Temperature Range
2.5 & 3 AC & DC	SC	5°F to 140°F (-15°C to 60°C)
6.3 AC	WT	5°F to 140°F (-15°C to 60°C)
	EF	5°F to 104°F (-15°C to 40°C)
6.9 DC	WT or EF	5°F to 125°F (-15°C to 52°C)

NOTE: For temperatures below 32°F (0°C) moisture-free air must be used.

Positioning

Valve may be mounted in any position.

Flow Selection and Mounting

Each valve is provided with two flow plates or one universal flow plate.

- Two Flow plates:** (Refer to Figure 3)

Flow plates are marked (3/2) for 3-way or (5/2) for 4-way. For proper orientation of the flow plate, the marking (3/2) or (5/2) must be opposite series number 8551 flow diagram label on valve body or facing solenoid "B" for dual solenoid construction. See Figure 3, for proper orientation of flow plate, gaskets, mounting screws and locating set screw. Then proceed as follows:

- If required, install locating set screw using a 2 mm hex key wrench.
- Install Port 2 and Port 4 gaskets and flow gasket on flow plate.
- Position flow plate and solenoid valve on actuator. Then install two socket head cap screws in offset center holes on either side. Hand thread screws a few turns into actuator. Then tighten screws evenly using a 4 mm hex key wrench.

NOTE: Three sets of mounting screws are provided, sizes: M5, .190-24 UNC-2A and .190-32 UNF-2A.

- One Universal Flow plate:** (Refer to Figure 4)

Flow plate is marked (3/2) for 3-way or (5/2) for 4 way. For proper orientation of the flow plate, the marking (3/2) or (5/2) must be opposite series number 8551 flow diagram label on valve body or facing solenoid "B" for dual solenoid construction. See figure 4, for proper orientation of flow plate, gaskets, mounting screws and locating set screw. Then proceed with steps 1 through 3 above for two flow plates.

Piping

There is pilot exhaust from the top of the solenoid when the solenoid is de-energized. The pilot exhaust may be connected to the main exhaust if the air or inert gas cannot be exhausted directly to the atmosphere. An exhaust protector is provided in the top of the plugnut/core tube assembly to prevent debris from entering pilot exhaust.

Connect piping or tubing to valve according to markings on valve body. Refer to flow diagrams in **OPERATION** section. Apply pipe compound sparingly to male pipe threads only. If applied to valve threads the compound may enter the valve and cause operational difficulty. Avoid pipe strain by properly supporting and aligning piping. When tightening the pipe, do not use valve or solenoid as a lever. Locate wrenches applied to valve body or piping as close as possible to connection point.

⚠ CAUTION: To avoid damage to the valve body, DO NOT OVERTIGHTEN PIPE CONNECTIONS. If PTFE tape, paste, spray or similar lubricant is used, use extra care when tightening due to reduced friction.

⚠ ATTENTION: Pour éviter d'endommager le corps de la vanne, NE PAS TROP SERRER LES RACCORDS DES TUYAUTERIES. Si vous utilisez un ruban en PTFE, de la pâte, un spray ou un lubrifiant similaire, faites particulièrement attention lors du serrage en raison de la réduction des frottements.

NOTE: The exhaust and/or pressure lines may be restricted to control cylinder speed on 4-way (5/2) mode only.

⚠ CAUTION: To protect the solenoid valve, install a strainer or filter, suitable for the service involved, in the inlet side as close to the valve as possible. Clean periodically depending on service conditions. See ASCO Series 8600 and 8601 for strainers.

⚠ ATTENTION: Pour protéger l'électrovanne, installez une crépine ou un filtre, adapté au service concerné, du côté de l'entrée le plus près possible de la vanne. Nettoyer périodiquement en fonction des conditions de service. Voir les séries ASCO 8600 et 8601 pour les crépines.

Wiring

Wiring must comply with local codes and the National Electrical Code. The open-frame solenoid may be rotated 360°. The open-frame solenoid is provided with 1/4" spade terminals and a grounding spade terminal connection.

NOTE: Valves can be converted from alternating current (AC) to direct current (DC), or vice-versa, by changing the coil.

Solenoid Temperature

Series 8551 valves are supplied with coils designed for continuous duty service. When the solenoid is energized for a long period, the solenoid coil becomes hot and can be touched with the hand only for an instant. This is a safe operating temperature. Any excessive heating will be indicated by the smoke and odor of burning coil insulation.

MAINTENANCE

⚠ WARNING: To prevent the possibility of death, serious injury or property damage, turn off electrical power, depressurize valve, and vent fluid to a safe area before inspecting or servicing the valve.

⚠ AVERTISSEMENT: Pour éviter tout risque de mort, de blessure grave ou de dommage matériel, coupez l'alimentation électrique, dépressurisez la vanne et évacuez le liquide vers une zone sûre avant d'inspecter ou d'intervenir sur la vanne.

Preventive Maintenance

- Prepare and follow a routine inspection schedule based on the media, environment, and frequency of use.
- Keep the medium flowing through the valve as free from dirt and foreign material as possible. Depending on medium and service conditions, clean valve strainer or filter as required to keep the valve free of contamination. In the extreme case, contamination will cause faulty valve operation and the valve may fail to shift.
- While in service, the valve should be operated at least once a month to ensure proper operation.

Causes of Improper Operation

- **Incorrect Pressure:** Check valve pressure. Pressure to valve must be within range specified on nameplate.
- **Faulty Control Circuits:** Check the electrical system by energizing the solenoid. A metallic *click* signifies that the solenoid is operating. Absence of the *click* indicates loss of power supply. Check for loose or blown fuses, open-circuited or grounded coil, broken lead wires or splice connections.
- **Burned-Out Coil:** Check for open-circuited coil. Replace coil as necessary. Check supply voltage; it must be the same as specified on nameplate.
- **Low Voltage:** Check voltage across the coil terminals. Voltage must be at least 85% of nameplate rating

Coil Replacement (Refer to Figures 3 and 4)

1. Disconnect grounding and supply wires from coil.
2. Remove retaining clip and slip coil off the plugnut/core tube assembly.
3. Install new coil and replace retaining clip.
4. Make electrical hookup to coil.

ORDERING INFORMATION FOR ASCO COILS OR REPLACEMENT VALVES

When ordering ASCO Coils or Replacement Valves, specify catalog number, voltage frequency and coil number, if possible.

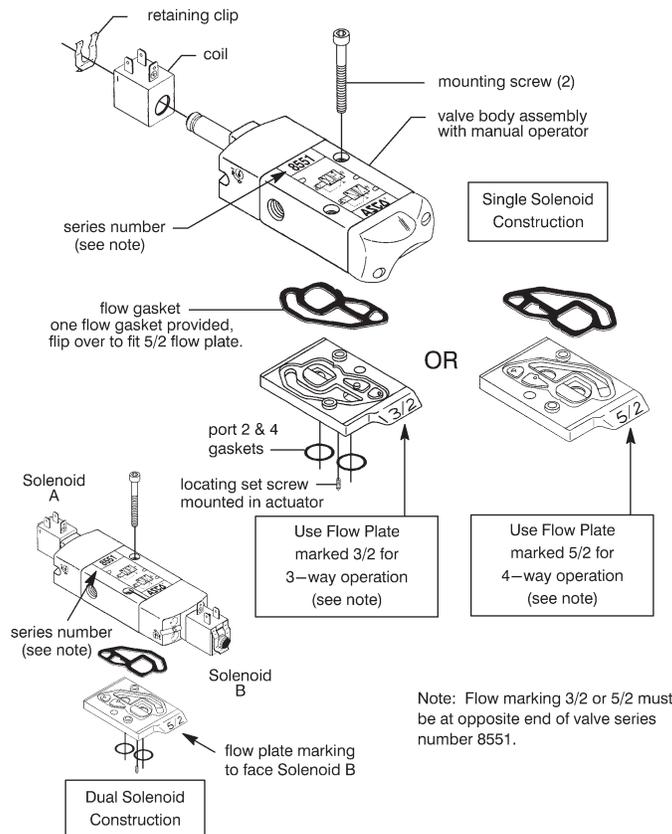


Figure 3. Series 8551 Direct Mount Versions shown with prefix SC coil and Two Flow plates.

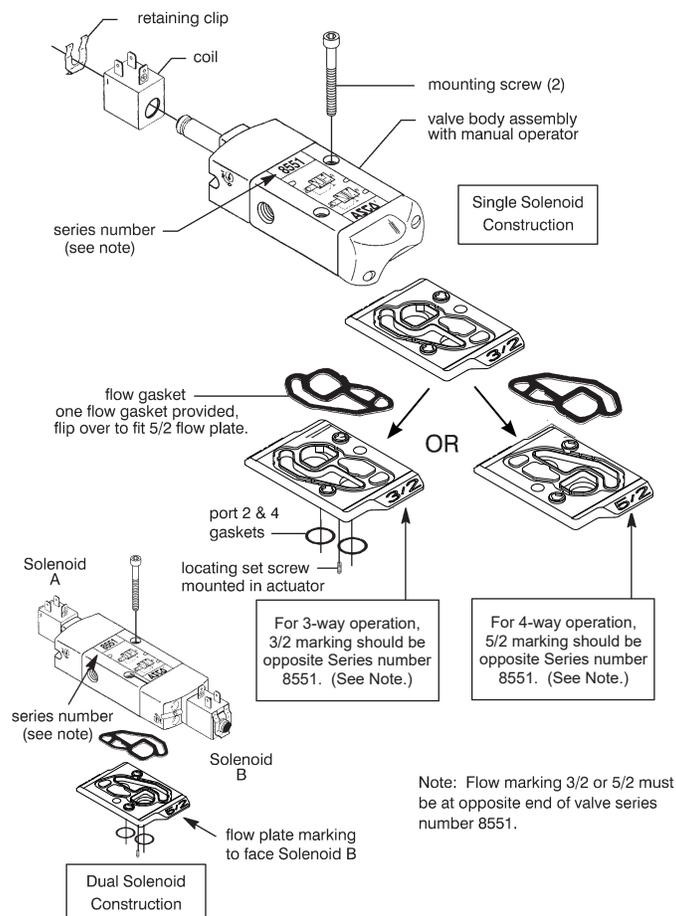


Figure 4. Series 8551 Direct Mount Versions shown with prefix SC coil and Universal Flow plate.