

Detailed Installer Guide

Programmable Thermostat

**PREMIER
SERIES**

5025 Up to 2 Heat / 1 Cool Heat Pump
1 Heat / 1 Cool Conventional
with Humidity Control 

Model number is located on back of thermostat.

- 1 Specifications
- 2 Installation and Wiring
- 3 Quick Reference
- 4 Installer Settings
- 5 System Testing

 **Warning** For installation by experienced service technicians only.

 **Warning** • Possible electric shock or damage to equipment can occur.
• Disconnect power before beginning installation.

This thermostat requires 24 Volt AC Power or 2 properly installed “AA” Alkaline batteries for proper operation. When connecting 24 Volt AC Power the batteries may be installed as a backup.

For use only as described in this manual. Any other use will void warranty.

1 Specifications

This thermostat is compatible with:

- Single stage heat / cool conventional and heat pump systems
- Single stage heat pumps with auxiliary heat
- 250 – 750 millivolt heating only systems
- 2 or 3 wire hydronic zone systems

Electrical and control specifications:

- Electrical Rating: 24 Volt AC
- 1 amp maximum load per terminal
- AC Power: 18 – 30 Volts AC
- DC Power: 3.0 Volt DC
(2 “AA” Alkaline Batteries Included)
- Control Range: 45° - 90° F (7° - 32° C)
- Temperature Accuracy: +/- 1° F (+/- .5° C)
- Outdoor Temperature Display Range: -40° - 120° F (-40° - 49° C)

Terminations

Rc, Rh, W1/E, C, Y1, O/B/V3, G, H/D, S2, S1

Humidification Specifications

- Humidification Control Range: 10% - 50% RH
- Dehumidification Control Range: 40% - 80% RH


2 Installation and Wiring

 **Warning** *Disconnect power before beginning installation.*

Thermostat Location

Install the thermostat approximately 5 feet (1.5m) above the floor in an area that has a good amount of air circulation and maintains an average room temperature.

Avoid installation in locations where the thermostat can be affected by drafts, dead air spots, hot or cold air ducts, sunlight, appliances, concealed pipes, chimneys and outside walls.

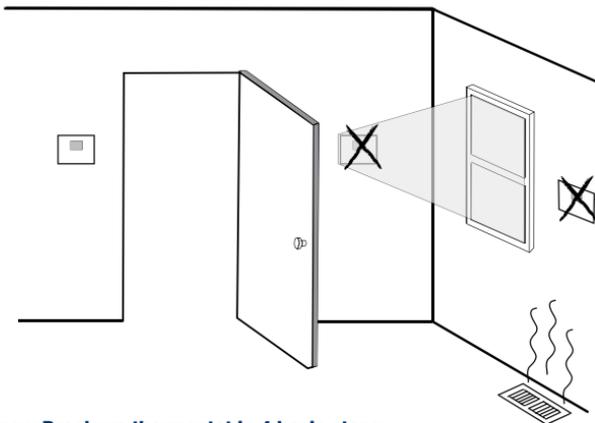


Install your new Braeburn thermostat in 4 basic steps:

- 1 Install the sub-base
- 2 Provide Power
- 3 Connect your wires
- 4 Attach the thermostat to the sub-base


1 Install the Sub-Base:

- Remove the sub-base from the body of the thermostat.
- Mount the sub-base as shown below:

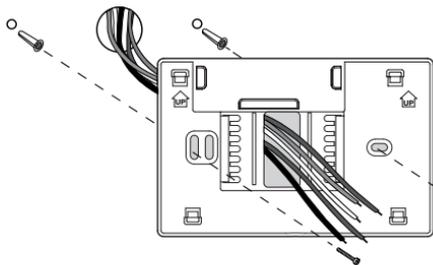


Drill 3/16" pilot holes
in your desired location.
Use supplied anchors for
drywall or plaster.

2 Provide Power

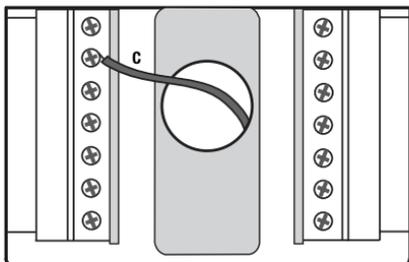

24VAC Power Terminal (C)

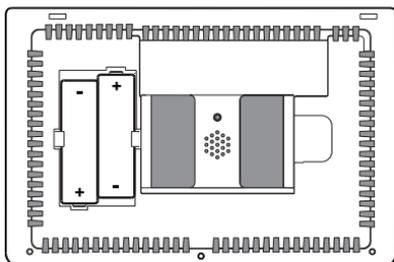

Batteries Installed as Shown

- For 24 Volt AC power, you must connect the common side of the transformer to the C terminal on the thermostat sub-base. In dual transformer installations, the transformer common must come from the cooling transformer.
- For battery power, insert the 2 supplied “AA” type alkaline batteries into the battery compartment located in the rear housing of the thermostat. Make sure to position the Positive (+) and Negative (-) sides of the batteries correctly with the +/- symbols in the battery compartment.

3 Connecting Your Wires

Wiring Terminations

| Terminal | Function | Description |
|------------|----------|---|
| Rc | Input | 24 Volt AC Cooling Transformer (Dual Transformer Systems Only) |
| Rh | Input | Power Connection (24 Volt AC Heating Transformer or Millivolt Power Source) |
| G | Output | Fan Control |
| W1 / E | Output | (W1) Conventional Heat Relay (E) Auxiliary/Emergency Heat |
| O / B / V3 | Output | (O) Cool Active Reversing Valve (B) Heat Active Reversing Valve (V3) Zone Valve Power Close |
| Y1 | Output | Compressor Relay |
| H/D | Output | (H) Humidification Relay (D) Dehumidification Relay |
| C | Input | 24 Volt AC Transformer Common |
| S1 | Input | Optional Remote Sensor (indoor or outdoor) |
| S2 | | |

Conventional Systems

Typical Wiring Configurations

NOTE: The "System Type" option will be configured in the Installer Settings section.

Heat Only or Millivolt

Set System Type to **11CONV**

| | |
|-----------|---|
| Rh | Power Connection [note 2] |
| W1 | Heat Relay |
| G | Fan Relay [note 4] |
| C | 24 Volt AC Transformer Common [note 1, 3] |

Hydronic Heat Only

Set System Type to **1HD**

| | |
|-----------|---|
| Rh | 24 Volt AC Power (heating transformer) [note 2] |
| W1 | Zone Valve Power Open |
| V3 | Zone Valve Power Close |
| G | Fan Relay [note 4] |
| C | 24 Volt AC Transformer Common [note 1] |

Hydronic Heat / 1 Cool

Set System Type to **11HD**

| | |
|-----------|---|
| Rh | 24 Volt AC Power (heating transformer) [note 2] |
| Rc | 24 Volt AC Power (cooling transformer) [note 2] |
| W1 | Zone Valve Power Open |
| V3 | Zone Valve Power Close |
| Y1 | Compressor Relay |
| G | Fan Relay (cooling fan only) |
| C | 24 Volt AC Transformer Common [note 1, 3] |

1 HEAT / 1 COOL Single or Dual Transformer

Set System Type to **11CONV**

| | |
|-----------|---|
| Rh | 24 Volt AC Power (heating transformer) [note 2] |
| Rc | 24 Volt AC Power (cooling transformer) [note 2] |
| W1 | Heat Relay |
| Y1 | Compressor Relay |
| G | Fan Relay |
| C | 24 Volt AC Transformer Common [note 1, 3] |

NOTES - Conventional Systems

- [1] Optional 24 Volt AC common connection.
- [2] Only remove factory installed jumper for dual transformer systems.
- [3] In dual transformer systems, transformer common must come from cooling transformer.
- [4] If needed for system.

Provide disconnect and overload protection as required.

Heat Pump Systems - Typical Wiring Configurations

NOTE: The “System Type” option will be configured in the Installer Settings.

1 HEAT / 1 COOL - No Auxiliary Heat

Set System Type to **11HP**

| | |
|------------|---|
| Rh | 24 Volt AC Power |
| Rc | Connected to Rh with supplied Jumper Wire |
| O/B | Changeover Valve [note 2] |
| Y1 | Compressor Relay |
| G | Fan Relay |
| C | 24 Volt AC Transformer Common [note 1] |

2 HEAT / 1 COOL - Including Auxiliary Heat

Set System Type to **21HP**

| | |
|------------|--|
| Rh | 24 Volt AC Power |
| Rc | Connected to Rh with supplied Jumper Wire |
| O/B | Changeover Valve [note 2] |
| Y1 | Compressor Relay (1st stage heating/cooling) |
| E | Auxiliary/Emergency Heat Relay [note 5] |
| G | Fan Relay |
| C | 24 Volt AC Transformer Common [note 1] |

NOTES - Heat Pump Systems

- [1]** Optional 24 Volt AC common connection.
- [2]** O (cool active) or B (heat active) is selected in the Installer Settings menu.
- [3]** Install a field supplied jumper between the W2 and W1/E/W3 terminals if there is no separate emergency heat relay installed.
- [4]** If the L terminal is used, the 24 Volt AC common must be connected (C terminal).
- [5]** If a separate emergency heat relay is installed, the W1/E terminal should have both the auxiliary heat 1 relay and emergency heat relay connected.

Provide disconnect and overload protection as required.

Additional Wiring Options


NOTE: Additional options are configured in the Installer Settings section.

| | |
|------------|---|
| S1 | Indoor or Outdoor Remote Sensor [note 1] |
| S2 | |
| H/D | Humidification or Dehumidification Output [note 2] |

NOTES - Additional Wiring Options

- [1]** These terminals can be used to connect a Braeburn® indoor or outdoor remote sensor.
- [2]** This terminal can be used to connect to an external Humidifier or Dehumidifier. This is not a dry contact. See Installer Settings to configure this terminal.

4 Attach Thermostat to Sub-Base

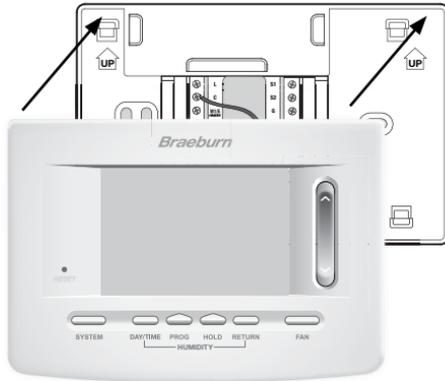


- 1) Line up the thermostat body with the sub-base.
- 2) Carefully push the thermostat body against the sub-base until it snaps in place.



- 3) Insert Quick Reference Card into slot on top of thermostat.

NOTE: This thermostat ships configured as a 1H/1C conventional thermostat. Confirm installer settings. See page 9.

3 Quick Reference

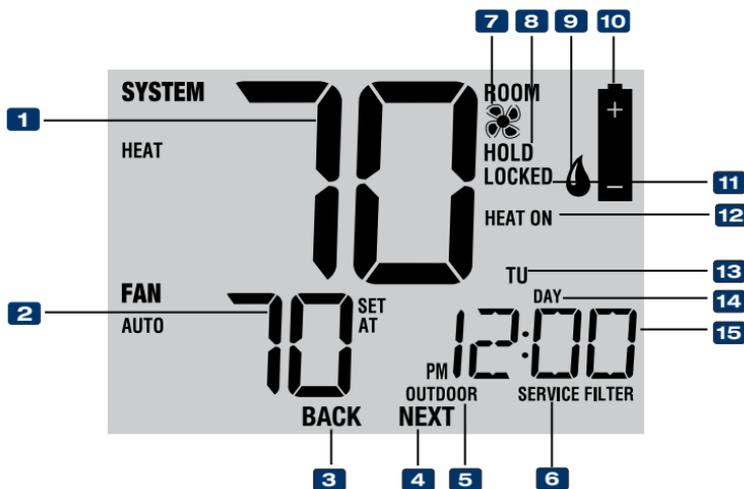

Thermostat Display

- 1** Room Temperature Displays the current room temperature
- 2** Set Temperature Displays the current set point temperature
- 3** BACK Indicator* BACK button is active
- 4** NEXT Indicator* NEXT button is active
- 5** Outdoor Temperature Indicator ... Displays along with the outdoor temperature reading**
- 6** Service Indicators Displays various service/maintenance information
- 7** Fan Indicator Indicates when the system fan is running
- 8** Hold Mode Indicator Indicates if the thermostat is in HOLD mode
- 9** Humidity Indicator Indicates when there is a call for humidity
- 10** Low Battery Indicator Indicates when the batteries need to be replaced
- 11** Lock Mode Indicator Indicates if the thermostat is locked
- 12** System Status Indicator Displays information about the status of the system
- 13** Day of the Week Displays the current day of the week
- 14** Program Event Indicator Displays the program event
- 15** Time of Day Displays the current time of day

* **BACK** and **NEXT** are secondary functions of the **PROG** and **HOLD** buttons. When in programming or configuration modes, **BACK** and **NEXT** appear in the display screen indicating that the **PROG** and **HOLD** buttons now function as **BACK** and **NEXT**.

** Also see #10 on page 8.

3 Quick Reference



Thermostat


- 1** **Reset Button** Resets current time, program and user settings
 - 2** **SYSTEM Button**..... Selects the system you want to control
 - 3** **DAY/TIME Button** Sets the current time and day of the week
 - 4** **PROG Button** Selects programming mode or press for 3 seconds to select SpeedSet®
 - BACK Button***..... Secondary function of the PROG button - moves back a setting
 - 5** **HOLD Button** Enters/Exits the HOLD mode (program bypass)
 - NEXT Button***..... Secondary function of the HOLD button - moves to next setting
 - 6** **RETURN Button**..... Returns to normal mode from program or setting modes
 - 7** **FAN Button**..... Selects the system fan mode
 - 8** **Quick Reference Instructions** Stored in slot located at top of thermostat
 - 9** **SpeedBar®** Increases or decreases settings (time, temperature, etc.)
 - 10** **Outdoor Temperature** If a Braeburn® outdoor sensor was connected you can view the outdoor temperature by pressing the **PROG** and **HOLD** buttons at the same time.
 - 11** **Humidity** View current room humidity or change humidification or dehumidification setpoint.
- Installer Clear Button** Located on back of thermostat body - clears all settings
- Battery Compartment**..... Located in the back of thermostat

* **BACK** and **NEXT** are secondary functions of the **PROG** and **HOLD** buttons. When in programming or configuration modes, **BACK** and **NEXT** appear in the display, indicating that the **PROG** and **HOLD** buttons now function as **BACK** and **NEXT**.

4 Installer Settings

The Installer Settings must be properly configured in order for this thermostat to operate correctly. The Installer Settings are menu driven. The portion of these settings that do not apply to your setup will be skipped. These settings are indicated below with comments. More detail on each setting follows this table.

1. Press and hold down the **RETURN** and **V** buttons for 3 seconds.
2. Release both buttons and the first installer setting will be displayed.
3. Change settings as required using the **▲** or **▼** portion of the SpeedBar®.
4. Press **NEXT** (HOLD) or **BACK** (PROG) to move to the next or previous setting, press **RETURN** to exit.

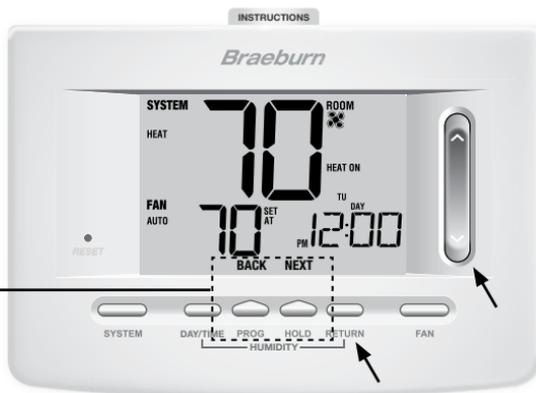

| No. | Installer Setting (Notes follow this table) | Factory Default | Setting Options | Comments (More information follows this table) |
|-----|--|-----------------|---|--|
| 1 | Residential or Commercial Profile | RES | RES COMM | Select for Residential profile Select for Commercial profile |
| 2 | Programming Mode [note 1] | 7PROG | 7PROG 52PROG NO PROG | Select for 7 day programming mode Select for 5-2 day programming mode Select for non-programmable mode |
| 3 | Clock Format | 12 HR | 12 HR 24 HR | Select for 12 hour clock Select for 24 hour clock |
| 4 | Temperature Scale | F DEG | F DEG C DEG | Select for Fahrenheit display Select for Celsius display |
| 5 | Auto Changeover | OFF AUTO | OFF AUTO ON AUTO | Disables Auto Changeover mode Enables Auto Changeover mode |
| 6 | System Type | 11CONV | 11CONV 11HP 21HP 1HD 11HD | Select for 1H/1C Conventional system Select for 1H/1C Heat Pump system Select for 2H/1C Heat Pump system Select for Heat Only Hydronic system Select for Hydronic Heat/1C system |
| 7 | 1st Stage Differential | 0.5 DIF1 | 0.5, 1.0 or 2.0 DIF1 | Select a 1st stage temperature differential of .5°, 1° or 2° F (0.2°, 0.5° or 1.0° C) |
| 8 | 2nd Stage Differential [note 2] | 2.0 DIF2 | 1.0, 2.0, 3.0, 4.0, 5.0 or 6.0 DIF2 | Select a 2nd stage temperature differential of 1°, 2°, 3°, 4°, 5° or 6° F (0.5°, 1.0°, 1.5°, 2.0°, 2.5° or 3.0° C) |

| No. | Installer Setting (Notes follow this table) | Factory Default | Setting Options | Comments (More information follows this table) |
|-----|--|-----------------|----------------------------|--|
| 9 | 1st Stage Fan Control [note 3] | HG FAN 1 | HG FAN 1 HE FAN 1 | Select for 1st stage Gas heating Select for 1st stage Electric heating |
| 10 | Emergency Heat] Fan Control [note 2] | HE EMER | HE EMER HG EMER | Select for Electric Emergency Heat Select for Gas Emergency Heat |
| 11 | Reversing Valve (O/B Terminal) [note 4] | REVO | REVO REVB | Select for cool active Reversing Valve (O terminal) Select for heat active Reversing Valve (B terminal) |
| 12 | Fossil Fuel Backup Heat [note 2] | RE AUX | RE AUX AG AUX | Select for Electric Auxiliary heat (with compressor) Select for Gas Auxiliary heat (without compressor) |
| 13 | Compressor Power Outage Protection [notes 2, 5] | oF CPOP | oF CPOP oN CPOP | Disables Power Outage Lockout Delay Enables Power Outage Lockout Delay |
| 14 | AC Power Interrupt Warning [note 5] | AC oF MONR | AC oF MONR AC oN MONR | Disables AC Power Interrupt Warning Enables AC Power Interrupt Warning |
| 15 | Compressor Short Cycle Protection [note 6] | 5 CSCP | 5, 4, 3, 2 or 0 CSCP | Select a compressor short cycle protection delay of 5, 4, 3, 2 or 0 minutes |
| 16 | Residual Cooling Fan Delay [note 6] | 60 FAN | 90, 60, 30 or 0 FAN | Select a Residual Cooling Fan Delay of 90, 60, 30 or 0 seconds. |
| 17 | Circulating Fan Lock | oF CIRC | oF CIRC oN CIRC | Disables Circulating Fan Lock mode Enables Circulating Fan Lock mode |
| 18 | Adaptive Recovery Mode (ARM™) [note 7] | oF REC | oF REC oN REC | Disables Adaptive (early) Recovery mode Enables Adaptive (early) Recovery mode |
| 19 | Indoor Remote Sensor Control* [note 8] | 1 SENS | 1 SENS E SENS A SENS | Temperature is sensed from thermostat only. Temperature is sensed from remote sensor only. Temperature is combined with the thermostat and the remote sensor. |
| 20 | Lockout Security Level | 2 LOCK | 2 LOCK 1 LOCK | If locked – Complete lockout is enabled If locked – Partial lockout is enabled (SpeedBar® is still functional) |
| 21 | Humidification | OFF | OFF DEP IND | Disables Humidification Enables Dependent Humidification Enables Independent Humidification |
| 22 | Auto Humidity Set Point Limit [note 10] | AUTO | AUTO MAN | Maximum humidity setpoint is limited based on outdoor temperature. Enables manual humidity control from thermostat. |
| 23 | Dehumidification | OFF | OFF DEP IND | Disables Dehumidification Enables Dependent Dehumidification Enables Independent Dehumidification |
| 24 | Dehumidification Over Cooling Limit [note 11] | 1.0 LIM | 1.0, 2.0 or 3.0 LIM | Select a dehumidification over cooling limit of 1.0°, 2.0° or 3.0° F (.5°, 1.0° or 1.5° C) |
| 25 | Dehumidification Terminal (D) Output [note 12] | NI | NI NA | Selects normally inactive relay (N/O) Selects normally active relay (N/C) |
| 26 | Auto Changeover Dead Band [note 9] | 3 BAND | 2, 3, 4 or 5 BAND | Select a Dead Band of 2°, 3°, 4° or 5° F (1°, 2° or 3° C) for Auto Changeover mode. |

| No. | Installer Setting (Notes follow this table) | Factory Default | Setting Options | Comments (More information follows this table) |
|-----|--|-----------------|-----------------------|--|
| 27 | Compressor Balance Point [notes 2, 10] | NO BRLC | NO BRLC 0-15 BRLC | Disables Balance Points Select a Compressor Balance Point of 0° to 15°F (-18° to 10°C) |
| 28 | Auxiliary Heat Balance Point [notes 2, 10] | NO BRLA | NO BRLA 70-40 BRLA | Disables Balance Points Select a Auxiliary Heat Balance Point of 70° to 40°F (21° to 4°C) |
| 29 | Heat Set Point Upper Limit | 90Liñ | 90-60 Liñ | Select a Heat Set Point Upper Limit of 90° to 60°F (32° to 10°C) |
| 30 | Cool Set Point Lower Limit [note 6] | 45Liñ | 45-80 Liñ | Select a Cool Set Point Lower Limit of 45° to 80°F (7° to 27°C) |

*When a Braeburn® outdoor sensor is connected, the thermostat automatically recognizes it. Press **PROG** and **HOLD** at the same time to display outdoor temperature.

NOTE: Additional options such as Service Monitors, setting the lock code, etc. are located in the User Settings – See User manual for information on setting these options.

NOTES - Installer Settings

- 1 Only available if Residential profile was selected in option 1.
- 2 Only available if a 2 stage system type was selected in option 6.
- 3 Only available if a Conventional system was selected in option 6.
- 4 Only available if a Heat Pump system was selected in option 6.
- 5 Only available if the 24 Volt AC common wire is connected to the C terminal.
- 6 Not available if a heat only hydronic system is selected in option 6.
- 7 Only available if a programmable profile was selected in option 2.
- 8 Only available if a Braeburn® indoor remote sensor was connected.
- 9 Only available if auto changeover was enabled in option 5.
- 10 Only available if a Braeburn outdoor sensor was connected.
- 11 Only available if Dependent Dehumidification was selected in option 23.
- 12 Only available in Independent Dehumidification mode when humidification is disabled.

Detailed Explanation of Installer Settings (also see NOTES above):

- 1 **Profile** – Selects a residential (RES) or commercial (COMM) profile. If residential is selected, 4 programming events per day are available. If commercial is selected, 2 event, 7 day programming is available.
- 2 **Programming Mode [note 1]** – Selects the programming mode, either full 7 day or 5-2 day (weekday/weekend) programming or non-programmable.
- 3 **Clock Type** – Selects either a 12 hour or 24 hour clock.
- 4 **Temperature Scale** – Selects a temperature scale of either °F or °C.
- 5 **Auto Changeover** – Selects auto changeover on or off. When auto changeover mode is enabled and selected, the system automatically switches between heating and cooling modes. There is a 5 minute delay when switching from heating to cooling or cooling to heating in auto changeover mode.
NOTE: Also see “Auto Changeover Dead Band” in option 26.

- 6 System Type** – Selects the system type for your installation. **NOTE:** Changes made to this option will reset options 7 through 15 back to their default values dependent on the system type.
- 7 1st Stage Differential** – Selects a 1st stage temperature differential.
- 8 2nd Stage Differential [note 2]** – Selects a 2nd stage temperature differential.
- 9 1st Stage Fan Control [note 3]** – Selects a 1st stage fan control of either gas or electric heat.
- 10 Emergency Heat Fan Control [note 2]** – Selects emergency heat fan control of either gas or electric heat.
- 11 Reversing Valve [note 4]** – Selects the output state of the O/B terminal. Select O for this terminal to be active in the cool mode or select B for this terminal to be active in the heat mode.
- 12 Auxiliary Fossil Fuel Heat Pump Control [note 2]** – When set to electric (AE AUX), both the compressor (1st stage) and auxiliary stage(s) will run when a call for auxiliary heat is made. When set to gas (AG AUX), the compressor stage(s) will be locked out one minute after a call for auxiliary heat. **NOTE:** This option can be overridden if setting an auxiliary heat balance point in Option 28.
- 13 Compressor Power Outage Protection [notes 2, 5]** – Selects power outage protection on or off. When enabled, this thermostat will provide cold weather compressor protection by locking out the compressor stage(s) of heating for a period of time after a power outage greater than 60 minutes.
- 14 AC Power Interrupt Warning [note 5]** – When enabled, the thermostat will display an outage warning when AC power to the thermostat is lost.
- 15 Short Cycle Protection [note 6]** – Selects the number of minutes the cooling compressor will be locked out after turning off. This short cycle protection is also active in the heat mode if a heat pump system was selected in Option 6.
- 16 Residual Cooling Fan Delay [note 6]** – Selects a delay for the system fan after the cooling compressor has turned off. This delay will help remove the remaining cool air out of the ductwork providing additional efficiency.
- 17 Circulating Fan Lock** – When enabled, the only user fan options available are ON and CIRC (Circulation). The AUTO option is not available with this option enabled.
- 18 Adaptive Recovery Mode (early recovery) [note 7]** – Enables or disables the ARM™ (adaptive recovery mode) feature. During ARM, room temperature is recovered by turning on the heating or cooling before the end of the set back period. The set point temperature is changed to that of the upcoming program temperature.
- 19 Indoor Remote Sensor Control [note 8]** – If a Braeburn® indoor remote sensor is connected during installation, the thermostat will automatically detect the sensor. When an indoor sensor is detected, you may select between thermostat only (I SENS), remote sensor only (E SENS) or combining the thermostat and the remote sensor (A SENS). **NOTE:** This option does not apply to a Braeburn outdoor sensor. When an outdoor sensor is connected the thermostat automatically recognizes it and no further configuration is necessary.
- 20 Lockout Security Level** – Selects the level of keypad lockout when the thermostat is locked. Level 2 locks the entire thermostat (including the front reset button). Level 1 locks everything except the SpeedBar® allowing for up and down temperature adjustment. **NOTE:** The lock code is set in the User Settings mode (see User Manual).

- 21 Humidification Mode** – For use with an external humidifier. Selects between disabling humidification (OFF), dependent control (DEP) or independent control (IND). The DEP setting controls humidification only during a call for heating. The IND setting allows humidification output in the heat mode, but does not require a call for heating. **NOTE:** *It is recommended that the IND setting only be used with systems designed for low air temperature humidification such as steam humidification. Always ensure the heat exchanger or other system parts are not exposed to excess water from condensation or other sources. When there is any doubt, use the OFF or DEP setting.*
- 22 Auto Humidity Set Point Limit [note 10]** – Select between turning the automatic humidity set point limit to auto (AUTO) or manual (MAN). When AUTO is selected, the humidity setpoint maximum is limited based on the outdoor temperature. Selecting MAN allows you to manually control the level of humidity between 10% and 50%.

| Humidification Installer Setting Summary (21-22) | |
|--|--|
| OFF | Humidification feature is disabled (OFF) |
| DEP | Dependent (DEP) mode energizes the H/D terminal during a call for humidification only during a call for heating |
| | AUTO* Maximum humidity setpoint is limited based on outdoor temperature (AUTO) |
| | MAN* Humidity setpoint can be adjusted between 10% and 50% relative humidity (MAN) |
| IND | Independent (IND) mode energizes the H/D terminal and the system fan during a call for humidification |
| | AUTO* Maximum humidity setpoint is limited based on outdoor temperature (AUTO) |
| | MAN* Humidity setpoint can be adjusted between 10% and 50% relative humidity (MAN) |

* Only available if a Braeburn model 5490 outdoor temperature sensor is connected.

- 23 Dehumidification** – Selects between dehumidification disabled (OFF), dependent dehumidification (DEP) or independent dehumidification (IND). (DEP) If the humidity level is above the humidity set point, cooling stays on until the humidity level drops below the set point or when the over cooling limit is reached in installer setting 24. (IND) For use with an external dehumidifier. When the humidity level rises above the dehumidification set point, both the G (Fan) and D terminals are activated.
- 24 Dehumidification Over Cooling Limit [note 11]** – Select the number of degrees the system is allowed to over cool in attempting to reduce humidity.
- 25 Dehumidification Terminal (D) Output [note 12]** – Select normally inactive relay (NI) or normally active (NA) relay for D terminal output in independent dehumidification mode. This setting can also be used for dehumidification fan speed control.

| Dehumidification Installer Setting Summary (23-25) | |
|--|---|
| OFF | Dehumidification feature is disabled (OFF) |
| DEP | Dependent (DEP) mode uses the cooling system for dehumidification and allows you to set an overcooling limit |
| | 1, 2 or 3 LIM An overcooling limit (LIM) can be selected, which will allow the cooling system to run past setpoint 1, 2 or 3 degrees if needed. |
| IND* | Independent (IND) mode energizes the H/D terminal and the system fan during a call for dehumidification |
| | dh NA Normally Active (NA) enables H/D terminal output until a call for dehumidification occurs |
| | dh NI Normally Inactive (NI) enables H/D terminal output during a call for dehumidification |

* Not available if Humidification was enabled in Option 21.

26 Auto Changeover Dead Band [note 9] – When auto changeover mode is enabled in option 5 and selected, the system automatically switches between heating and cooling when the room temperature meets the normal criteria for either a heating or cooling call. There is a forced separation (dead band) between the heating and cooling set points so that the systems do not work against each other. This option selects the amount of this dead band in degrees with the default being 3° F.

| Dehumidification Over Cooling Limit | Allowable Dead Band |
|--|--------------------------------|
| Dehumidification not enabled | 2, 3, 4 or 5° F (1, 2 or 3° C) |
| 1° F (.5° C) | 3, 4 or 5° F (1, 2 or 3° C) |
| 2° F (1.0° C) | 4 or 5° F (2 or 3° C) |
| 3° F (1.5° C) | 5° F (3° C) |

27 Compressor Balance Point [notes 2, 10] – Locks out the use of the compressor heat stage when the outside air temperature is less than the selected setting of 0° F to 15° F (-18° C to 10° C)

28 Auxiliary Heat Balance Point [notes 2, 10] – Locks out the use of the auxiliary heat stage when the outside air temperature exceeds the selected setting of 70° F to 40° F (21° C to 4° C). **NOTE:** *This balance point overrides the fossil fuel compressor lockout in option 13. If this option is set to gas and the outdoor temperature is over the auxiliary balance point, the compressor will remain on during a call for auxiliary heat.*

29 Heat Set Point Upper Limit – Selects the heating set point upper adjustment limit.

30 Cool Set Point Lower Limit [note 6] – Selects the cooling set point lower adjustment limit.

5 System Testing



Warning *Read Before Testing*

- Do not short (or jumper) across terminals on the gas valve or at the heating or cooling system control board to test the thermostat installation. This could damage the thermostat and void the warranty.
- Do not select the COOL mode of operation if the outside temperature is below 50° F (10° C). This could possibly damage the controlled cooling system and may cause personal injury.
- This thermostat includes an automatic compressor protection feature to avoid potential damage to the compressor from short cycling. When testing the system, make sure to take this delay into account.

NOTE: *The compressor delay can be bypassed by pressing the reset button on the front of the thermostat. All user settings will be returned to factory default, however all Installer settings will remain as originally programmed in section 4.*

- 1 Press the **SYSTEM** button until the thermostat is in HEAT mode.
- 2 Using the SpeedBar® raise the set temperature a minimum of 3 degrees above the current room temperature. The system should start within a few seconds. With a gas heating system, the fan may not start right away.
- 3 Press **SYSTEM** until the thermostat is in the OFF mode. Allow the heating system to fully shut down.
- 4 Press **SYSTEM** until the thermostat is in the COOL mode.
- 5 Using the SpeedBar lower the set temperature a minimum of 3 degrees below the current room temperature. The system should start within a few seconds (unless compressor short cycle protection is active – See note above).
- 6 Press **SYSTEM** until the thermostat is in the OFF mode. Allow the cooling system to fully shut down.
- 7 Press **FAN** until the thermostat is in FAN ON mode. The system fan should start within a few seconds.
- 8 Press **FAN** until the thermostat is in FAN AUTO mode. Allow the system fan to turn off.

Limited Warranty

When installed by a professional contractor, this product is backed by a 5 year limited warranty. Limitations apply. For limitations, terms and conditions, you may obtain a full copy of this warranty:

- Visit us online: www.braeburnonline.com/warranty
- Phone us: 866.268.5599
- Write us: Braeburn Systems LLC
2215 Cornell Avenue
Montgomery, IL 60538



Store this manual for future reference.

Braeburn

Braeburn Systems LLC
2215 Cornell Avenue • Montgomery, IL 60538
Technical Assistance: www.braeburnonline.com
Call us toll-free: 866-268-5599 (U.S.)
630-844-1968 (Outside the U.S.)