Installation Instruction

5678000B


GR20 ✔
Pump Disconnect

For use with LSG200 and LSGX200 Series Grinder pumps only.



Features:

- Heavy duty cast iron construction
- Accommodates single 1-1/4" rail and discharge pipe
- Auto alignment feature
- Upper rail support bracket
- Includes grommets

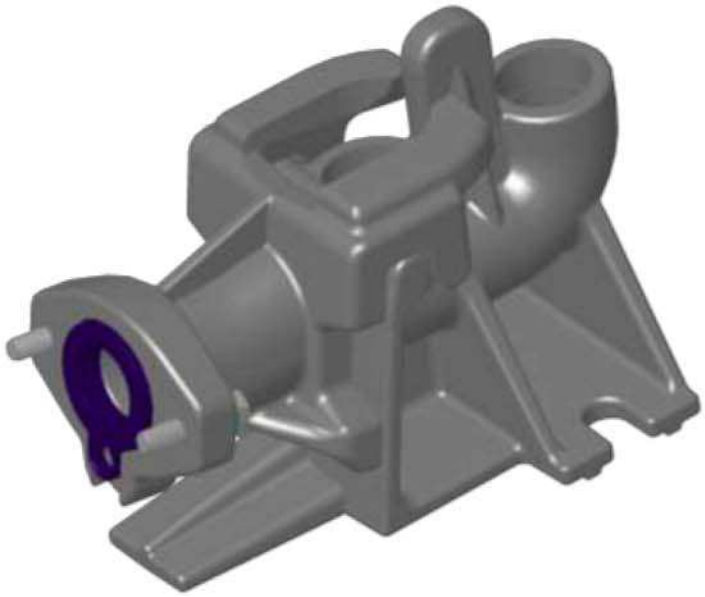

IMPORTANT:

Prior to installation, record Model, Serial and Code number from pump nameplate for future reference.

MODEL _____

SERIAL _____

CODE _____


7000 Apple Tree Avenue
Bergen, NY 14416
Phone: (800) 543-2550
Fax: (585) 494-1839
www.libertypumps.com

©Copyright 2010 Liberty Pumps Inc. All rights reserved

IMPORTANT: The LSG200 and LSGX200 series grinder pumps and systems are supplied with their own separate Installation/Operation/Maintenance manuals. Ensure that you have received these manuals, and that you read and understand them prior to installing this unit. Your familiarity with the grinder pump / system manual and the control panel manual is critical. This instruction sheet gives a brief overview of the GR20 only. If you have any questions, call customer service at (800) 543-2550.

GR20 Assembly

The GR20 quick disconnect assembly provided with your grinder package system is designed to allow easy installation and removal of the pump. When installed correctly it will seal and provide a means to lift the pump without disconnecting any of the discharge piping. Please ensure that installation is done as per the diagrams below.

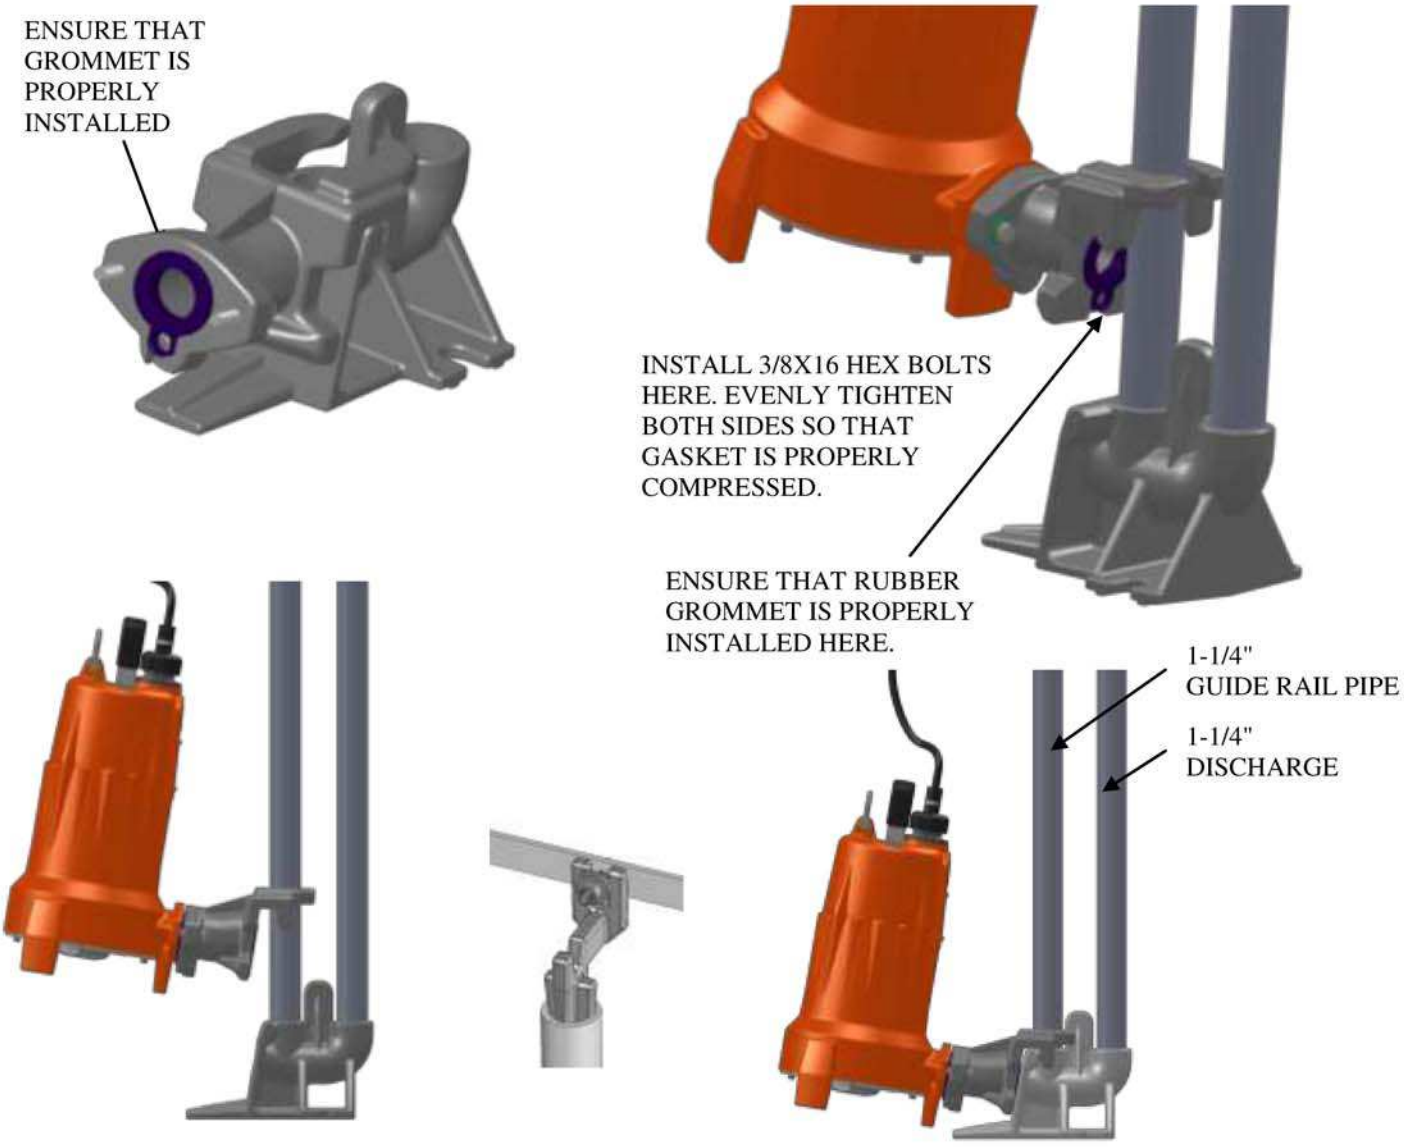

DISCONNECTED POSITION **PIPE GUIDE ASSEMBLY** **OPERATING POSITION**

*A heavy guide rail pipe of Galvanized or Stainless Steel is recommended.

©Copyright 2010 Liberty Pumps Inc. All rights reserved