PFAAV160

Air Admittance Valves

Product Features

- Rated 160 DFU's for venting DWV 4" and smaller
- Unique technology opens at -0.01 psi and seals at 0 psi and above
- Screening on air inlets to guard the seal
- Protective rubber sleeve provides grip for installation and keeps valve free from debris
- 100% functionally tested at $^1/_4$" H_2O and 30" H_2O ensuring trouble free performance
- Limited Lifetime Warranty



Model Numbers

PFAAV160	160 DFU AAV with 2 x 3 PVC Adapter
PFAAV160A	160 DFU AAV with 2 x 3 ABS Adapter

General Specifications

An air admittance valve shall be acceptable as a vent termination for any individual vent, common vent, circuit vent, loop vent, island fixture vent, vent stack or stack vent that is provided to prevent siphonage of a fixture trap. An air admittance valve is used as an alternative to secondary venting through the roof open to atmosphere.

The purpose of an air admittance valve is to provide a method of allowing air to enter the plumbing drainage system without the use of a vent extended to open air and to prevent sewer gases from escaping into a building. An air admittance valve is a one way valve designed to allow air to enter the plumbing drainage system when negative pressures develop in the piping system. The device shall close by gravity and seal the vent terminal at zero differential pressure (no flow conditions) and under positive internal pressures.

Product Location Specifications

- Should be located a minimum of 4" above the weir of fixture trap for single fixture and branch venting and 6" above flood level of highest fixture for stack venting
- Each valve should be installed in an accessible location

Installation

- Read installation instructions prior to use of this product. Always consult local plumbing codes prior to installing an AAV. Individual, branch and circuit vents are permitted to terminate with a connection to an AAV.
- The AAV will only vent fixtures that are on the same floor and connect to a horizontal branch drain. The horizontal branch drain shall connect to the drainage stack a maximum of four branch intervals from the top of the stack. AAV should be located within the maximum developed length permitted for the vent. AAV must be located a minimum of 4 inches above the horizontal board and 6 inches any insulation material and within 15 degrees of vertical.
- Every structure in which plumbing is installed shall have at least one primary stack vent. The stack vent should run as directly as possible from the building drain through to the open air.
- Apply pipe joint compound or thread seal tape to the male threads of the valve. **Remove protective rubber sleeve after installation.**
- Valves are intended for installation in the confines of a structure, cannot be exposed to outside elements and are intended for use between -40^0 F and 150^0 F. AAVs must be accessible for inspection and service.

ASSE 1050 & ANSI/ASSE 1051 A & B

NSF DWV

IAPMO ®

ES ESR-1664

Distributed Exclusively by Ferguson and Wolseley Canada

©2011 Ferguson Enterprises, Inc. All Rights Reserved

PFAAV160

Air Admittance Valves

Product Specification

PART	MATERIALS
A	PVC valve w unique seal technology
B	ABS or PVC Adapter

Warranty


This PROFLO product carries a limited lifetime warranty

Performance Standards

ASSE 1050 & 1051
ICC ESR - 1664
NSF Standard 14
IAPMO - classified mark
ASTM D 2665/D 2661

Code Approvals

International Plumbing Code (IPC) 2003
International Residential Code (IRC) 2003

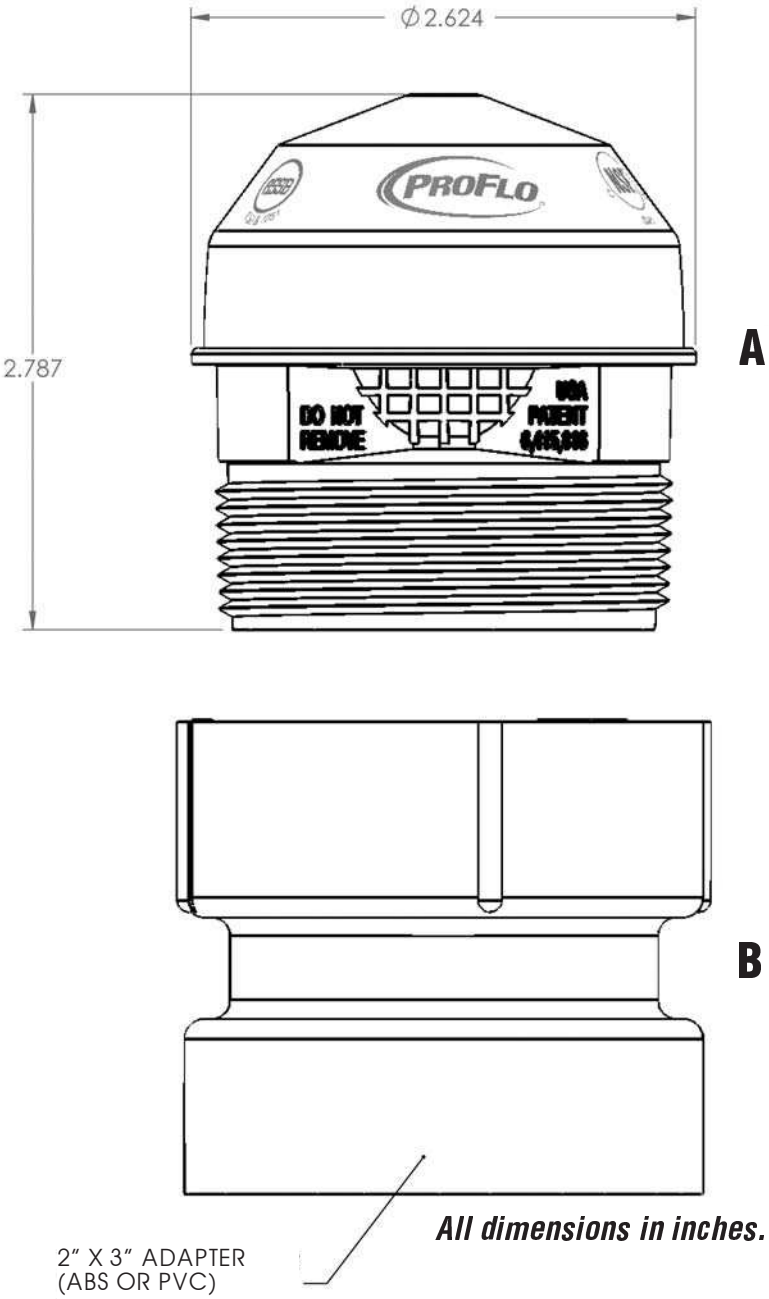

All dimensions in inches.

ASSE 1050 & ANSI/ASSE 1051 A & B

DWV

ESR-1664

Distributed Exclusively by Ferguson and Wolseley Canada

©2011 Ferguson Enterprises, Inc. All Rights Reserved

Standard Warranty

WHAT IS COVERED?

Ferguson Enterprises, Inc. “Ferguson” or the “Company” warrants its products to be free from defects in material and workmanship under normal use and service FOR A PERIOD OF ONE (1) YEAR FROM THE DATE OF INSTALLATION.

WHAT IS NOT COVERED?

The warranty set forth in paragraph 1 does not cover installation or any other labor charges and does not apply to products which have been damaged as a result of any accident, abuse, improper installation or maintenance, or modification of original plumbing product. The warranty of such products is limited to the warranty extended to Ferguson by the product manufacturer. Finally, FERGUSON SHALL NOT BE RESPONSIBLE OR LIABLE FOR ANY FAILURE OR DAMAGE TO THIS PRODUCT OR ANY COMPONENT THEREOF CAUSED BY THE USE OF ABRASIVE CLEANERS.

HOW TO OBTAIN WARRANTY SERVICE

US Customers:
The purchaser should contact their local Ferguson location, installing contractor or builder from whom the product was purchased. To find your nearest Ferguson location please visit www.ferguson.com and enter in your address into the Find a Location field.

Canadian Customers:
The purchaser should contact their local Wolseley Canada location, installing contractor or builder from whom the product was purchased. To find your nearest Wolseley Canada location please visit www.wolseleyinc.ca, then click on Find a Location and enter in your address into the location field.

LIMITATIONS OF IMPLIED WARRANTY AND DISCLAIMER OF CONSEQUENTIAL OR INCIDENTAL DAMAGES

FERGUSON DISCLAIMS ANY LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES AND DISCLAIMS ALL EXPRESS OR IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, AS SET FORTH ABOVE. IMPLIED WARRANTIES OF THE PRODUCTS AND PRODUCT COMPONENTS SET FORTH IN PARAGRAPH 1 ABOVE ARE LIMITED TO THE DURATIONS OF THE RESPECTIVE WARRANTY. Some states do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

PROFLO is a registered trademark of Ferguson Enterprises, Inc.

© 2008 Wolseley