American Standard

Monterrey Kitchen Faucets

SINGLE CONTROL KITCHEN FAUCET WITH REMOTE VALVE

INSTALLATION INSTRUCTIONS

6114.300
6114.301
6114.380
6114.381

✓ 6114380002



Thank you for selecting American-Standard... the benchmark of fine quality for over 100 years.

To ensure that your installation proceeds smoothly-- please read these instructions carefully before you begin.

Certified to comply with ANSI A112.18.1M

M965143 REV.1.2

RECOMMENDED TOOLS



Adjustable Wrench | Regular Screwdriver | Phillips Screwdriver | Channel Locks

1 INSTALL FAUCET

CAUTION Turn off water at main supply.

- Insert SEAL WASHER **(1)** into groove in base of faucet. Insert supply HOSES **(2)** and SHANK **(3)** through sink or mounting surface. **Figure 1.**
- Assemble RUBBER WASHER **(4)**, BRASS WASHER **(5)** and threaded LOCKNUT **(6)** onto SHANK **(3)** from underside of sink or mounting surface. Hand tighten LOCKNUT **(6)**. Check that rotation of HANDLE **(7)** from HOT to COLD is centered.
- Use a screwdriver to tighten SCREWS **(8)** on LOCKNUT **(6)**. Work your way around LOCKNUT **(6)**, tightening the SCREWS **(8)** slightly each time until all are snug to ensure even pressure.
- **Install SPRAY HOLDER: (6114.301/.381)** Insert SPRAY HOLDER **(9)** into ESCUTCHEON **(10).** Insert SEAL **(11)** into underside of ESCUTCHEON **(10)**. From underside of sink or mounting surface thread LOCKNUT **(12)** onto shank of SPRAY HOLDER **(9)** and tighten.
- **Install SPOUT ASSEMBLY:** Insert SEAL WASHER **(13)** into groove in base of spout. Insert SPOUT SHANK **(14)** through sink or mounting surface. **Figure 2.**
- Assemble RUBBER WASHER **(15)**, BRASS WASHER **(16)**, and threaded LOCKNUT **(17)** onto SHANK **(14)** from underside of sink or mounting surface. Align SPOUT **(18, 18a)** and tighten LOCKNUT **(17)**.

Figure 1



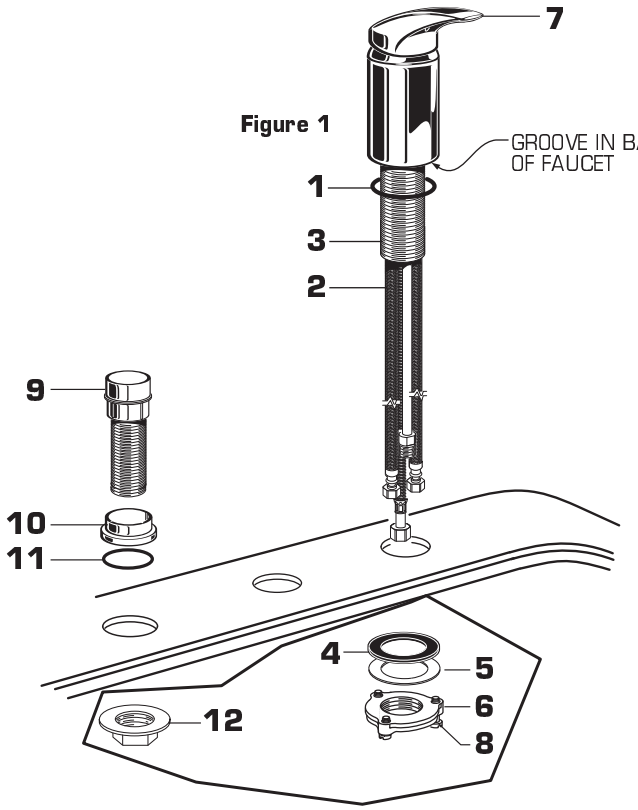


Figure 2

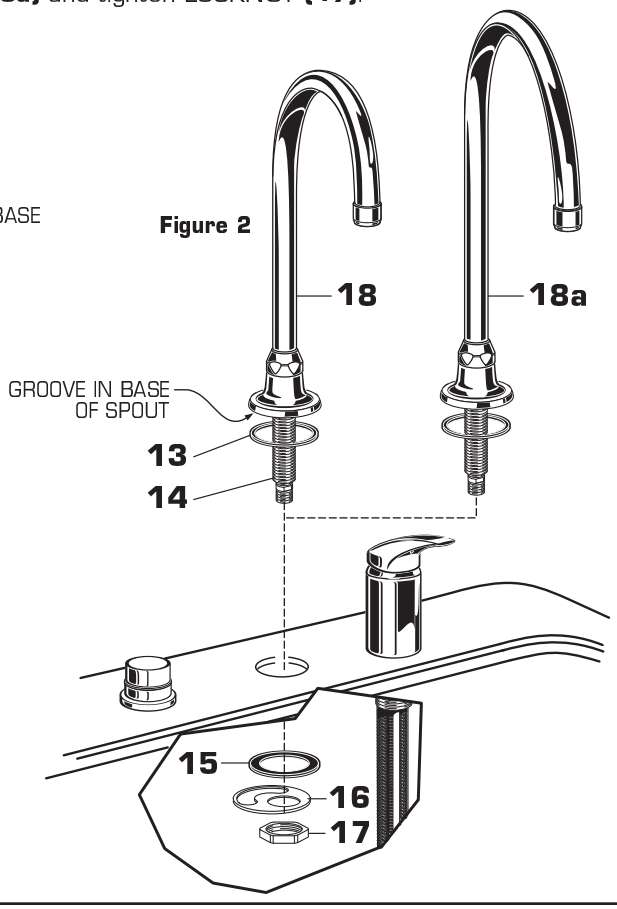


2 MAKE WATER SUPPLY CONNECTIONS

- Connect FLEXIBLE SUPPLIES **(1)** (1/2" X 3/8") to wall supplies. Connection on fitting supplies are 3/8" compression. Connect left supply (Marked with a Red Stripe) to Hot and right supply to the Cold wall supply. Use adjustable wrench to tighten connections. Do not over tighten.
- ***Note:** If additional supply length is required, installer must purchase those parts separately.*
  ***Important:** If SUPPLY HOSES (1) are too long, loop as illustrated to avoid kinking.*

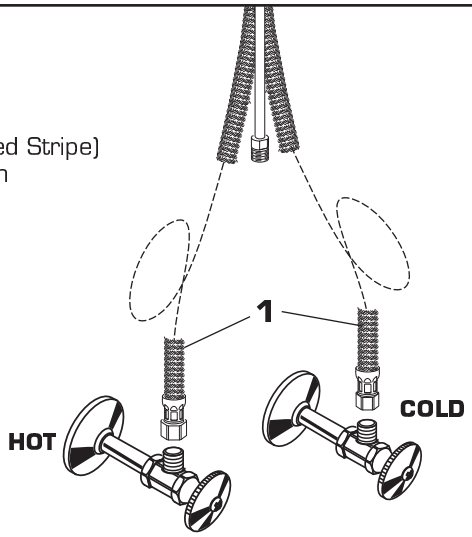

3 CONNECT SPRAY HOSE AND SPOUT HOSE; (FITTING WITH SPRAY 6114.301/.381)

- Feed HAND SPRAY HOSE **(1)** through SPRAY HOLDER **(2)**.
- Install SEAL **(3)** into SPRAY COUPLING NUT **(4)**.
- Use wrenches to tighten COUPLING NUT **(4)** on SPRAY HOSE **(1)** to SIDE SPRAY CONNECTION **(5)** on fitting.
- Make sure SEAL WASHER **(6)** is installed in COUPLING NUT **(7)**. Connect threaded end of HOSE **(7)** to SPOUT HOSE SHANK **(8)**. Use wrench to tighten.

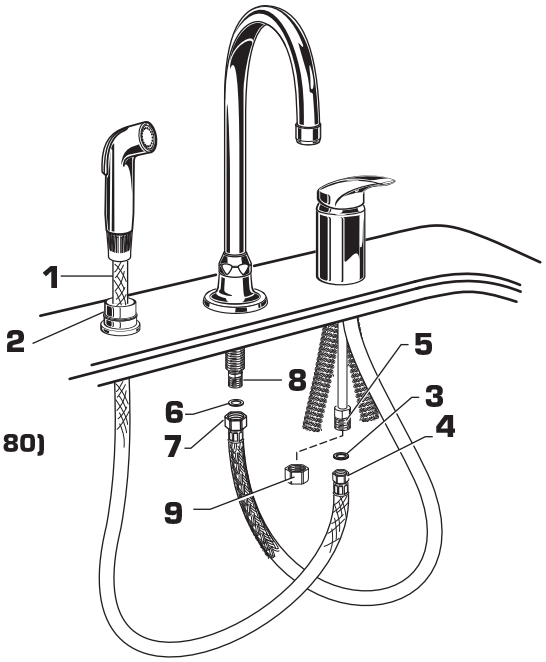


3a CONNECT SPOUT HOSE; (FITTING LESS SPRAY 6114.300/.380)

- Make sure SEAL WASHER **(6)** is installed in COUPLING NUT **(7)**. Connect threaded end of HOSE **(7)** to SPOUT HOSE SHANK **(8)**. Use wrench to tighten.
- Install PIPE CAP **(9)** onto SIDE SPRAY CONNECTION **(5)** on fitting. Use wrench to tighten.

4 CHECK CONNECTIONS FOR LEAKS.


- Move HANDLE **(1)** down into "off" position.
- Turn on water supplies and check connections for leaks. ➡

CHECK CONNECTIONS FOR LEAKS ➡

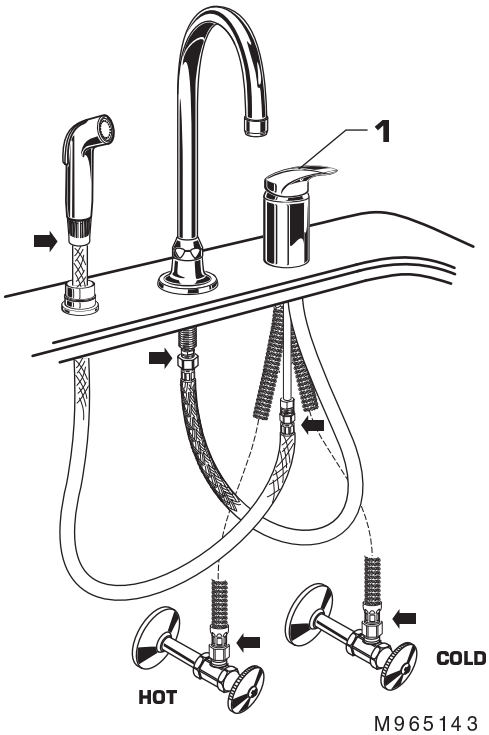


5 TEST INSTALLED FAUCET

- Move HANDLE **(1)** down into "off" position.
- Remove AERATOR **(2)**.
- Operate HANDLE **(1)** up and down, in COLD and HOT positions, to flush water lines thoroughly.
- Replace AERATOR **(2)**.
- With HANDLE **(1)** down in "off" position, pull HAND SPRAY **(3)** from holder and direct SPRAY END **(3)** into sink.
- With faucet on push BUTTON **(4)** to activate HAND SPRAY **(3)**.
- Release BUTTON **(4)** to stop spray and return HAND SPRAY **(3)** to holder.

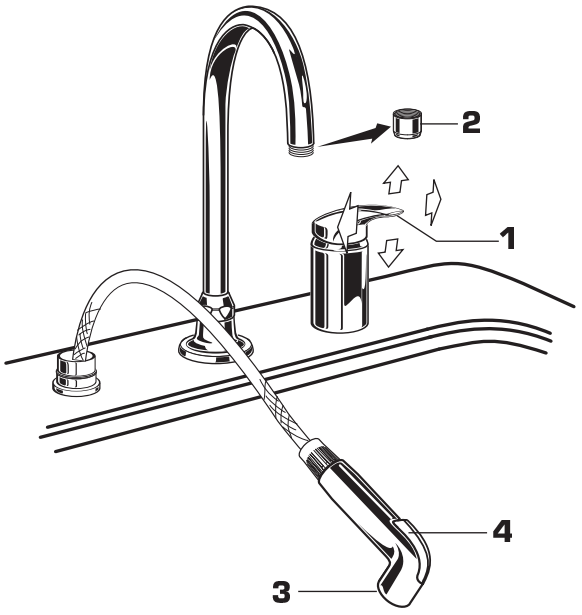


6 SERVICE

- If faucet drips, operate HANDLE several times from "off" to "on." Do not apply excessive force.
- **Clogged CARTRIDGE outlets or inlets may cause reduced flow.** To clean, first turn off water supply then:
  - Remove INDEX BUTTON **(1)**, loosen HANDLE SCREW **(2)** and remove HANDLE **(3)**.
  - Unthread ESCUTCHEON CAP **(4)**. Unthread three MOUNTING SCREWS **(5)**.
  - Lift CARTRIDGE **(6)** off MANIFOLD **(7)** and remove CARTRIDGE SEALS **(8)**.
  - Clean MANIFOLD **(7)**, CARTRIDGE **(6)** ports and SEALS **(8)**.
  - Place SEALS **(8)** into CARTRIDGE PORTS **(6a)**.
  - Place CARTRIDGE **(6)** onto MANIFOLD **(7)** and tighten MOUNTING SCREWS **(5)** alternately.
  - Replace ESCUTCHEON CAP **(4)**, HANDLE **(3)**, tighten HANDLE SCREW **(1)** and install INDEX BUTTON **(2)**.
  - Test fitting.

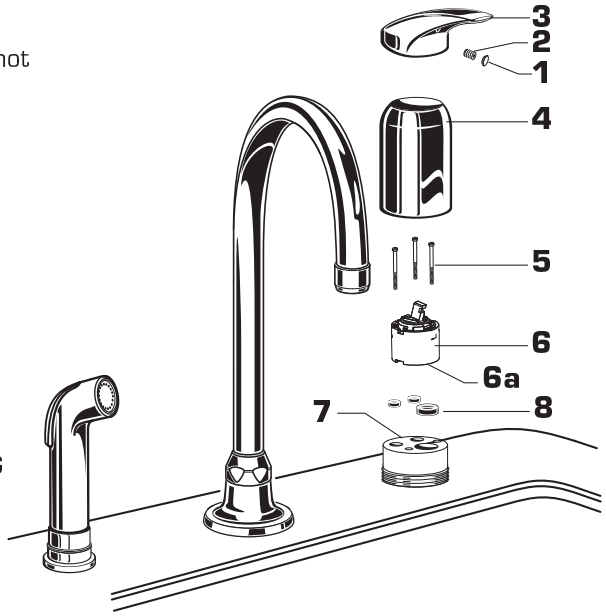

7 TO CHANGE SPOUT FROM RIDGID TO FULL SWIVEL SPOUT:

- Unscrew SPOUT NUT **(1)** and remove SPOUT **(2)**.
- Take SPOUT CLIP **(3)** off SPOUT **(2)** and remove RUBBER RING **(4)**.
- Replace RUBBER RING **(4)** with seperate PLASTIC RING **(5)** packed with faucet.
- Install SPOUT CLIP **(3)** on SPOUT **(2)**.
- Reassemble SPOUT **(2)** to SPOUT BASE **(6)**. Tighten SPOUT NUT **(1)**.

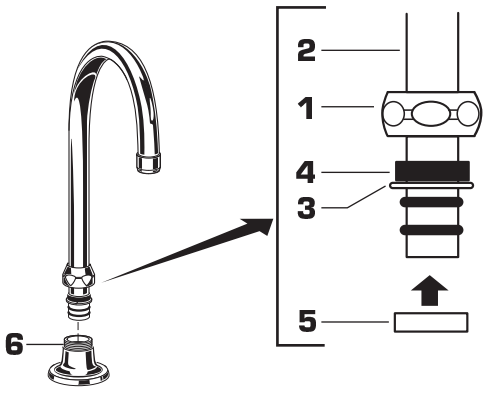

8 CARE INSTRUCTIONS:

DO: SIMPLY RINSE THE PRODUCT CLEAN WITH CLEAR WATER. DRY WITH A SOFT COTTON FLANNEL CLOTH.

DO NOT: DO NOT CLEAN THE PRODUCT WITH SOAPS, ACID, POLISH, ABRASIVES, HARSH CLEANERS, OR A CLOTH WITH A COARSE SURFACE.

AS AMERICA, INC. FAUCET
LIMITED LIFETIME FUNCTION AND FINISH WARRANTY

FOR RESIDENTIAL INSTALLATIONS: AS America, Inc. ("American Standard") warrants this product to be free from defects in materials or workmanship for as long as the original consumer purchaser owns this product. Proof of purchase (original sales receipt) from the original consumer purchaser must be made available to American Standard for all warranty claims. This warranty is non transferable. It does not apply in the event of product damage due to the use of other than genuine American Standard replacement parts, installation error, abuse, misuse or improper care and maintenance (whether performed by a plumber, contractor, service provider or member of the purchaser's household). The warranty excludes damage due to aggressive air or water conditions, or harsh or abrasive cleaners and/or materials.

FOR COMMERCIAL INSTALLATIONS: For all industrial, commercial and business usage the warranty period is five years, from date of purchase and except for duration, all other aforementioned warranty terms apply. For both Residential and Commercial warranties, batteries are not included in the warranty.

American Standard will provide free of charge, at it's sole option, replacement part(s) or product (or if no longer available, a comparable product) to replace those which have proven defective in materials or workmanship.

This warranty does not cover labor charges incurred and/or damage sustained in installation, repair or replacement, nor incidental or consequential damages. This warranty is applicable only to American Standard faucets manufactured after June 1, 1996 and installed in the United States, Mexico and/or Canada.

THIS WARRANTY IS EXCLUSIVELY IN LIEU OF ALL OTHER WARRANTIES, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

This warranty gives the original consumer purchaser of an American Standard faucet specific legal rights which may vary from state to state or from province to province. In some states or provinces the exclusion or limitation of incidental or consequential damages is not allowed, so those exclusions may not apply to you.

For service under these warranties, it is suggested that a claim be made through the contractor or dealer from or through whom the product was purchased, or that a service request (including a description of the product model and of the defect) be sent to the following address:

In the United States:
American Standard Brands
P.O. Box 6820
Piscataway, New Jersey 08855
Attention: Director of Consumer Affairs

For residents of the United States, warranty information may also be obtained by calling the following toll free number: (800) 442-1902

www.americanstandard.com

In Canada:
AS Canada ULC
5900 Avebury Rd.
Mississauga, Ontario
Canada L5R 3M3

Toll Free: (800) 387-0369

www.americanstandard.ca

In Mexico:
American Standard B&K Mexico
S. de R.L. de C.V.
Via Morelos #330
Col. Santa Clara
Ecatepec 55540 Edo. Mexico

Toll Free: 01-800-839-1200

www.americanstandard.com.mx