AIR BAG 8

9535-08, 9535-08L, 9535-08DC, 9535-08LDC

AIR BAG 12

9535-12, 9535-12L, 9535-12DC, 9535-12LDC

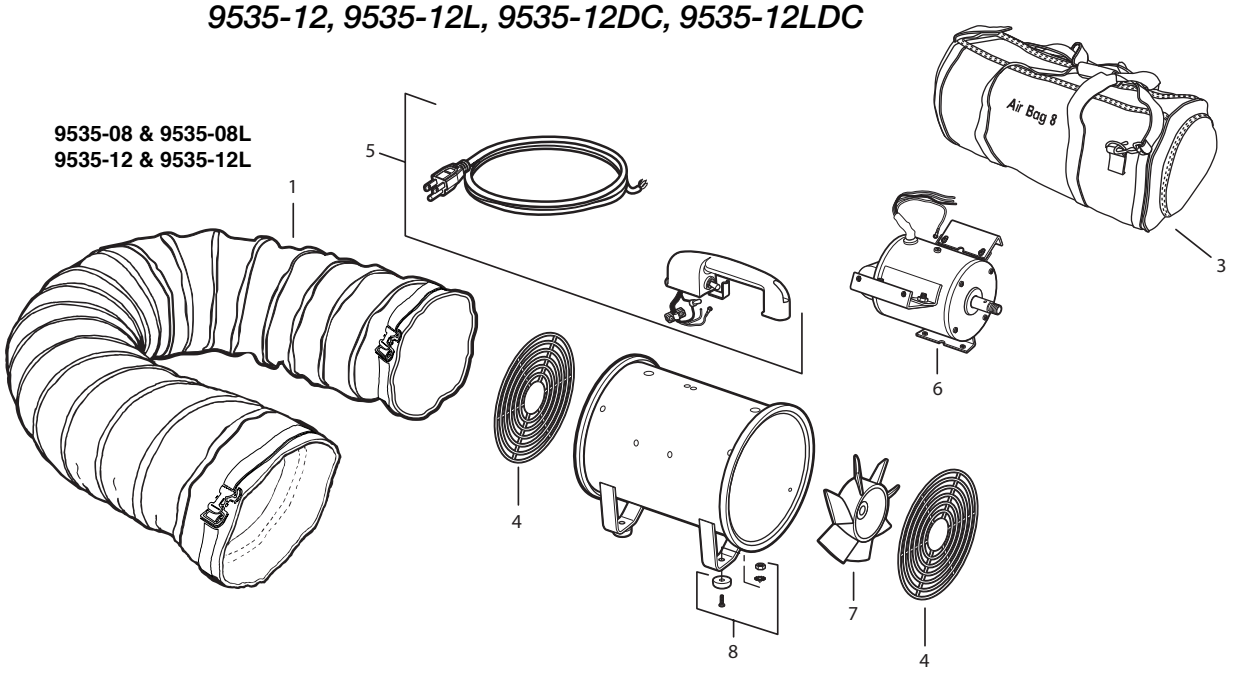

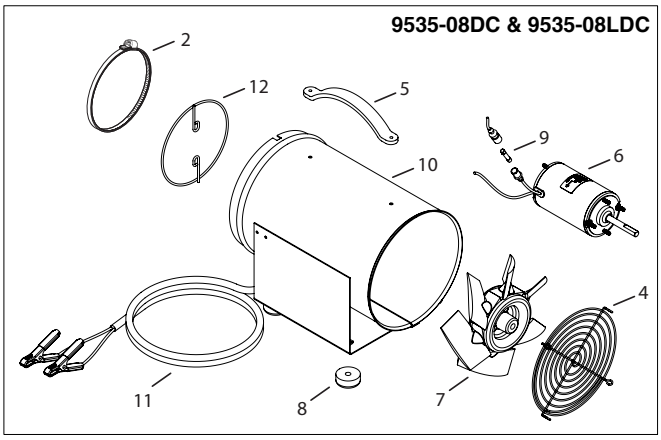

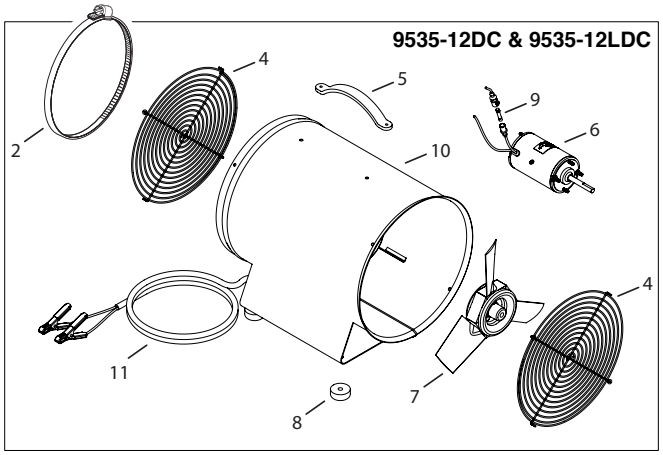

Key	Part #	Description
	9535-08	**Air Bag 8 (15' Ducting)**
	9535-08L	**Air Bag 8 (25' Ducting)**
	9535-08DC	**Air Bag 8, DC (15' Ducting)**
	9535-08LDC	**Air Bag 8, DC (25' Ducting)**
	9535-12	**Air Bag 12 (15' Ducting)**
	9535-12L	**Air Bag 12 (25' Ducting)**
	9535-12DC	**Air Bag 12, DC (15' Ducting)**
	9535-12LDC	**Air Bag 12, DC (25' Ducting)**
1	9535-08D	15' Ducting (Air Bag 8)
	9535-12D	15' Ducting (Air Bag 12)
	9535-08DL	25' Ducting (Air Bag 8)
	9535-12DL	25' Ducting (Air Bag 12)
2	9514-01B	Duct Clamp (Air Bag 8 DC/LDC)
	9535-12CP	Duct Clamp (Air Bag 12 DC/LDC)
3	9535-08C	Blower Bag (Air Bag 8)
	9535-12C	Blower Bag (Air Bag 12)

Key	Part #	Description
4	9535-08G	Grill (Air Bag 8)
	9535-12G	Grill (Air Bag 12)
	9534-02	Grill (Air Bag 8DC/LDC)
	9509-02	Grill (Air Bag 12DC/LDC)
5	9535-08H	Handle w/ Cord (Switch and screws included) (Air Bag 8)
	9535-12H	Handle w/ Cord (Switch and screws included) (Air Bag 12)
	9513-07	Handle (Air Bag 8DC/LDC & Air Bag 12DC/LDC)
6	9535-08M	Motor (Air Bag 8)
	9535-12M	Motor (Air Bag 12)
	9506-10	Motor (Air Bag 8DC/LDC & Air Bag 12DC/LDC)
7	9535-08E	Fan (Air Bag 8)
	9535-12E	Fan (Air Bag 12)
	9534-05	Fan (Air Bag 8DC/LDC)
	9509-06	Fan (Air Bag 12DC/LDC)

Key	Part #	Description
8	9535-08F	Rubber Feet, Set of 4 (Air Bag 8)
	9535-12F	Rubber Feet, Set of 4 (Air Bag 12)
	9505-06	Rubber Feet, Set of 4 (Air Bag 8DC/LDC & Air Bag 12DC/LDC)
9	9506-11	Fuse, 30 Amp (Air Bag 8DC/LDC & Air Bag 12DC/LDC)
10	9534-04	Chassis (Air Bag 8DC/LDC)
	9509-05	Chassis (Air Bag 12DC/LDC)
11	9506-40	Cord w/ Battery Clamps (Air Bag 8 DC/LDC & Air Bag 12DC/LDC)
12	9513-09	Motor Clamp (Air Bag 8DC/LDC)