SPEAKMAN COMPANY

SC-5811-RCP Installation, Maintenance & Operation Instructions

COMMANDER®


CAST BRASS SERVICE SINK FITTING

DESCRIPTION

Speakman rough chrome plated cast brass COMMANDER service sink with PERFECT® valves. ¼ turn ceramic cartridges covered by a 25 year Silver warranty. Integral stops. Vandal-resistant four arm handles with color coded indexes. Cast brass nozzle with ¾" hose thread, pail hook and top brace. Brass vacuum breaker. Brass top brace assembly with wall flange and mounting screws. Distance from finished wall to nozzle outlet is 9". 8" centers with +/- 1/8" adjustment. Adjustable threaded wall flanges. Vandal-resistant standard. ½" NPTF inlets. Meets CSA and ASSE-1001 standards.

SPECIFICATIONS

OUTLET SUPPLY: ¾" NH MALE
INLET SUPPLIES: ½" NPT FEMALE
SHIPPING WEIGHT: 6.58 LBS.

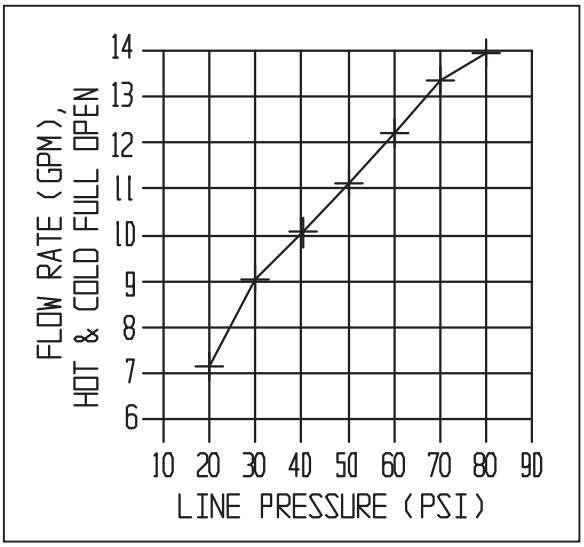

OPTIONS

LEV – Lever handle	5'H – 5' Hose with Hook
LVB – Less Vacuum Breaker with Plain End Spout	CK - Check Valve
4WH – 4" Wrist Blade Handle	
6WH – 6" Wrist Blade Handle	

INSTALLATION

NOTE: Shut off water supplies. Supply lines must have ½" NPT male threaded ends.
Screw down trim flanges onto swivel assemblies. Apply pipe sealant to threads of supply lines.
NOTE: Supply line must stick out of sink finished wall 3/8" (± 3/16"), with both being the same distance.
Screw swivel assemblies onto supply lines. Using a 3/8" square wrench, tighten and position assemblies so they are the same distance apart as the valve body inlets.
NOTE: Swivel assemblies are machined off center for adjustment.
Screw flanges up against sink or wall. Connect brace assembly to nozzle with roll pin provided. Placing rubber washers inside coupling nuts, position fitting up to swivel assemblies and tighten nuts with wrench.

NOTE: Finished wall must be supported where brace flange mounts.
Lift brace assembly up against finished wall. Center with nozzle and mark location of holes in brace flange. Drill starter holes for mounting screws. Screw flange to wall using two wood screws provided. Turn water supplies on and check supply line connections for leaks.


OPERATION

Simply rotate the handles ¼ turn maximum to operate the sink fitting.

MAINTENANCE (CARE and CLEANING)

Valves are washerless and require no routine maintenance. Your SPEAKMAN Commander sink fitting can be cleaned by using mild soap and warm water. Dry immediately with a soft, clean cloth for best results.

ROUGH-IN MEASUREMENTS

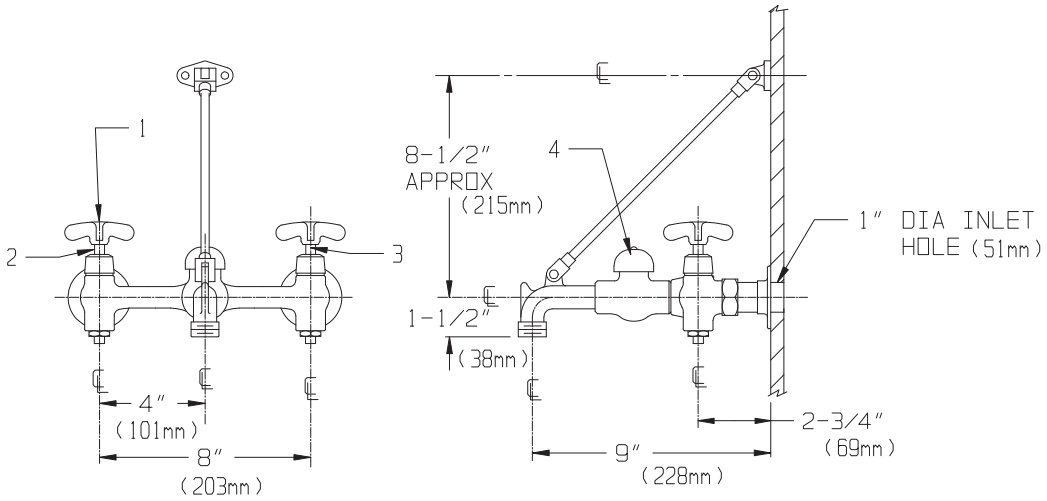

NOTES:

1. INLETS ARE 1/2" NPT FEMALE.
2. ALL DIMENSIONS ARE IN INCHES (MILLIMETERS) UNLESS OTHERWISE SPECIFIED AND ARE SUBJECT TO CHANGE WITHOUT NOTICE.

REPAIR / REPLACEMENT PARTS

ITEM NO.	PART OR GROUP NUMBER	DESCRIPTION
1	RPG04-0323-PC	4 ARM HANDLE REPAIR GROUP W/ SCREW AND INDEX BUTTONS
2	RPG05-0532	PERFECT VALVE GROUP (RED) W/ TRIM SLEEVE AND SCREW
3	RPG05-0533	PERFECT VALVE GROUP (BLUE) W/ TRIM SLEEVE AND SCREW
4	RPG05-0520	VACUUM BREAKER REPAIR GROUP W/ CHECK ASSY, HUB, CAP SCREW, AND O-RING

SPEAKMAN®
PO Box 191 Wilmington, DE 19899 Phone: 800-537-2107 Fax: 800-977-2747
Visit us on the web at www.speakmancompany.com

PLUMBING REPAIR PARTS

SPEAKMAN®
Absolutely the best.
400 ANCHOR MILL ROAD | NEW CASTLE, DE 19720
www.speakmancompany.com
PHONE: 800-537-2107 | FAX: 800-977-2747

SERVICE SINK FAUCETS

Part #	Product Description
RPG02-0141-PC	Centerset or service sink collar for stem
RPG03-0361-RCP	Integral stop
RPG04-0316-PC	4" Wrist blade repair kit
RPG04-0317-PC	6" Wrist blade repair kit
RPG04-0320-PC	Lever handle kit - zinc
RPG04-0323-PC	4 Arm cross handle kit - zinc
RPG05-0520	Vacuum breaker hub repair kit
RPG05-0532	Short perfect valve - red - CC
RPG05-0533	Short perfect valve - blue - CCC
RPG41-0285	Hot & cold indexes plus screws
RPG45-0015	Perfect valve seal kit
G05-0752-RCP-P	Swivel connections for service sinks
G20-1492-PC	Complete vacuum break - PC finish
G20-1492-RCP	Complete vacuum break - RCP finish
G47-0035-PC-P-Z	SC-5811 upper brace and flange pin assembly

For Products: SC-574X | SC-5811 | SC-5812 | SC-5856

IMAGES


RPG02-0141-PC


RPG03-0361-RCP


RPG04-0316-PC


RPG04-0317-PC


RPG04-0320-PC


RPG04-0323-PC


RPG05-0520


RPG05-0532


RPG05-0533


RPG41-0285


RPG45-0015


G05-0752-RCP-P


G20-1492-PC


G20-1492-RCP


G47-0035-PC-P-Z