


INSTRUCTIONS FOR TANK TO BOWL GASKET

1. Slip tank to bowl gasket onto flush valve threads.
2. Place rubber washer on bolt and insert through the hole in tank.
3. Place a metal washer and hex nut onto bolt and hand tighten.
4. Put tank onto bowl and then slip rubber washer and metal washer onto bolt with wing nut. Finger tighten wing nut. Repeat for all bolts, keeping tank level.

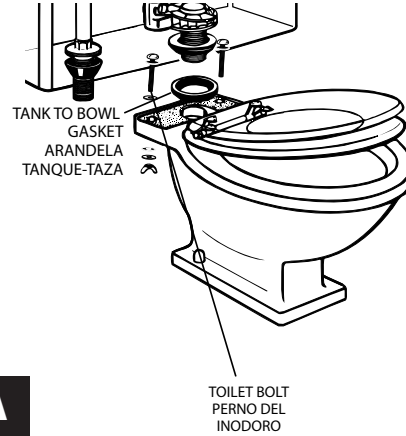

INSTRUCCIONES PARA EMPAQUETADURA DEL TANQUE A LA TAZA

1. Deslice la junta del tanque a la taza en las roscas de la válvula de descarga.
2. Coloque la arandela de goma en el perno e insértelo a través del orificio del tanque.
3. Coloque una arandela metálica y una tuerca hexagonal en el perno y apriételo a mano.
4. Coloque el tanque sobre la taza y luego deslice la arandela de goma y la arandela metálica sobre el perno con la tuerca de mariposa. Apriete con los dedos la tuerca de mariposa. Repita para todos los pernos, manteniendo el tanque nivelado

