


NFP2403 Figure Number

**INSTALLATION INSTRUCTIONS**

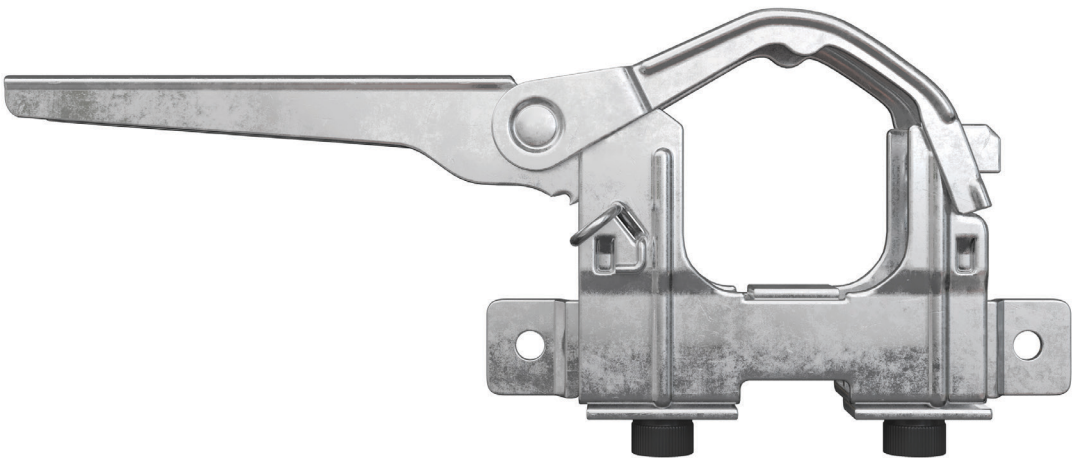

**⚠ WARNING**

- You must read and understand all instructions and warnings before attempting to install any Specflex® sprinkler drop system components.
- Failure to follow these instructions can lead to improper operation, resulting in serious injury, death or property damage.
- We recommend wearing safety glasses or goggles, a hard hat and shoes with foot protection during installation.

**REQUIRED SYSTEM PARTS**

Flexible Hose (Braided)  
NFP2403 Bracket

**REQUIRED TOOLS**

Pipe Wrench, Screwdriver  
PTFE Tape

# SPECFLEX®

## BRACKET FOR SIDEWALL/INSTITUTIONAL APPLICATIONS




NFP2403 Figure Number

### INSTALLATION INSTRUCTIONS


1. Inspect the Specflex® sprinkler drop system components for any sign of physical damage. Make sure all components are included and in the proper order.




2. Disconnect the inlet nipple and outlet reducer from the flexible hose and check that each sealing gasket is in place properly. Reconnect outlet reducer to the flexible hose.

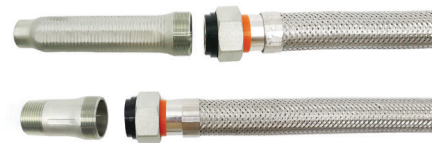

3. Ensure that both end threads are clean without any damage. Apply PTFE tape to the inlet nipple threads. Use a pipe wrench to connect the inlet nipple to the branch line.

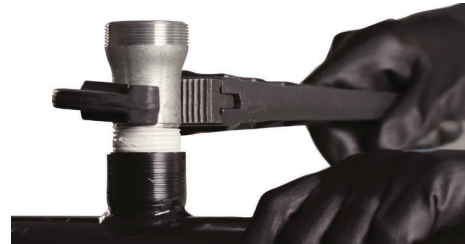

4. Use a pipe wrench to connect the flexible hose to the inlet nipple. Torque range should be a minimum of 50 to a maximum of 58 ft-lbs.

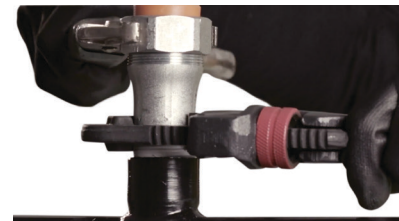


**DO NOT USE PTFE TAPE ON THE INLET NIPPLE  
THREAD TO CONNECT TO THE FLEXIBLE HOSE.**


NFP2403 Figure Number

## INSTALLATION INSTRUCTIONS


5. Drill a hole based on the sprinkler head manufacturer's installation instructions.

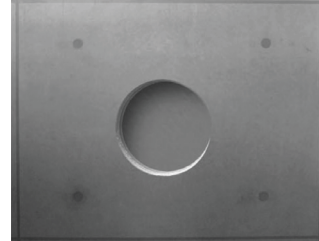

6. Align the NFP2403 bracket along the hole and secure with wedge anchor or screws on both sides until securely retained on the wall or ceiling.

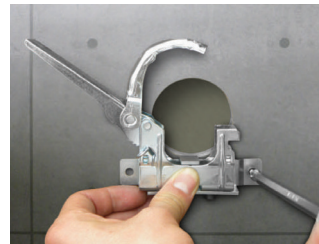

7. Press the release pin and open the bracket. Load the flexible hose at the appropriate position. Securely fasten the gate of the center bracket from right to left.

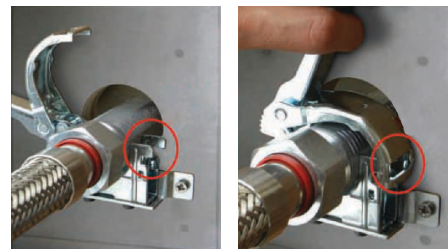

8. To secure the outlet reducer, firmly push down the lever until it clicks.



