


# "Jet Swet"<sup>TM</sup>

by Brenelle Co. LLC

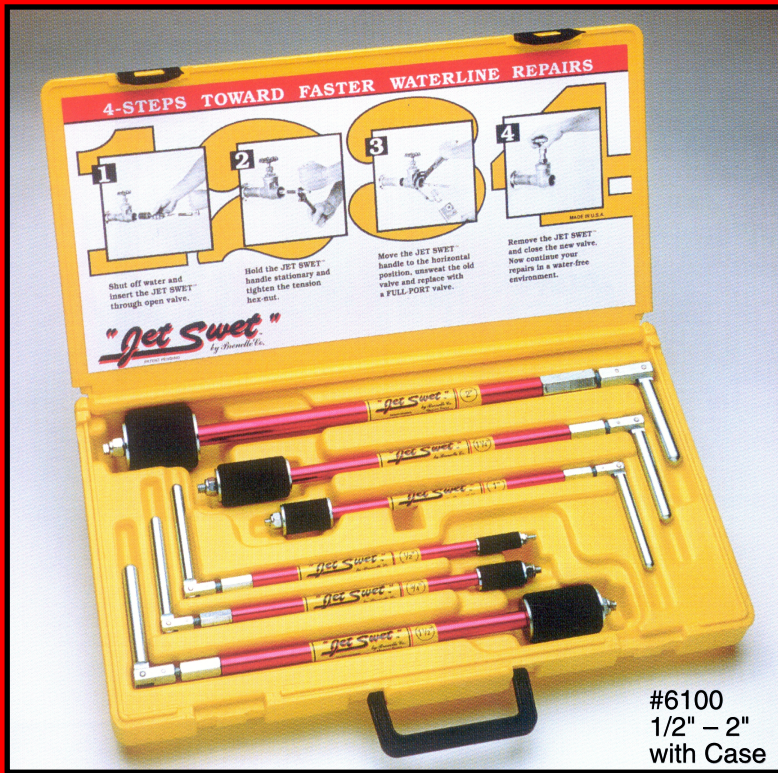

**"Solder without  
draining the  
entire water  
system!"**





Available Individually or in Kits  
Sizes 1/2" thru 4"

A FREE Video Demonstrating the

**"Jet Swet"<sup>TM</sup>**  
by Brenelle Co. LLC

is available upon request.

**THE 1ST... THE ORIGINAL... THE BEST**

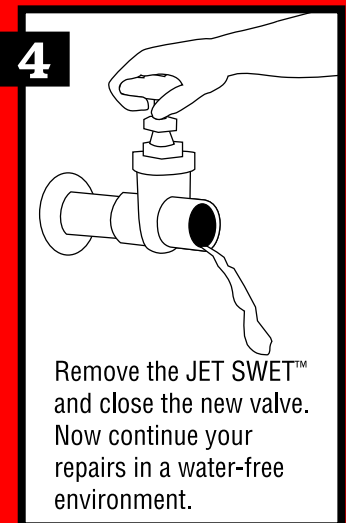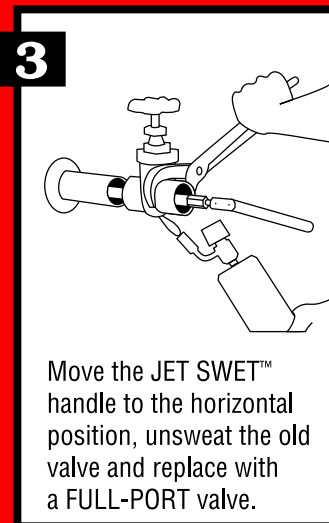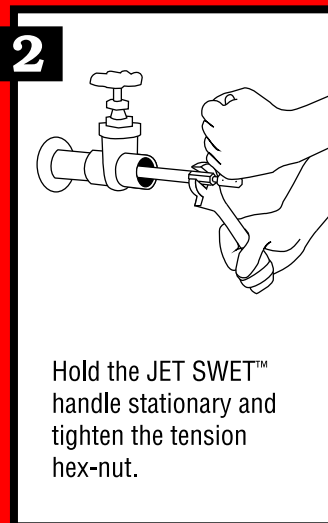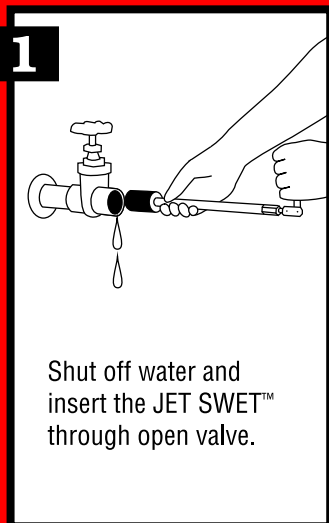

For more information call us TOLL FREE at 1-800-727-1018  
or FAX us at (702) 362-8850  
email: jetswet@brenelle.com

Copyright © 2000 **"Jet Swet"<sup>TM</sup>**  
by Brenelle Co. LLC

# JET SWET™ performs many other operations, too!

## Replace Restricted Port or Regulatory Valves

Shut off water supply. Completely cut off old valve. Insert Jet Swet™ to shut off draining water. Solder on a male adapter. Replace with any threaded valve.




## Repair PVC Pipe

The Jet Swet™ is the ideal tool for repairing PVC pipe. This technique allows the plumber to glue PVC pipe in a water-free environment. Works on Sch. 120 and Sch. 40 pipes.




## Replace 90 Degree Elbow

Cut out the elbow fitting without damaging the ends of the pipe. Insert the Jet Swet™ tool into the pipe and tighten until the water stops. Remove both halves of old 90 degree elbow. Slide a T-fitting with a FIP adapter over the Jet Swet™ and solder them onto the pipe. Remove the Jet Swet™ and plug FIP adapter.

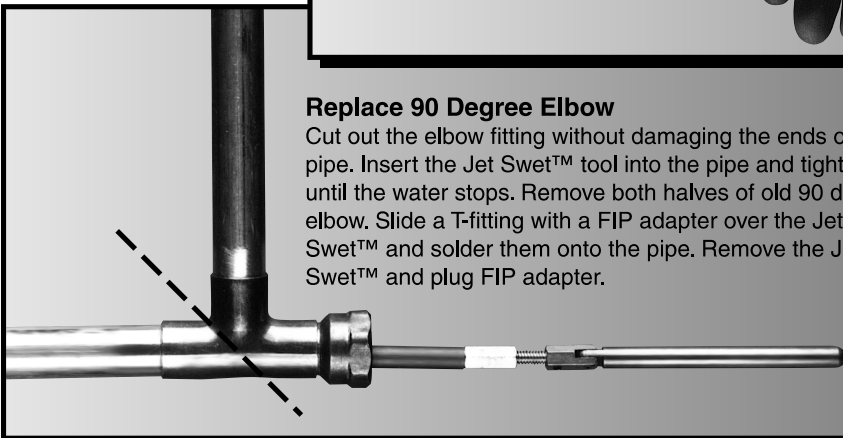

## Repair Pinhole Leak

Cut pipe through the pinhole, insert the Jet Swet™ tool and tighten until the water stops. Solder union halves onto existing line. Remove Jet Swet™ and tighten union.

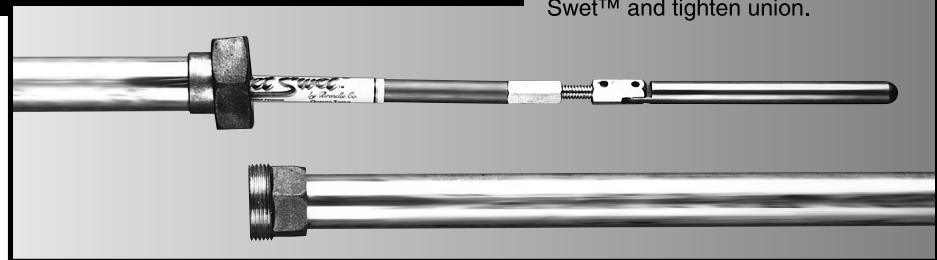

With the Jet Swet™ tool you can go into any situation and have immediate control of the water system.

The major money making benefits of owning a Jet Swet™ are:

- Doing the pipe repair as soon as you get to the job. No waiting for water to completely drain.
- Having immediate control over draining or siphoning water.
- Keep costs down so you can secure more "contract" work.
- Look more professional, no more bread.
- Never lose money on "contract" work due to uncontrollable draining water.
- Service Hotels, Motels and Apartments easier.