
ITEM NO: M90087 M80063 M80064 M80065

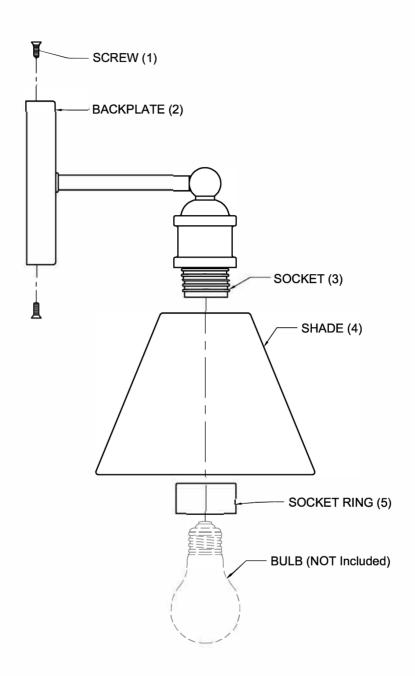

ASSEMBLY INSTRUCTIONS

- 1. Carefully unpack and identify all parts referring to illustration for parts identification.
- 2. Turn the power to the installation point OFF.
- 3. Refer to the additional installation instructions included with the product for wiring and installation.
- 4. Install the backplate (2) onto the wall using the screw (1).
- 5. Install the shade (4) onto the socket (3) and secure with the socket ring (5).
- 6. Install proper bulbs (not included) into each socket referring to the markings and/or labels on the fixture for maximum wattage.
- 7. Restore power to the installation point and retain this sheet for future reference.